R&S® FSV-K7/K7S
Firmware Options Analog Demodulation and FM Stereo
Operating Manual

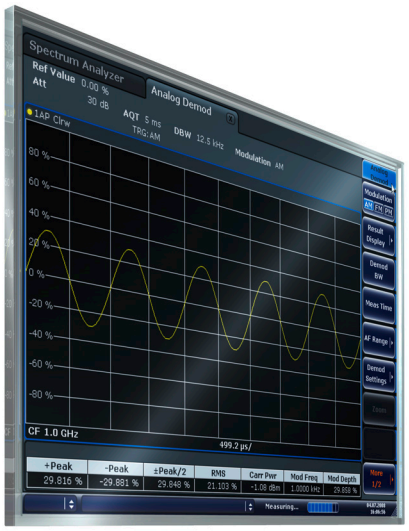

1173.0666.02 ─ 06

Test & Measurement

Operating Manual

ROHDE&SCHWARZ

This manual describes the following R&S®FSV options:

- R&S FSV-K7 (1310.8103.02)
- R&S FSV-K7S (1310.8126.02)

This manual is applicable for the following analyzer models with firmware version 2.0 and higher:

- R&S®FSV 3 (1307.9002K03)
- R&S®FSV 7 (1307.9002K07)
- R&S®FSV 13 (1307.9002K13)
- R&S®FSV 30 (1307.9002K30)
- R&S®FSV 40 (1307.9002K39)
- R&S®FSV 40 (1307.9002K40)

The firmware of the instrument makes use of several valuable open source software packages. For information, see the "Open Source Acknowledgement" on the user documentation CD-ROM (included in delivery).
Rohde & Schwarz would like to thank the open source community for their valuable contribution to embedded computing.

© 2013 Rohde & Schwarz GmbH & Co. KG
Mühldorfstr. 15, 81671 München, Germany
Phone: +49 89 41 29 - 0
Fax: +49 89 41 29 12 164
E-mail: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com
Printed in Germany – Subject to change – Data without tolerance limits is not binding.
R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.
Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®FSV is abbreviated as R&S FSV.

Contents

1 Preface....5
1.1 Documentation Overview....5
1.2 Conventions Used in the Documentation....7
1.3 How to Use the Help System....8
2 Analog Demodulation Option R&S FSV–K7....10
2.1 Instrument Functions Analog Demodulation (R&S FSV–K7)....10
2.2 Softkeys of the Analog Demodulation option (K7)....24
2.3 Remote Commands of the Analog Demodulation (R&S FSV–K7)....79
3 FM Stereo Option R&S FSV–K7S....180
3.1 Instrument Functions FM Stereo (R&S FSV–K7S)....180
3.2 Remote Commands of the FM Stereo Option (R&S FSV–K7S)....219
List of Commands....244
Index....250

1 Preface

1.1 Documentation Overview

The user documentation for the R&S FSV is divided as follows:

- Quick Start Guide
- Operating Manuals for base unit and options
- Service Manual
- Online Help
- Release Notes

Quick Start Guide

This manual is delivered with the instrument in printed form and in PDF format on the CD. It provides the information needed to set up and start working with the instrument. Basic operations and basic measurements are described. Also a brief introduction to remote control is given. The manual includes general information (e.g. Safety Instructions) and the following chapters:

Chapter 1	Introduction, General information
Chapter 2	Front and Rear Panel
Chapter 3	Preparing for Use
Chapter 4	Firmware Update and Installation of Firmware Options
Chapter 5	Basic Operations
Chapter 6	Basic Measurement Examples
Chapter 7	Brief Introduction to Remote Control
Appendix	Printer Interface
Appendix	LAN Interface

Operating Manuals

The Operating Manuals are a supplement to the Quick Start Guide. Operating Manuals are provided for the base unit and each additional (software) option.

The Operating Manual for the base unit provides basic information on operating the R&S FSV in general, and the "Spectrum" mode in particular. Furthermore, the software options that enhance the basic functionality for various measurement modes are described here. The set of measurement examples in the Quick Start Guide is expanded by more advanced measurement examples. In addition to the brief introduction to remote control in the Quick Start Guide, a description of the basic analyzer commands and programming examples is given. Information on maintenance, instrument interfaces and error messages is also provided.

In the individual option manuals, the specific instrument functions of the option are described in detail. For additional information on default settings and parameters, refer to the data sheets. Basic information on operating the R&S FSV is not included in the option manuals.

The following Operating Manuals are available for the R&S FSV:

- R&S FSV base unit; in addition:
  - R&S FSV-K9 Power Sensor Support
  - R&S FSV-K14 Spectrogram Measurement
- R&S FSV-K7 Analog Demodulation and R&S FSV-K7S FM Stereo Measurements
- R&S FSV-K10 GSM/EDGE Measurement
- R&S FSV-K30 Noise Figure Measurement
- R&S FSV-K40 Phase Noise Measurement
- R&S FSV-K70 Vector Signal Analysis Operating Manual
  R&S FSV-K70 Vector Signal Analysis Getting Started (First measurements)
- R&S FSV-K72 3GPP FDD BTS Analysis
- R&S FSV-K73 3GPP FDD UE Analysis
- R&S FSV-K76/77 3GPP TD-SCDMA BTS/UE Measurement
- R&S FSV-K82/83 CDMA2000 BTS/MS Analysis
- R&S FSV-K84/85 1xEV-DO BTS/MS Analysis
- R&S FSV-K91 WLAN IEEE 802.11a/b/g/j/n
- R&S FSV-K93 WiMAX IEEE 802.16 OFDM/OFDMA Analysis
- R&S FSV-K100/K104 EUTRA / LTE Downlink Measurement Application
- R&S FSV-K101/K105 EUTRA / LTE Uplink Measurement Application

These manuals are available in PDF format on the CD delivered with the instrument. The printed manual can be ordered from Rohde & Schwarz GmbH & Co. KG.

Service Manual

This manual is available in PDF format on the CD delivered with the instrument. It describes how to check compliance with rated specifications, instrument function, repair, troubleshooting and fault elimination. It contains all information required for repairing the R&S FSV by replacing modules. The manual includes the following chapters:

Chapter 1	Performance Test
Chapter 2	Adjustment
Chapter 3	Repair
Chapter 4	Software Update / Installing Options
Chapter 5	Documents

Online Help

The online help contains context-specific help on operating the R&S FSV and all available options. It describes both manual and remote operation. The online help is installed on

the R&S FSV by default, and is also available as an executable .chm file on the CD delivered with the instrument.

Release Notes

The release notes describe the installation of the firmware, new and modified functions, eliminated problems, and last minute changes to the documentation. The corresponding firmware version is indicated on the title page of the release notes. The current release notes are provided in the Internet.

1.2 Conventions Used in the Documentation

1.2.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
KEYS	Key names are written in capital letters.
`File names, commands, program code`	File names, commands, coding samples and screen output are distinguished by their font.
Input	Input to be entered by the user is displayed in italics.
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.2.2 Conventions for Procedure Descriptions

When describing how to operate the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

1.3 How to Use the Help System

Calling context-sensitive and general help

► To display the general help dialog box, press the HELP key on the front panel.

The help dialog box "View" tab is displayed. A topic containing information about the current menu or the currently opened dialog box and its function is displayed.

For standard Windows dialog boxes (e.g. File Properties, Print dialog etc.), no context-sensitive help is available.

► If the help is already displayed, press the softkey for which you want to display help.

A topic containing information about the softkey and its function is displayed.

If a softkey opens a submenu and you press the softkey a second time, the submenu of the softkey is displayed.

Contents of the help dialog box

The help dialog box contains four tabs:

- "Contents" - contains a table of help contents
- "View" - contains a specific help topic
- "Index" - contains index entries to search for help topics
- "Zoom" - contains zoom functions for the help display

To change between these tabs, press the tab on the touchscreen.

Navigating in the table of contents

- To move through the displayed contents entries, use the UP ARROW and DOWN ARROW keys. Entries that contain further entries are marked with a plus sign.
- To display a help topic, press the ENTER key. The "View" tab with the corresponding help topic is displayed.
- To change to the next tab, press the tab on the touchscreen.

Navigating in the help topics

- To scroll through a page, use the rotary knob or the UP ARROW and DOWN ARROW keys.
- To jump to the linked topic, press the link text on the touchscreen.

Searching for a topic

1. Change to the "Index" tab.

2. Enter the first characters of the topic you are interested in. The entries starting with these characters are displayed.
3. Change the focus by pressing the ENTER key.
4. Select the suitable keyword by using the UP ARROW or DOWN ARROW keys or the rotary knob.
5. Press the ENTER key to display the help topic.

   The "View" tab with the corresponding help topic is displayed.

Changing the zoom

1. Change to the "Zoom" tab.
2. Set the zoom using the rotary knob. Four settings are available: 1-4. The smallest size is selected by number 1, the largest size is selected by number 4.

Closing the help window

► Press the ESC key or a function key on the front panel.

2 Analog Demodulation Option R&S FSV–K7

Overview of firmware option R&S FSV–K7

This section contains all information required for operation of an R&S FSV equipped with Application Firmware R&S FSV–K7. It covers operation via menus and the remote control commands for analog demodulation measurements.

This part of the documentation consists of the following chapters:

- chapter 2.1, "Instrument Functions Analog Demodulation (R&S FSV–K7)", on page 10 describes the overall instrument functions and provides further information
- chapter 2.2.1, "Softkeys of the Analog Demodulation Menu (R&S FSV-K7)", on page 25 shows all softkeys available in the "Analog Demod" menu. This chapter also presents the remote control commands associated with each softkey function.
- The following chapters describe the softkeys of the other keys for the Analog Demodulation option.
- chapter 2.3, "Remote Commands of the Analog Demodulation (R&S FSV–K7)", on page 79 describes all remote control commands defined for the analog demodulation measurement.

This part of the documentation includes only functions of the Application Firmware R&S FSV–K7. For all other descriptions, please refer to the description of the base unit.

2.1 Instrument Functions Analog Demodulation (R&S FSV–K7)

The digital signal processing in the R&S FSV, used in the analyzer mode for digital IF filters, is also ideally suited for demodulating AM, FM, or PM signals. The firmware option R&S FSV–K7 provides the necessary measurement functions.

The R&S FSV is equipped with a demodulator that is capable of performing AM, FM, and PM demodulation at a time. Additionally maximum, minimum and average or current values can be obtained parallel over a selected number of measurements.

By sampling (digitization) already at the IF and digital down-conversion to the baseband (I/Q), the demodulator achieves maximum accuracy and temperature stability. There is no evidence of typical errors of an analog down-conversion and demodulation like AM to FM conversion and vice versa, deviation error, frequency response or frequency drift at DC coupling.

To open the Analog Demodulation menu

- If the "Analog Demodulation" mode is not the active measurement mode, press the MODE key and select the "Analog Demodulation" softkey.
- If the "Analog Demodulation" mode is already active, press the HOME or MEAS key.

The "Analog Demod" menu is displayed (see chapter 2.2, "Softkeys of the Analog Demodulation option (K7)", on page 24).

Further information

2.1.1 Circuit Description – Block Diagrams....11
2.1.2 Demodulation Bandwidth....13
2.1.3 Configuring Traces....13
2.1.4 Trace Mode Overview....15
2.1.5 AF Trigger....16
2.1.6 Stability of Measurement Results....17
2.1.7 Detector Overview....17
2.1.8 Sample Rate, Measurement Time and Trigger Offset....18
2.1.9 Measurement Result Display....20
2.1.10 ASCII File Export Format....23

2.1.1 Circuit Description – Block Diagrams

The software demodulator runs on the main processor of the analyzer. The demodulation process is shown in figure 2-1 the figure below. All calculations are performed simultaneously with the same I/Q data set. Magnitude (= amplitude) and phase of the complex I/Q pairs are determined. The frequency result is obtained from the differential phase.

For details on the analyzer signal processing refer to the `TRACe:IQ` subsystem in the base unit.

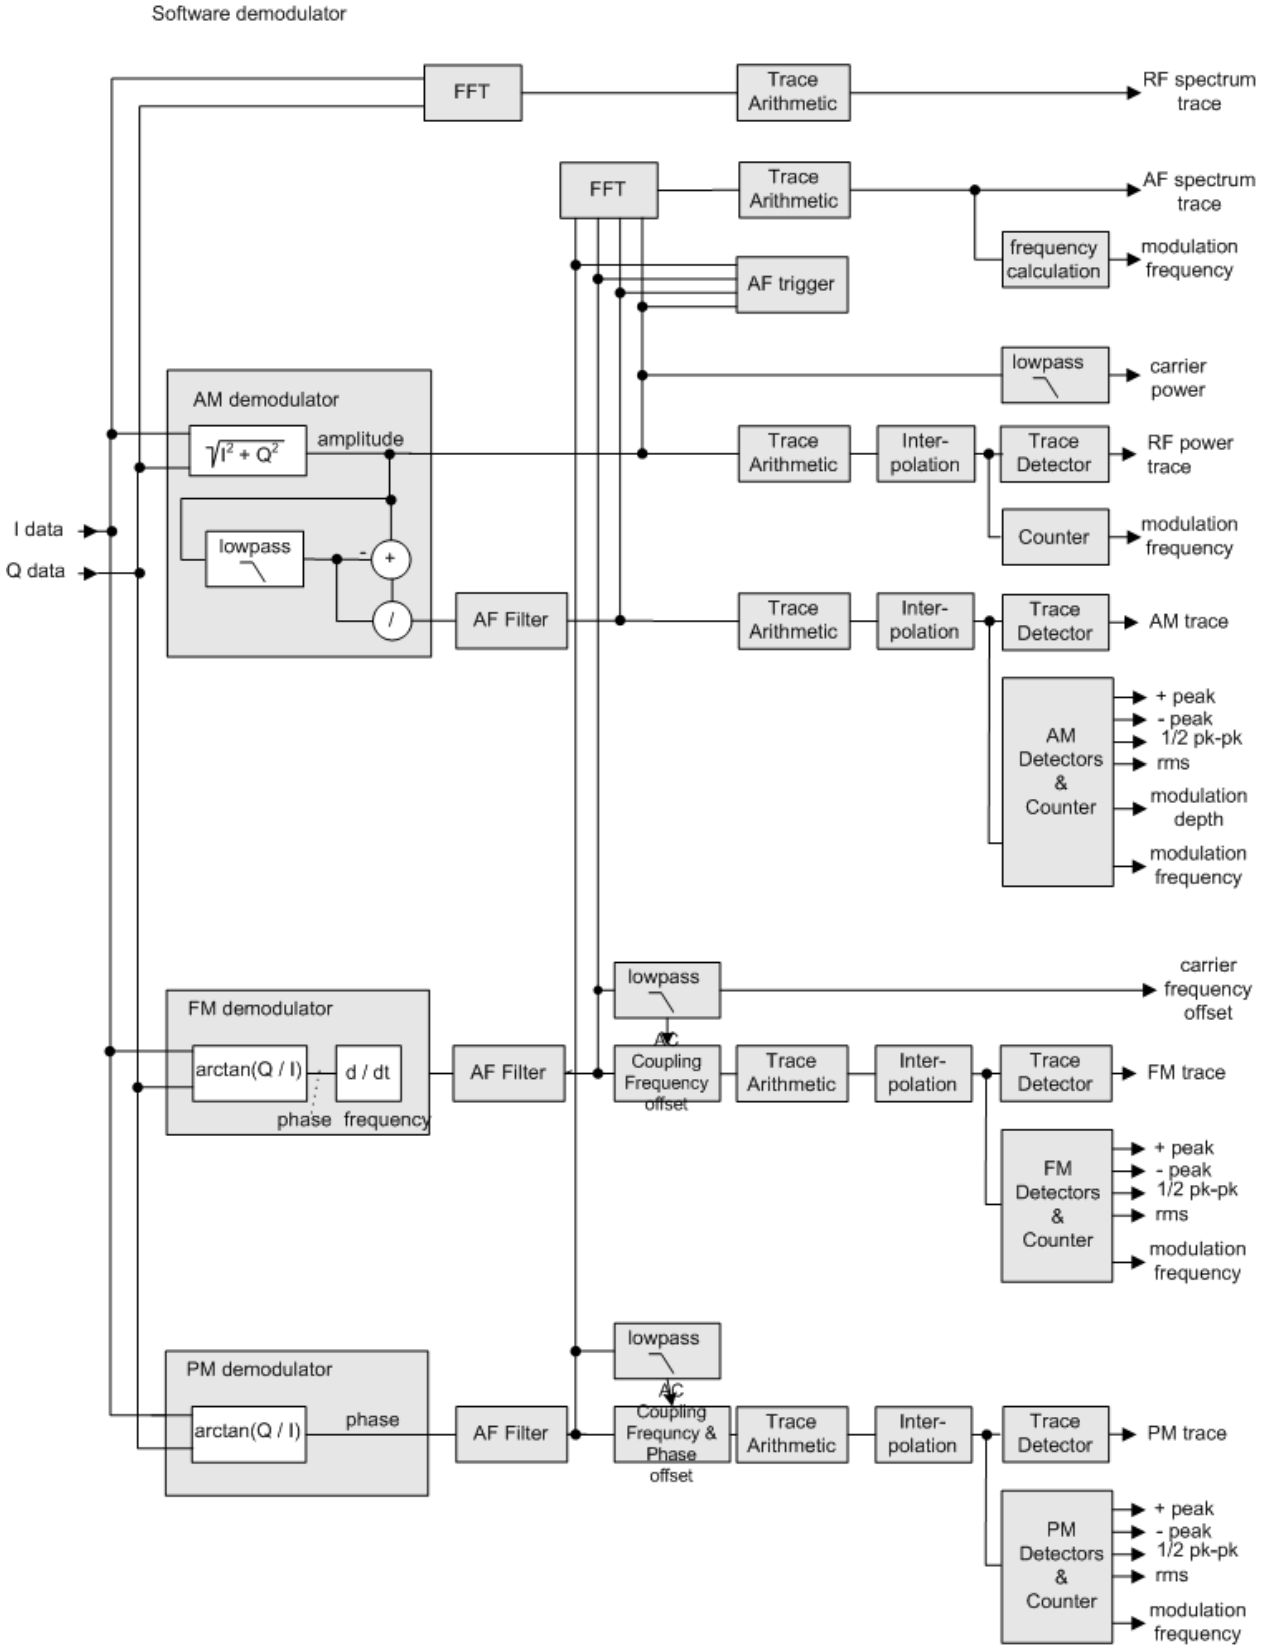

Fig. 2-1: Block diagram of software demodulator

The AM DC, FM DC and PM DC raw data of the demodulators is fed into the `Trace Arithmetic` block that combines consecutive data sets. Possible trace modes are: Clear Write, Max Hold, Min Hold and Average (for details refer to chapter 2.1.4, "Trace Mode Overview", on page 15. The output data of the `Trace Arithmetic` block can be read via remote control.

The collected measured values are evaluated by the selected detector (for details refer to chapter 2.1.7, "Detector Overview", on page 17. The result is displayed on the screen and can be read out via remote control.

In addition, important parameters are calculated:

- A counter determines the modulation frequency for AM, FM, and PM.
- average power = carrier power (RF power)
- average frequency = carrier frequency offset (FM)
- The modulation depth or the frequency or phase deviation is displayed.
- AC coupling is possible with FM and PM display. The deviations are determined from the trace data. +Peak, –Peak, ½ Peak-Peak and RMS are displayed.

2.1.2 Demodulation Bandwidth

The demodulation bandwidth is not the 3 dB bandwidth but the useful bandwidth which is distortion-free with regard to phase and amplitude.

Therefore the following formulas apply:

- AM: demodulation bandwidth ≥ 2 x modulation frequency
- FM: demodulation bandwidth ≥ 2 x (frequency deviation + modulation frequency)
- PM: demodulation bandwidth ≥ 2 x modulation frequency x (1 + phase deviation)

If the center frequency of the analyzer is not set exactly to the signal frequency, the demodulation bandwidth must be selected larger by the carrier offset, in addition to the requirement described above. This also applies if FM or PM AC coupling has been selected.

In general, the demodulation bandwidth should be as narrow as possible to improve the S/N ratio. The residual FM caused by noise floor and phase noise increases dramatically with the bandwidth, especially with FM.

2.1.3 Configuring Traces

1. To open the trace wizard, press the TRACE key and then the "Trace Wizard" softkey (see "Trace Wizard" on page 59).

   Tip: Context-sensitive menus for traces. Traces have context-sensitive menus. If you right-click on a trace in the display or a trace setting in the information channel bar (or touch it for about 1 second), a menu is displayed which corresponds to the softkey

functions available for traces. This is useful, for example, when the softkey display is hidden.
If a menu entry contains an arrow to the right of it, a submenu is available for that entry.

To close the menu, press the ESC key or click in the display outside of the menu.

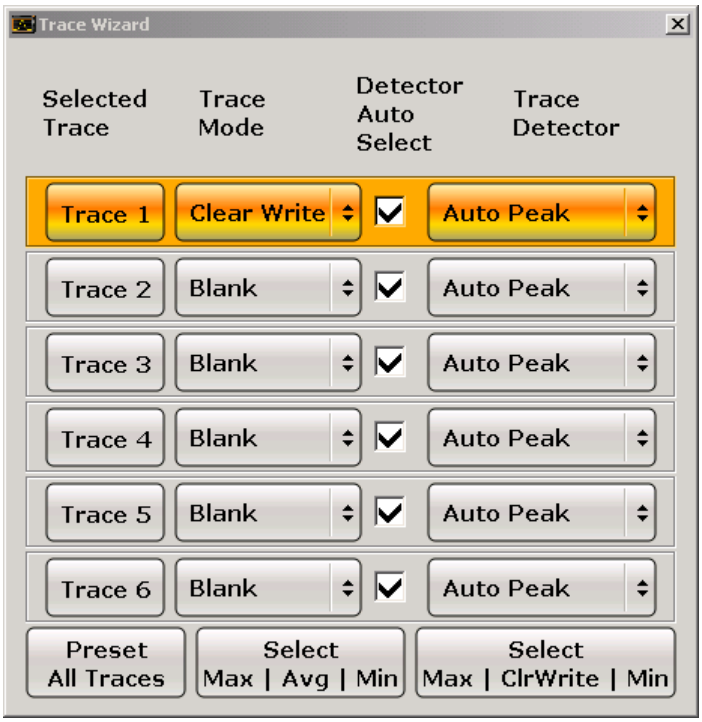

2. For each trace you can define the following settings:

Display Mode	• Clear Write • Max Hold • Min Hold • Average • View • Blank For details see chapter 2.1.4, "Trace Mode Overview", on page 15.
Detector Auto Select	Activates automatic detector selection (see Auto Select softkey). If activated, the "Trace Detector" setting is ignored.
Trace Detector	Defines a specific trace detector. If one of the following settings is defined, the "Detector Auto Select" option is deactivated. • "Auto Select" on page 57 • "Auto Peak" on page 58 • "Positive Peak" on page 58 • "Negative Peak" on page 58 • "Sample" on page 58 • "RMS" on page 58 • "Average" on page 59 • "Quasipeak" on page 59

3. To configure several traces to predefined display modes in one step, press the button for the required function:

Preset All Traces	Trace 1: Clear Write Trace 2-6: Blank
Select Max | Avg | Min	Trace 1: Max Hold Trace 2: Average Trace 3: Min Hold Trace 4-6: Blank
Select Max | ClrWrite | Min	Trace 1: Max Hold Trace 2: Clear Write Trace 3: Min Hold Trace 4-6: Blank

For details see chapter 2.1.4, "Trace Mode Overview", on page 15.

2.1.4 Trace Mode Overview

The traces can be activated individually for a measurement or frozen after completion of a measurement. Traces that are not activate are hidden. Each time the trace mode is changed, the selected trace memory is cleared.

The R&S FSV offers 6 different trace modes:

Clear Write
Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

Remote command:
`DISP:TRAC:MODE WRIT`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 108

Max Hold
The maximum value is determined over several sweeps and displayed. The R&S FSV saves the sweep result in the trace memory only if the new value is greater than the previous one.

The detector is automatically set to "Positive Peak".

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

This mode is not available for statistics measurements.

Remote command:
`DISP:TRAC:MODE MAXH`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 108

Min Hold
The minimum value is determined from several measurements and displayed. The R&S FSV saves the smallest of the previously stored/currently measured values in the trace memory.

The detector is automatically set to "Negative Peak".

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

This mode is not available for statistics measurements.

Remote command:
`DISP:TRAC:MODE MINH`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 108

Average
The average is formed over several sweeps. The Sweep Count determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see chapter 2.1.7, "Detector Overview", on page 17).

This mode is not available for statistics measurements.

Remote command:
`DISP:TRAC:MODE AVER`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 108

View
The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the icon on the tab label.

If the level range or reference level is changed, the R&S FSV automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

Remote command:
`DISP:TRAC:MODE VIEW`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 108

Blank
Hides the selected trace.

Remote command:
`DISP:TRAC OFF`, see `DISPlay[:WINDow<n>]:TRACe<t>[:STATe]` on page 109

2.1.5 AF Trigger

The analog demodulation option allows triggering to the demodulated signal. The display is stable if a minimum of five modulation periods are within the recording time.

Triggering is always DC-coupled. Therefore triggering is possible directly to the point where a specific carrier level, phase or frequency is exceeded or not attained.

2.1.6 Stability of Measurement Results

Despite amplitude and frequency modulation, the display of carrier power and carrier frequency offset is stable.

This is achieved by a digital filter which sufficiently suppresses the modulation, provided, however, that the measurement time is ≥ 3 x 1 / modulation frequency, i.e. that at least three periods of the AF signal are recorded.

The mean carrier power for calculating the AM is also calculated with a digital filter that returns stable results after a measurement time of ≥ 3 x 1 / modulation frequency, i.e. at least three cycles of the AF signal must be recorded before a stable AM can be shown.

2.1.7 Detector Overview

The measurement detector for the individual display modes can be selected directly by the user or set automatically by the R&S FSV. The detector activated for the specific trace is indicated in the corresponding trace display field by an abbreviation.

The detectors of the R&S FSV are implemented as pure digital devices. They collect signal power data within each measured point during a sweep. The default number of sweep points is 691. The following detectors are available:

Table 2-1: Detector types

Detector	Indicator	Function
Auto Peak	Ap	Determines the maximum and the minimum value within a measurement point (not available for SEM)
Positive Peak	Pk	Determines the maximum value within a measurement point
Negative Peak (min peak)	Mi	Determines the minimum value within a measurement point
RMS	Rm	Determines the root mean square power within a measurement point
Average	Av	Determines the linear average power within a measurement point
Sample	Sa	Selects the last value within a measurement point

The result obtained from the selected detector within a measurement point is displayed as the power value at this measurement point.

All detectors work in parallel in the background, which means that the measurement speed is independent of the detector combination used for different traces.

Number of measured values

During a frequency sweep, the R&S FSV increments the first local oscillator in steps that are smaller than approximately 1/10 of the bandwidth. This ensures that the oscillator step speed is conform to the hardware settling times and does not affect the precision of the measured power.

The number of measured values taken during a sweep is independent of the number of oscillator steps. It is always selected as a multiple or a fraction of 691 (= default number of trace points displayed on the screen). Choosing less then 691 measured values (e.g. 125 or 251) will lead to an interpolated measurement curve, choosing more than 691 points (e.g. 1001, 2001 …) will result in several measured values being overlaid at the same frequency position.

RMS detector and VBW

If the RMS detector is selected, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the sweep time should be increased to get more stable trace curves.

2.1.8 Sample Rate, Measurement Time and Trigger Offset

Depending on the sample rate, the maximum demodulation bandwidths listed in the table can be obtained during the measurement. The permissible value range of the measurement time and trigger offset depends on the selected demodulation bandwidth and demodulation filter. If the AF filter or the AF trigger are not active, the measurement time increases by 20 %.

Option K7S

The K7S option always uses the demodulation bandwidth 400 kHz.

Table 2-2: Sample Rate, Measurement Time and Trigger Offset using a flat demodulation filter

Demod. bandwidth	Sample rate	Measurement time		Trigger offset	
		Min.	Max.	Min.	Max.
160 MHz[1)]	200 MHz	5 ns	8 ms	-8 ms	1.0486 s
80 MHz[2)]	128 MHz	7.8125 ns	12.5 ms	-12.5 ms	1.6384 s
40 MHz[2)]	64 MHz	15.625 ns	25 ms	-25 ms	3.2768 s
28 MHz	64 MHz	15.625 ns	25 ms	-25 ms	3.2768 s
18 MHz	32 MHz	31.25 ns	50 ms	-50 ms	6.5536 s
10 MHz	32 MHz	31.25 ns	50 ms	-50 ms	6.5536 s
8 MHz	16 MHz	62.5 ns	100 ms	-100 ms	13.1072 s

Demod. bandwidth	Sample rate	Measurement time		Trigger offset	
		Min.	Max.	Min.	Max.
5 MHz	8 MHz	125 ns	200 ms	-200 ms	26.2144 s
3 MHz	4 MHz	250 ns	400 ms	-400 ms	52.4288 s
1.6 MHz	2 MHz	500 ns	800 ms	-800 ms	104.8576 s
800 kHz	1 MHz	1 µs	1.6 s	-1.6 s	209.7152 s
400 kHz	500 kHz	2 µs	3.2 s	-3.2 s	419.4304 s
200 kHz	250 kHz	4 µs	6.4 s	-6.4 s	838.8608 s
100 kHz	125 kHz	8 µs	12.8 s	-12.8 s	1677.7216 s
50 kHz	62.5 kHz	16 µs	25.6 s	-25.6 s	3355.4432 s
25 kHz	31.25 kHz	32 µs	51.2 s	-51.2 s	6710.8864 s
12.5 kHz	15.625 kHz	64 µs	102.4 s	-102.4 s	13421.7728 s
6.4 kHz	7.8125 kHz	128 µs	204.8 s	-204.8 s	26843.5456 s
3.2 kHz	3.90625 kHz	256 µs	409.6 s	-409.6 s	53687.0912 s
1.6 kHz	1.953125 kHz	512 µs	819.2 s	-819.2 s	107374.1824 s
800 Hz	976.5625 Hz	1.024 ms	1638.4 s	-1638.4 s	214748.3648 s
400 Hz	488.28125 Hz	2.048 ms	3276.8 s	-3276.8 s	429496.7296 s
200 Hz	244.140625 Hz	4.096 ms	6553.6 s	-6553.6 s	858993.4592 s
100 Hz	122.0703125 Hz	8.192 ms	13107.2 s	-13107.2 s	1717986.918 s

[1] only available with option B160

[2] only available with option B70

Table 2-3: Sample Rate, Measurement Time and Trigger Offset using a Gaussian demodulation filter

Demod. bandwidth	Sample rate	Measurement time		Trigger offset	
		Min.	Max.	Min.	Max.
28 MHz[1]	112 MHz	8.929 ns	14.28 ms	-14.28	1.872457134 s
18 MHz[1]	72 MHz	13.88 ns	22.22 ms	-22.22 ms	2.912711097 s
10 MHz	40 MHz	25 ns	40 ms	-40 ms	5,242879975 s
8 MHz	32 MHz	31.25 ns	50 ms	-50 ms	6.553599969 s
5 MHz	12 MHz	83.33 ns	133.3 ms	-80 ms	10,48575995 s
3 MHz	10.666 MHz	93.75 ns	150 ms	-133.3 ms	17,47626667 s
1.6 MHz	6.4 MHz	156.25 ns	250 ms	-250 ms	32.76799984 s
800 kHz	3.2 MHz	312.5 ns	5 ms	-5 ms	65.53599969 s

[1] gaussian filter curve is limited by IQ bandwidth

Demod. bandwidth	Sample rate	Measurement time		Trigger offset	
		Min.	Max.	Min.	Max.
400 kHz	1.6 MHz	625 ns	1 s	-1 s	131.0719994 s
200 kHz	800 kHz	1.25 us	2 s	-2 s	262.1439988 s
100 kHz	400 kHz	2.5 us	4 s	-4 s	524.2879975 s
50 kHz	200 kHz	5 us	8 s	-8 s	1048.575995 s
25 kHz	100 kHz	10 us	16 s	-16 s	2097.15199 s
12.5 kHz	50 kHz	20 us	32 s	-32 s	4194.30398 s
6.4 kHz	25.6 kHz	39.0625 us	62.5 s	-62.5 s	8191.999961 s
3.2 kHz	12.8 kHz	78.125 us	125 s	-125 s	16383.99992 s
1.6 kHz	6.4 kHz	156.25 us	250 s	-250 s	32767.99984 s
800 Hz	3.2 kHz	312.5 us	500 s	-500 s	65535.99969 s
400 Hz	1.6 kHz	625 us	1000 s	-1000 s	131071.9994 s
200 Hz	800 Hz	1.25 ms	2000 s	-2000 s	262143.9988 s
100 Hz	400 Hz	2.5 ms	4000 s	-4000 s	524287.9975 s
[1] gaussian filter curve is limited by IQ bandwidth					

Large numbers of samples

Principally, the R&S FSV can handle up to 1.6 million samples. However, when 480 001 samples are exceeded, all traces that are not currently being displayed on a screen are deactivated to improve performance. The traces can only be activated again when the samples are reduced.

2.1.9 Measurement Result Display

In Analog Demodulation mode, the measurement results can be displayed in up to 4 different screens (windows), plus an additional marker table, if applicable. Each screen shows either the measurement results as a diagram or the results of evaluation functions in a table ("Result Summary").

All displays are determined by the I/Q data set recorded for the measurement.

You can define the display configuration for up to 4 different screens at once using the "Display Config" on page 27 softkey.

Screen configuration

For each screen you can define:

- **Off**: Whether it is displayed or not
- **Summary**: Whether a result summary for all screens is displayed instead of a diagram

- **AM/FM/PM/RF Diagrams**: Which type of diagram is displayed

Diagram types

The following diagram types can be selected for display.

- **AM/FM/PM Time Domain**
  Selects the AF display in zero span, calculated from the AM, FM, or PM signal.

SCPI command:

`CALC:FEED 'XTIM:FM'` (see `CALCulate<n>:FEED` on page 89)

Displays the demodulated FM signal from trace 1 in screen A.

- **AM/FM/PM Spectrum**
  Selects the display of the AF spectrum. The AF spectrum can be calculated from the AM, FM, or PM signal in zero span.

SCPI command:

`DISP:WIND2:SEL`

Sets the focus on screen B.

`CALC2:FEED 'XTIMe:FM:AFSPektrum2'` (see `CALCulate<n>:FEED` on page 89)

Displays an AF spectrum diagram of the demodulated FM signal from trace 2 in screen B.

- **RF Time Domain**
  Selects the display of the RF power in zero span. In contrast to normal analyzer operation, the level values are the magnitude of the I/Q data set.

SCPI command:

`CALC:FEED 'XTIM:RFP'` (see `CALCulate<n>:FEED` on page 89)

- **RF Spectrum**
  Selects the display of the RF signal in span > 0. In contrast to normal spectrum analyzer operation, the measured values are determined using FFT from the recorded I/Q data set.

SCPI command:

`CALC:FEED 'XTIM:SPECTRUM'` (see `CALCulate<n>:FEED` on page 89)

Diagram header information

For each diagram, the header provides the following information:



1. Screen A/B/C/D
2. Modulation type
3. Trace color

4. Trace number
5. Detector
6. Trace mode
7. Reference value
8. AF coupling (AC/DC), only in AF time domains, if applicable

Result Summary

The result summary displays the results of the evaluation functions for all channels in a table.

D Result Summary

Carrier Power: -30.00 dBm **Carrier Offset:** -1.08 Hz

	+Peak	-Peak	±Peak/2	RMS	Mod Freq	SINAD	THD
FM	113.87 kHz	-114.06 kHz	113.96 kHz	71.052 kHz	99.999 kHz	54.479 dB	-61.820 dB
PM	1.0028 rad	-1.0024 rad	1.0026 rad	707.15 mrad	99.999 kHz	---	---

Summaries that take up the entire width of the screen are displayed as tables; if only half the screen width is available (2 windows next to each other), the summary is displayed as a list. Thus, the factory-set predefined screen configurations contain only 3 screens: 2 for diagrams and one full-width screen for the summary.

For each channel, the following information is provided:

Label	Description
+Peak	Positive peak (maximum)
-Peak	Negative peak (minimum)
+/-Peak/2	Average of positive and negative peaks
RMS	Root Mean Square value
Mod Freq	Modulation frequency

Label	Description
SINAD	Signal-to-noise and distortion Measures the ratio of the total power to the power of noise and harmonic distortions. The noise and harmonic power is calculated inside the AF spectrum span. The DC offset is removed before the calculation. $SINAD[dB] = 20 \cdot \log\left[\frac{\text{total power}}{\text{noise} + \text{distortion power}}\right]$
THD	Total harmonic distortion The ratio of the harmonics to the fundamental and harmonics. All harmonics inside the AF spectrum span are considered up to the tenth harmonic. $THD[dB] = 20 \cdot \log\left[\frac{\sqrt{\sum_{i=2}^{\infty} U_i^2}}{\sqrt{\sum_{i=1}^{\infty} U_i^2}}\right]$

In addition, the following general information for the input signal is provided:

- Carrier Power
- Carrier Offset
- Modulation Depth

2.1.10 ASCII File Export Format

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the keyword "Trace <n>" (<n> = number of stored trace), followed by the measured data in one or several columns (depending on measurement) which are also separated by a semicolon.

File contents: header and data section	Description
Type;FSV;	Instrument model
Version;1.50;	Firmware version
Date;01.Apr 2010;	Date of data set storage
Screen;A;	Instrument mode
Points per Symbol;4;	Points per symbol
x Axis Start;-13;sym;	Start value of the x axis
x Axis Stop;135;sym;	Stop value of the x axis
Ref value y axis;-10.00;dBm;	Y axis reference value
Ref value position;100;%;	Y axis reference position
Trace;1;	Trace number

File contents: header and data section	Description
Meas;Result;	Result type
Meas Signal;Magnitude;	Result display
Demodulator;Offset QPSK;	Demodulation type
ResultMode;Trace;	Result mode
x unit;sym;	Unit of the x axis
y unit;dBm;	Unit of the y axis
Trace Mode;Clear Write;	Trace mode
Values;592;	Number of results
<values>	List of results

2.2 Softkeys of the Analog Demodulation option (K7)

Apart from the power measurement menu (MEAS key) that is not available in the "Analog Demodulation" mode, all other menus not described here are provided as described for the base unit. For details refer to the corresponding menu descriptions.

Importing and Exporting I/Q Data

I/Q data that was captured in the R&S FSV-K7 application can now be exported to a file on the R&S FSV. The stored data can then be imported again at a later time, also by different applications, for further processing.

As opposed to storing trace data, which may be averaged or restricted to peak values, I/Q data is stored as it was captured, without further processing. The data is stored as complex values in 32-bit floating-point format. The I/Q data is stored in a packed format with the file extension `.iq.tar`.

The "Import" and "Export" functions are available from the "Save/Recall" menu, which is displayed when you press the SAVE/RCL key on the front panel. For details see "Importing and Exporting I/Q Data" in the base unit description.

To display help to a softkey, press the HELP key and then the softkey for which you want to display help. To close the help window, press the ESC key. For further information refer to chapter 1.3, "How to Use the Help System", on page 8.

2.2.1 Softkeys of the Analog Demodulation Menu (R&S FSV-K7).....25
2.2.2 Softkeys of the Frequency Menu – FREQ Key (R&S FSV-K7).....38
2.2.3 Softkeys of the Span Menu – SPAN Key (R&S FSV-K7).....40
2.2.4 Softkeys of the Amplitude Menu – AMPT Key (R&S FSV-K7).....41
2.2.5 Softkeys of the Auto Set menu - AUTO SET Key (R&S FSV-K7).....47
2.2.6 Softkeys of the Bandwidth Menu – BW Key (R&S FSV-K7).....49

2.2.7 Softkeys of the Sweep Menu – SWEEP Key (R&S FSV-K7)....54
2.2.8 Softkeys of the Trace Menu – TRACE key (R&S FSV-K7)....55
2.2.9 Softkeys of the Trigger Menu – TRIG Key (R&S FSV-K7)....61
2.2.10 Softkeys of the Marker Menu – MKR key (R&S FSV-K7)....65
2.2.11 Softkeys of the Marker Function Menu – MKR FUNC Key (R&S FSV-K7)....69
2.2.12 Softkeys of the Input/Output Menu....74

2.2.1 Softkeys of the Analog Demodulation Menu (R&S FSV-K7)

The following table shows all softkeys available in the "Analog Demod" menu.

AM....26
- Display Config....27
  - Screen A-D....27
  - Predefined....28
    - Add....28
    - Apply....28
    - Remove....28
    - Restore....28
- Select Trace....28
- Demod BW....29
- Meas Time....29
- AF Filter....29
  - High Pass....29
  - Low Pass....29
  - Weighting....30
    - None....30
    - CCITT....30
    - CCIR Unweighted....31
    - CCIR Weighted....31
    - A Weighted....31
  - Deemphasis....31
  - All AF Filter Off....32
- AF Range....32
  - Dev per Division....32
  - Reference Position....32
  - Reference Value....33
  - AF Coupling AC/DC....33
  - Deviation Lin/Log....33
  - Unit....33
    - Phase Unit (Rad/Deg)....34
    - THD Unit (% / DB)....34
    - Abs. Dev Unit (kHz/dBm)....34
    - Rel. Dev Unit (dB / %)....34
- Time Domain Zoom....34
  - State On / Off....34
  - Start....34

└ Length Manual....34
└ Length Auto....35
└ Squelch....35
└ Squelch Level....35
FM....35
└ Display Config....35
└ Select Trace....35
└ Demod BW....35
└ Meas Time....35
└ AF Filter....35
└ AF Range....36
└ Time Domain Zoom....36
└ Squelch....36
└ Squelch Level....36
PM....36
└ Display Config....36
└ Select Trace....36
└ Demod BW....36
└ Meas Time....36
└ AF Filter....36
└ AF Range....36
└ Time Domain Zoom....36
└ Squelch....36
└ Squelch Level....36
└ Zero Phase Reference Point....37
└ Phase Wrap On/Off....37
RF Power....37
└ Display Config....37
└ Select Trace....37
└ Demod BW....37
└ Meas Time....37
└ AF Filter....37
└ AF Range....37
└ Time Domain Zoom....38
└ Squelch....38
└ Squelch Level....38
Display Config....38

AM

Selects AM as the modulation type, changes the signal display, and opens a submenu to set the measurement configuration.

In single sweep mode, the data is determined from the current I/Q data set, i.e. a change to a different type does not trigger a new measurement.

This menu is also displayed when you press the MEAS CONFIG key after changing the modulation type.

Remote command:

`CALC:FEED 'XTIM:AM'` (see `CALCulate<n>:FEED` on page 89)

Display Config ← AM
You configure the display settings for the results in the "Display Configuration" dialog box. This dialog box contains the following tabs:

- "Screen A-D": a separate tab for each of the four available screens
- "Predefined": for predefined display configurations

Screen A-D ← Display Config ← AM
For each of the four available screens you can configure what is to be displayed. To define the result display configuration for a screen, select the corresponding tab. For each screen you can define:

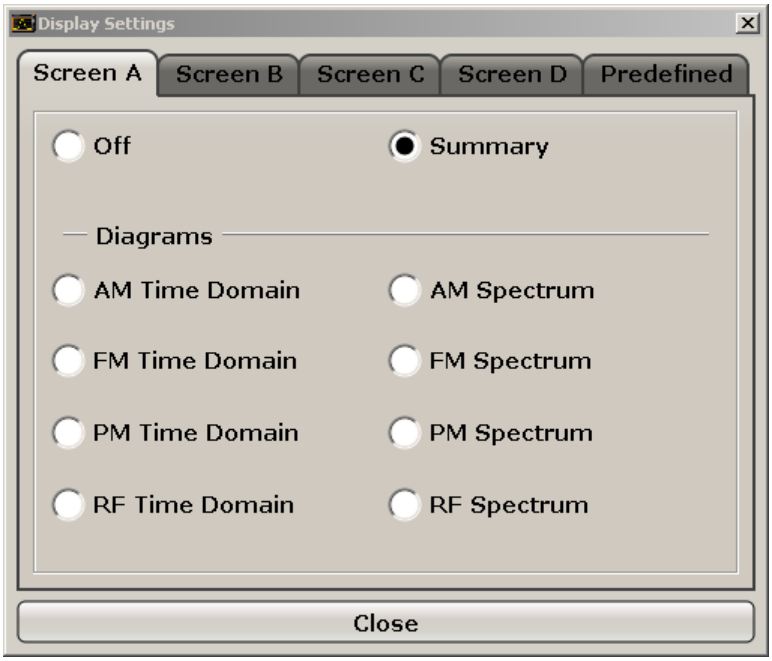

- **Off**: Whether it is displayed or not
- **Summary**: Whether a summary of the evaluation lists from all screens is displayed instead of a diagram
- **AM/FM/PM/RF Diagrams**: Which type of diagram is displayed
  For details on the result diagram types, see chapter 2.1.9, "Measurement Result Display", on page 20.

Note: By default, the diagram or summary displays the data from trace 1. To change the trace, use the Select Trace softkey.

Remote command:
`DISP:WIND2:STAT ON` (see `DISPlay[:WINDow<n>]:STATe` on page 107)
Displays second window (Screen B).
`CALC2:FEED 'XTIMe:FM:AFSPektrum1'` (see `CALCulate<n>:FEED` on page 89)
Displays an AF spectrum diagram of the demodulated FM signal from trace 1 in screen B.

Predefined ← Display Config ← AM
You can store and load predefined screen configurations. All available configurations are displayed in the "Predefined" tab. The current screen configuration is indicated under "Current" at the top of the list.

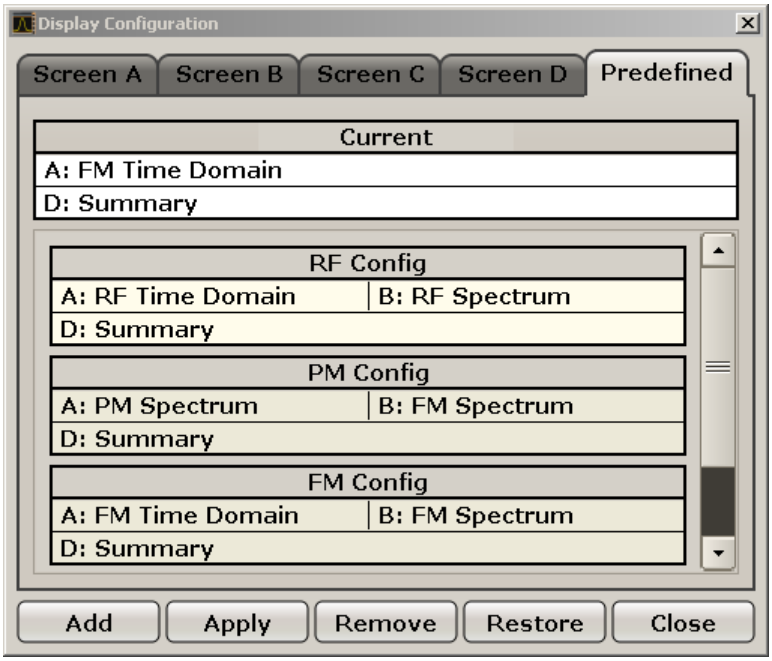

Add ← Predefined ← Display Config ← AM
Opens an edit dialog box to enter a name for the current screen configuration. The configuration is then stored and added to the list.

Apply ← Predefined ← Display Config ← AM
Applies the currently selected configuration from the list to the current display.

Remove ← Predefined ← Display Config ← AM
Removes the currently selected configuration from the list.

Restore ← Predefined ← Display Config ← AM
Restores the default display configurations. Existing configurations with the default names are replaced.

Select Trace ← AM
Opens an edit dialog box to enter the number of the trace for which the data is to be displayed in the currently selected screen. Only activated traces can be selected.

Demod BW ← AM
Opens an edit dialog box to enter the demodulation bandwidth of the analog demodulation. The demodulation bandwidth determines the sampling rate for recording the signal to be analyzed. For details on the relation between demodulation bandwidth and sampling rate refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Remote command:
[SENSe:]BANDwidth|BWIDth:DEMod on page 143

Meas Time ← AM
Opens an editor for entering the measurement time of the analog demodulation. For details on the measurement time values refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Note: For FM Stereo measurements (option K7S), the minimum measurement time is 2 ms.

Remote command:
[SENSe:]ADEMod:MTIMe on page 129

AF Filter ← AM
The bandwidth of the demodulated signal can be reduced by high pass or low pass filters and also a de-emphasis can be switched on. The selected filters are used for AM, FM and PM demodulation in common. Individual settings are not possible.

High Pass ← AF Filter ← AM
Opens the "High Pass" selection list to switch on a high pass filter with the given limit to separate the DC component. The filters are indicated by the 3 dB cutoff frequency. The 50 Hz and 300 Hz filters are designed as 2nd-order Butterworth filter (12 dB/octave). The 20 Hz filter is designed as 3rd-order Butterworth filter (18 dB/octave).

"None" deactivates the AF high pass filter. Default is "None".

The high pass filters are active in the following demodulation bandwidth range:

20 Hz	100 Hz ≤ demodulation bandwidth ≤ 1.6 MHz
50 Hz:	200 Hz ≤ demodulation bandwidth ≤ 3 MHz
300 Hz:	800 Hz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

Remote command:
[SENSe:]FILTer<n>:HPASs[:STATe] on page 146
[SENSe:]FILTer<n>:HPASs:FREQuency on page 147

Low Pass ← AF Filter ← AM
Opens the "Low Pass" selection list to select the filter type. Relative and absolute low pass filter are available.

- Absolute low pass filters:
  The 3 kHz, 15 kHz; 23 kHz and 150 kHz softkeys switch on a absolute low pass filter. The filters are indicated by the 3 dB cutoff frequency. The 3 kHz, 15 kHz and 23 kHz

filters are designed as 5th-order Butterworth filters (30 dB/octave). The 150 kHz filter is designed as 8th-order Butterworth filter (48 dB/octave).
The absolute low pass filters are active in the following demodulation bandwidth range:

3 kHz:	6.4 kHz ≤ demodulation bandwidth ≤ 3 MHz
15 kHz:	50 kHz ≤ demodulation bandwidth ≤ 8 MHz
23 kHz	50 kHz ≤ demodulation bandwidth ≤ 18 MHz
150 kHz:	400 kHz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

- Relative low pass filters:
  The filters (3 dB) can be selected in % of the demodulation bandwidth. The filters are designed as 5th-order Butterworth filter (30 dB/octave) and active for all demodulation bandwidths.
- "None" deactivates the AF low pass filter. Default is "None".

Remote command:
`[SENSe:]FILTer<n>:LPASs[:STATe]` on page 147
`[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute]` on page 147
`[SENSe:]FILTer<n>:LPASs:FREQuency:RELative` on page 148
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:LPASs:STATe` on page 232
`[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency` on page 233

Weighting ← AF Filter ← AM
Opens the "Weighting" selection list to select the weighting AF filter.

None ← Weighting ← AF Filter ← AM
Deactivates the weighting filter. This is the default setting.

Remote command:
`[SENSe:]FILTer<n>:HPASs[:STATe]` on page 146

CCITT ← Weighting ← AF Filter ← AM
Switches on a CCITT P.53 weighting filter. The weighting filter is active in the following demodulation bandwidth range:

20 kHz ≤ demodulation bandwidth ≤ 3 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
`[SENSe:]FILTer<n>:CCIT` on page 145
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:CCITt:STATe` on page 230

CCIR Unweighted ← Weighting ← AF Filter ← AM
Switches on the CCIR unweighted filter, which is the combination of the 20 Hz highpass and 23 kHz low pass filter. The weighting filter is active in the following demodulation bandwidth range:

50 kHz ≤ demodulation bandwidth ≤ 1.6 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
`[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe]` on page 145
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:CCIR[:UNWeighted][:STATe]` on page 230

CCIR Weighted ← Weighting ← AF Filter ← AM
Switches on the CCIR weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 3.0 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
`[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATe]` on page 145
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:CCIR:WEIGhted[:STATe]` on page 230

A Weighted ← Weighting ← AF Filter ← AM
Switches on the A weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 800 kHz

Remote command:
`[SENSe:]FILTer<n>:AWEighted[:STATe]` on page 144
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:AWEighted[:STATe]` on page 229

Deemphasis ← AF Filter ← AM
Opens the "Deemphasis" selection list to switch on a deemphasis with the given time constant.

The deemphasis is active in the following demodulation bandwidth range:

Note: For FM stereo measurements (K7S), the demodulation bandwidth is always 400 kHz, thus the deemphasis is always active.

25 µs:	25 kHz ≤ demodulation bandwidth ≤ 40 MHz
50 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
75 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
750 µs:	800 Hz ≤ demodulation bandwidth ≤ 3 MHz

The following table shows the required demodulation bandwidth for an error less than 0.5 dB up to a maximum AF frequency.

deemphasis	25 µs	50 µs	75 µs	750 µs
max. AF frequency	25 kHz	12 kHz	8 kHz	800 Hz
required demodulation bandwidth	≥ 200 kHz	≥ 100 kHz	≥ 50 kHz	≥ 6.4 kHz

For higher AF frequencies the demodulation bandwidth must be increased.

Remote command:
`[SENSe:]FILTer<n>:DEMPhasis[:STATe]` on page 146
`[SENSe:]FILTer<n>:DEMPhasis:TCONstant` on page 146
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:STATe` on page 231
`[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:TCONstant` on page 231

All AF Filter Off ← AF Filter ← AM
Disables all specified AF Filters.

Remote command:
`[SENSe:]FILTer<n>:AOFF` on page 144

AF Range ← AM
Opens a submenu to define the diagram scaling for AF displays.

Dev per Division ← AF Range ← AM
Opens an edit dialog box to set the modulation depth or the phase deviation (R&S FSV-K7 only), or frequency deviation per division:

AM display:	0.0001 % to 1000 %
FM display:	1 Hz/div to 100 MHz/div
PM display:	0.0001 rad/div to 1000 rad/div

The softkey is not available if logarithmic display is set ("Deviation Lin/Log" softkey).

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous` on page 110

Reference Position ← AF Range ← AM
Determines the position of the reference line for the modulation depth or the phase deviation (R&S FSV-K7 only) or frequency deviation on the y-axis of the diagram. By default, this line is set to 0.

The position is entered as a percentage of the diagram height with 100 % corresponding to the upper diagram border. The default setting is 50 % (diagram center) for the display of the AM, FM, or PM signal, and 100 % (upper diagram border) for the AF spectrum display of the AM, FM, or PM signal.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition` on page 111

Reference Value ← AF Range ← AM
Determines the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation at the reference line of the y-axis. The reference value is set separately for each display of the AM, FM, and PM signal and the AF spectrum of the AM, FM, and PM signal.

- AM/FM/PM signal display
  The trace display takes individual frequency/phase offsets into account (in contrast, the AF Coupling AC/DC softkey permits automatic correction by the average frequency/phase offset of the signal, and can therefore not be activated simultaneously).
  Possible values: 0 and ± 10000 % (AM), 0 and ± 10 MHz (FM), 0 and ± 10000 rad (PM).
- AF spectrum display of the AM/FM/PM signal
  In the default setting, the reference value defines the modulation depth or the FM/PM deviation at the upper diagram border.
  Possible values: 0 and 10000 % (AM), 0 and 10 MHz (FM), 0 and 10000 rad (PM).

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue` on page 111

AF Coupling AC/DC ← AF Range ← AM
Controls the automatic correction of the frequency offset and phase offset of the input signal:

(**Note:** This function is not available with the AF spectrum display of the FM or PM signal.)

- FM signal display
  If DC is selected, the absolute frequency is displayed, i.e. an input signal with an offset relative to the center frequency is not displayed symmetrically with respect to the zero line.
  If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric with respect to the zero line.
- PM signal display
  If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of ± π.
  If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric with respect to the zero line.

Remote command:
`[SENSe:]ADEMod<n>:AF:COUPling` on page 118

Deviation Lin/Log ← AF Range ← AM
Switches between logarithmic and linear display of the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112

Unit ← AF Range ← AM
Opens a submenu to define the modulation unit.

Phase Unit (Rad/Deg) ← Unit ← AF Range ← AM
Sets the phase unit to rad or deg for displaying PM signals.

Remote command:
UNIT:THD on page 163

THD Unit (% / DB) ← Unit ← AF Range ← AM
Sets the unit to percent or DB for THD measurements.

Remote command:
UNIT:THD on page 163

Abs. Dev Unit (kHz/dBm) ← Unit ← AF Range ← AM
Sets the unit for absolute deviation to kHz or dBm. This softkey is only available with the FM Stereo option K7S.

Remote command:
UNIT:ADEV on page 242

Rel. Dev Unit (dB / %) ← Unit ← AF Range ← AM
Sets the unit for relative deviation to dB or percent. This softkey is only available with the FM Stereo option K7S.

Remote command:
UNIT:RDEV on page 243

Time Domain Zoom ← AM
Opens a submenu to activate and configure the zoom function.

State On / Off ← Time Domain Zoom ← AM
Activates or deactivates the time domain zoom according to the defined settings.

"ON" Activates the time domain zoom. The zoom area is defined using the "Start""Start" on page 34 and "Length Manual""Length Manual" on page 34 / "Length Auto""Length Auto" on page 35 softkeys.

"OFF" If more measured values than measurement points are available, several measured values are combined in one measurement point according to the method of the selected trace detector. For details on detectors refer to chapter 2.1.7, "Detector Overview", on page 17.

Remote command:
[SENSe:]ADEMod<n>:ZOOM[:STATe] on page 139

Start ← Time Domain Zoom ← AM
Opens an edit dialog box to define the start time for the zoom area.

Remote command:
[SENSe:]ADEMod<n>:ZOOM:STARt on page 139

Length Manual ← Time Domain Zoom ← AM
Opens an edit dialog box to define the length of the zoom area (as a time value) manually.

Remote command:
[SENSe:]ADEMod<n>:ZOOM:LENGth on page 140

Length Auto ← Time Domain Zoom ← AM
Automatically sets the length of the zoom area to the number of sweep points (see "Sweep Points" on page 55).

Remote command:
[SENSe:]ADEMod<n>:ZOOM:LENGth:MODE on page 140

Squelch ← AM
Activates the squelch function, i.e. if the signal falls below a defined threshold, the demodulated data is automatically set to 0. This is useful, for example, to avoid demodulation noise during transmission breaks.

Remote command:
[SENSe:]ADEMod:SQUelch[:STATe] on page 138

Squelch Level ← AM
Defines the level threshold below which the demodulated data is set to 0 if squelching is enabled. The squelch level is an absolute value.

Remote command:
[SENSe:]ADEMod:SQUelch:LEVel on page 138

FM
Selects FM as the modulation type, changes the signal display, and opens a submenu to set the measurement configuration. The average value of the demodulated signal is mapped depending on the "AF Coupling" softkey setting (see "AF Coupling AC/DC" on page 33).

In single sweep mode, the data is determined from the current I/Q data set, i.e. a change to a different type does not trigger a new measurement.

This menu is also displayed when you press the MEAS CONFIG key after changing the modulation type.

Remote command:
CALC:FEED 'XTIM:FM' (see CALCulate<n>:FEED on page 89)

Display Config ← FM
See "Display Config" on page 27.

Select Trace ← FM
See "Select Trace" on page 28.

Demod BW ← FM
See "Demod BW" on page 29.

Meas Time ← FM
See "Meas Time" on page 29.

AF Filter ← FM
See "AF Filter" on page 29.

AF Range ← FM
See "AF Range" on page 32.

Time Domain Zoom ← FM
See "Time Domain Zoom" on page 34.

Squelch ← FM
See "Squelch" on page 35.

Squelch Level ← FM
See "Squelch Level" on page 35.

PM
Selects PM as the modulation type, changes the signal display, and opens a submenu to set the measurement configuration.

In single sweep mode, the data is determined from the current I/Q data set, i.e. a change to a different type does not trigger a new measurement.

This menu is also displayed when you press the MEAS CONFIG key after changing the modulation type.

Remote command:
`CALC:FEED 'XTIM:PM'` (see `CALCulate<n>:FEED` on page 89)

Display Config ← PM
See "Display Config" on page 27.

Select Trace ← PM
See "Select Trace" on page 28.

Demod BW ← PM
See "Demod BW" on page 29.

Meas Time ← PM
See "Meas Time" on page 29.

AF Filter ← PM
See "AF Filter" on page 29.

AF Range ← PM
See "AF Range" on page 32.

Time Domain Zoom ← PM
See "Time Domain Zoom" on page 34.

Squelch ← PM
See "Squelch" on page 35.

Squelch Level ← PM
See "Squelch Level" on page 35.

Zero Phase Reference Point ← PM
Defines the position at which the phase of the PM-demodulated signal is set to 0 rad. The entry is made with respect to time. In the default setting, the first measured value is set to 0 rad.

This softkey is only available in the PM display with DC coupling.

Remote command:
`[SENSe:]ADEMod:PM:RPOint[:X]` on page 133

Phase Wrap On/Off ← PM
Activates/deactivates the phase wrap.

On	The phase will be displayed in the range ±180° (± Π). For example, if the phase exceeds +180°, 360° is subtracted from the phase value, with the display thus showing >-180°.
Off	The phase will not be wrapped.

This softkey is available in the PM signal displays.

Remote command:
`CALC:FORM PHAS` (see `CALCulate<n>:FORMat` on page 91)

RF Power
Selects RF power as the modulation type, changes the signal display, and opens a sub-menu to set the measurement configuration.

In single sweep mode, the data is determined from the current I/Q data set, i.e. a change to a different type does not trigger a new measurement.

This menu is also displayed when you press the MEAS CONFIG key after changing the modulation type.

Remote command:
`CALC:FEED 'XTIM:RFPower'` (see `CALCulate<n>:FEED` on page 89)

Display Config ← RF Power
See "Display Config" on page 27.

Select Trace ← RF Power
See "Select Trace" on page 28.

Demod BW ← RF Power
See "Demod BW" on page 29.

Meas Time ← RF Power
See "Meas Time" on page 29.

AF Filter ← RF Power
See "AF Filter" on page 29.

AF Range ← RF Power
See "AF Range" on page 32.

Time Domain Zoom ← RF Power
See "Time Domain Zoom" on page 34.

Squelch ← RF Power
See "Squelch" on page 35.

Squelch Level ← RF Power
See "Squelch Level" on page 35.

Display Config
See "Display Config" on page 27.

2.2.2 Softkeys of the Frequency Menu – FREQ Key (R&S FSV-K7)

The following table shows all softkeys available in the "Frequency" menu in "Analog Demodulation" mode (FREQ key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Center....38
CF Stepsize....38
└ 0.1*Span (RF Spectrum)....39
└ 0.1*Demod BW (AF/RF Time Domain, AF Spectrum)....39
└ 0.5*Span (RF Spectrum)....39
└ 0.5*Demod BW (AF/RF Time Domain, AF Spectrum)....39
└ x*Span (RF Spectrum)....39
└ x*Demod BW (AF/RF Time Domain, AF Spectrum)....39
└ =Center....39
└ Manual....40
AF Center (AF Spectrum)....40
AF Start....40
AF Stop....40

Center
Opens an edit dialog box to enter the center frequency. The allowed range of values for the center frequency depends on the frequency span.

span > 0: $span_{min}/2 \leq f_{center} \leq f_{max} - span_{min}/2$

span = 0: $0\ Hz \leq f_{center} \leq f_{max}$

f_{max} and $span_{min}$ are specified in the data sheet.

Remote command:
`[SENSe:]FREQuency:CENTer` on page 148

CF Stepsize
Opens a submenu to set the step size of the center frequency. Apart from the =Center andManual softkeys, the other softkeys are displayed depending on the selected frequency span.

The step size can be coupled to the span (span > 0) or the demodulation bandwidth (span = 0) or it can be manually set to a fixed value.

0.1*Span (RF Spectrum) ← CF Stepsize
Sets the step size for the center frequency to 10 % of the span.

Remote command:
[SENSe:]FREQuency:CENTer:STEP:LINK on page 149
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 149

0.1*Demod BW (AF/RF Time Domain, AF Spectrum) ← CF Stepsize
Sets the step size for the center frequency to 10 % of the demodulation bandwidth. This is the default setting.

Remote command:
[SENSe:]FREQuency:CENTer:STEP:LINK on page 149
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 149

0.5*Span (RF Spectrum) ← CF Stepsize
Sets the step size for the center frequency to 50 % of the span.

Remote command:
[SENSe:]FREQuency:CENTer:STEP:LINK on page 149
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 149

0.5*Demod BW (AF/RF Time Domain, AF Spectrum) ← CF Stepsize
Sets the step size for the center frequency to 50 % of the demodulation bandwidth.

Remote command:
[SENSe:]FREQuency:CENTer:STEP:LINK on page 149
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 149

x*Span (RF Spectrum) ← CF Stepsize
Opens an edit dialog box to set the step size for the center frequency as % of the span.

Remote command:
[SENSe:]FREQuency:CENTer:STEP:LINK on page 149
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 149

x*Demod BW (AF/RF Time Domain, AF Spectrum) ← CF Stepsize
Opens an edit dialog box to set the step size for the center frequency as % of the demodulation bandwidth. Values between 1 and 100 % in steps of 1 % are allowed. The default setting is 10 %.

Remote command:
[SENSe:]FREQuency:CENTer:STEP:LINK on page 149
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 149

=Center ← CF Stepsize
Sets the step size to the value of the center frequency and removes the coupling of the step size to span or resolution bandwidth.

This function is especially useful for measurements of the signal harmonics. In this case, each stroke of the arrow key selects the center frequency of another harmonic.

Manual ← CF Stepsize
Opens an edit dialog box to enter a fixed step size for the center frequency.

Remote command:
`[SENSe:]FREQuency:CENTer:STEP` on page 149

AF Center (AF Spectrum)
Opens an edit box to enter the center frequency within the AF spectrum.

Remote command:
`[SENSe:]ADEMod<n>:AF:CENTer` on page 117

AF Start
Opens an edit box to define the start frequency within the AF spectrum.

Remote command:
`[SENSe:]ADEMod<n>:AF:STARt` on page 119

AF Stop
Opens an edit box to define the stop frequency within the AF spectrum.

The maximum AF stop frequency corresponds to half the demodulation bandwidth.

Remote command:
`[SENSe:]ADEMod<n>:AF:STOP` on page 119

2.2.3 Softkeys of the Span Menu – SPAN Key (R&S FSV-K7)

The following table shows all softkeys available in the ""Span"" menu in ""Analog Demodulation"" mode (SPAN key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Span Manual (RF Spectrum)....40
AF Span Manual (AF Spectrum)....41
Demod BW....41
Full Span (RF Spectrum)....41
AF Full Span (AF Spectrum)....41

Span Manual (RF Spectrum)
Opens an edit dialog box to enter the frequency span. The center frequency is kept constant. If the RF spectrum display is active, values between the sampling rate/1000 and the demodulation bandwidth are allowed.

Remote command:
`[SENSe:]ADEMod:SPECtrum:SPAN:ZOOM` on page 138

AF Span Manual (AF Spectrum)
Opens an edit dialog box to enter the frequency range for the AF spectrum display. Values between the sampling rate/1000 and the demodulation bandwidth/2 are allowed.

Remote command:
`[SENSe:]ADEMod<n>:AF:SPAN` on page 118

Demod BW
Opens an edit dialog box to enter the demodulation bandwidth of the analog demodulation. The demodulation bandwidth determines the sampling rate for recording the signal to be analyzed. For details on the relation between demodulation bandwidth and sampling rate refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Remote command:
`[SENSe:]BANDwidth|BWIDth:DEMod` on page 143

Full Span (RF Spectrum)
Sets the span to the maximum frequency range of the R&S FSV specified in the data sheet. This setting is useful for overview measurements.

If the RF spectrum display is active, the full frequency range corresponds to the demodulation bandwidth.

Remote command:
`[SENSe:]ADEMod:SPECtrum:SPAN:ZOOM` on page 138

AF Full Span (AF Spectrum)
Sets the span to the maximum frequency range for the AF spectrum display. The maximum frequency range corresponds to half the demodulation bandwidth.

Remote command:
`[SENSe:]ADEMod<n>:AF:SPAN:FULL` on page 118

2.2.4 Softkeys of the Amplitude Menu – AMPT Key (R&S FSV-K7)

The following table shows all softkeys available in the "Amplitude" menu in "Analog Demodulation" mode (AMPT key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Ref Level....42
AF Range....42
Range....42
└ Range Log 100 dB....42
└ Range Log 50 dB....43
└ Range Log 10 dB....43
└ Range Log 5 dB....43
└ Range Log 1 dB....43
└ Range Log Manual....44
└ Range Linear %....44

└ Range Lin. Unit....44
Unit....44
└ Phase Unit (Rad/Deg)....44
└ THD Unit (% / DB)....44
Preamp On/Off....44
RF Atten Manual/Mech Att Manual....45
RF Atten Auto/Mech Att Auto....45
El Atten On/Off....45
El Atten Mode (Auto/Man)....46
Ref Level Offset....46
Ref Level Position....46
Grid Abs/Rel....46
Input (AC/DC)....47
Input 50 Ω/75 Ω....47

Ref Level
Opens an edit dialog box to enter the reference level in the current unit (dBm, dBµV, etc).

The reference level is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 110

AF Range
Only available for AM/FM/PM measurements (see chapter 2.1.9, "Measurement Result Display", on page 20).

For details refer to the "AF Range" softkey of the main menu (see "AF Range" on page 32).

Range
Only available for RF measurements (see chapter 2.1.9, "Measurement Result Display", on page 20).

Opens a submenu to define the level display range.

Range Log 100 dB ← Range
Sets the level display range to 100 dB.

Remote command:
Logarithmic scaling:
`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112
Display range:
`DISP:WIND:TRAC:Y 100DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 109

Range Log 50 dB ← Range
Sets the level display range to 50 dB.

Remote command:
Logarithmic scaling:
`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112
Display range:
`DISP:WIND:TRAC:Y 50DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 109

Range Log 10 dB ← Range
Sets the level display range to 10 dB.

Remote command:
Logarithmic scaling:
`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112
Display range:
`DISP:WIND:TRAC:Y 10DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 109

Range Log 5 dB ← Range
Sets the level display range to 5 dB.

Remote command:
Logarithmic scaling:
`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112
Display range:
`DISP:WIND:TRAC:Y 5DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 109

Range Log 1 dB ← Range
Sets the level display range to 1 dB.

Remote command:
Logarithmic scaling:
`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112
Display range:
`DISP:WIND:TRAC:Y 1DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 109

Range Log Manual ← Range
Opens an edit dialog box to define the display range of a logarithmic level axis manually.

Remote command:
Logarithmic scaling:
`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112
Display range:
`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 109

Range Linear % ← Range
Selects linear scaling for the level axis in %.

The grid is divided into decadal sections.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

Remote command:
`DISP:TRAC:Y:SPAC LIN`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112

Range Lin. Unit ← Range
Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

Remote command:
`DISP:TRAC:Y:SPAC LDB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112

Unit
Opens a submenu to define the unit of the measurement results.

Phase Unit (Rad/Deg) ← Unit
Sets the phase unit to rad or deg for displaying PM signals.

Remote command:
`UNIT:THD` on page 163

THD Unit (% / DB) ← Unit
Sets the unit to percent or DB for THD measurements.

Remote command:
`UNIT:THD` on page 163

Preamp On/Off
Switches the preamplifier on and off.

If option R&S FSV-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSV-B24 is installed, the preamplifier is active for all frequencies.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:
INPut:GAIN:STATe on page 174

RF Atten Manual/Mech Att Manual
Opens an edit dialog box to enter the attenuation, irrespective of the reference level. If electronic attenuation is activated (option R&S FSV-B25 only; "El Atten Mode Auto" softkey), this setting defines the mechanical attenuation.

The mechanical attenuation can be set in 10 dB steps.

The RF attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps). The range is specified in the data sheet. If the current reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

The RF attenuation defines the level at the input mixer according to the formula:

$level_{mixer} = level_{input} – RF\ attenuation$

Note: As of firmware version 1.61, the maximum mixer level allowed is **0 dBm**. Mixer levels above this value may lead to incorrect measurement results, which are indicated by the "OVLD" status display. The increased mixer level allows for an improved signal, but also increases the risk of overloading the instrument!

Remote command:
INPut:ATTenuation on page 170

RF Atten Auto/Mech Att Auto
Sets the RF attenuation automatically as a function of the selected reference level. This ensures that the optimum RF attenuation is always used. It is the default setting.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:
INPut:ATTenuation:AUTO on page 170

El Atten On/Off
This softkey switches the electronic attenuator on or off. This softkey is only available with option R&S FSV-B25.

When the electronic attenuator is activated, the mechanical and electronic attenuation can be defined separately. Note however, that both parts must be defined in the same mode, i.e. either both manually, or both automatically.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

- To define the mechanical attenuation, use the RF Atten Manual/Mech Att Manual or RF Atten Auto/Mech Att Auto softkeys.
- To define the electronic attenuation, use the El Atten Mode (Auto/Man) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized

and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, this function is available again.
When the electronic attenuator is switched off, the corresponding RF attenuation mode (auto/manual) is automatically activated.

Remote command:
INPut:EATT:AUTO on page 174

El Atten Mode (Auto/Man)
This softkey defines whether the electronic attenuator value is to be set automatically or manually. If manual mode is selected, an edit dialog box is opened to enter the value. This softkey is only available with option R&S FSV-B25, and only if the electronic attenuator has been activated via the El Atten On/Off softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, electronic attenuation is available again. If the electronic attenuation was defined manually, it must be re-defined.

The attenuation can be varied in 1 dB steps from 0 to 30 dB. Other entries are rounded to the next lower integer value.

To re-open the edit dialog box for manual value definition, select the "Man" mode again.

If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

Remote command:
INPut:EATT:AUTO on page 174
INPut:EATT on page 173

Ref Level Offset
Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ±200 dB in 0.1 dB steps.

Remote command:
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet on page 111

Ref Level Position
Opens an edit dialog box to enter the reference level position, i.e. the position of the maximum AD converter value on the level axis. The setting range is from -200 to +200 %, 0 % corresponding to the lower and 100 % to the upper limit of the diagram.

Only available for RF measurements.

Remote command:
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition on page 111

Grid Abs/Rel
Switches between absolute and relative scaling of the level axis (not available with "Linear" range).

Only available for RF measurements.

"Abs" Absolute scaling: The labeling of the level lines refers to the absolute value of the reference level. Absolute scaling is the default setting.

"Rel" Relative scaling: The upper line of the grid is always at 0 dB. The scaling is in dB whereas the reference level is always in the set unit (for details on unit settings see the "Unit" softkey).

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE` on page 109

Input (AC/DC)
Toggles the RF input of the R&S FSV between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:
`INPut:COUPling` on page 171

Input 50 Ω/75 Ω
Uses 50 Ω or 75 Ω as reference impedance for the measured levels. Default setting is 50 Ω.

The setting 75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω/50 Ω).

All levels specified in this Operating Manual refer to the default setting of the instrument (50 Ω).

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:
`INPut:IMPedance` on page 174

2.2.5 Softkeys of the Auto Set menu - AUTO SET Key (R&S FSV-K7)

The following table shows all softkeys available in the "Auto Set" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Adjusting settings automatically during triggered measurements

When you select an auto adjust function a measurement is performed to determine the optimal settings. If you select an auto adjust funtion for a triggered measurement, you can select how the R&S FSV should behave:

- (default:) The measurement for adjustment waits for the next trigger
- The measurement for adjustment is performed without waiting for a trigger.
  The trigger source is temporarily set to "Free Run". After the measurement is completed, the original trigger source is restored. The trigger level for IF Power and RF Power triggers is adjusted as follows:
  Trigger Level = Reference Level - 15 dB

Auto All....48
Auto Freq....48
Auto Level....48
Settings....48
└ Meas Time Manual....49
└ Meas Time Auto....49
└ Upper Level Hysteresis....49
└ Lower Level Hysteresis....49
AF Auto Scale....49

Auto All
Performs all automatic settings.

- "Auto Freq" on page 48
- "Auto Level" on page 48

Remote command:
`[SENSe:]ADJust:ALL` on page 141

Auto Freq
Defines the center frequency automatically by determining the highest frequency level in the frequency span. This function uses the signal counter; thus it is intended for use with sinusoidal signals.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:
`[SENSe:]ADJust:FREQuency` on page 142

Auto Level
Defines the optimal reference level for the current measurement automatically.

The measurement time for automatic leveling can be defined using the Settings softkey.

Remote command:
`[SENSe:]ADJust:LEVel` on page 142

Settings
Opens a submenu to define settings for automatic leveling.

Possible settings are:

- "Meas Time Manual" on page 49
- "Meas Time Auto" on page 49

Meas Time Manual ← Settings
Opens an edit dialog box to enter the duration of the level measurement in seconds. The level measurement is used to determine the optimal reference level automatically (see the "Auto Level" softkey, "Auto Level" on page 48). The default value is 1 ms.

Remote command:
`[SENSe:]ADJust:CONFigure:LEVel:DURation` on page 142

Meas Time Auto ← Settings
The level measurement is used to determine the optimal reference level automatically (see the Auto Level softkey).

This softkey resets the level measurement duration for automatic leveling to the default value of 100 ms.

Upper Level Hysteresis ← Settings
Defines an upper threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

Remote command:
`[SENSe:]ADJust:CONFiguration:HYSTeresis:UPPer` on page 141

Lower Level Hysteresis ← Settings
Defines a lower threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

Remote command:
`[SENSe:]ADJust:CONFiguration:HYSTeresis:LOWer` on page 141

AF Auto Scale
Activates automatic scaling of the y-axis for AF measurements. RF power and RF spectrum measurements are not affected by the auto-scaling.

Remote command:
`[SENSe:]ADJust:SCALe:Y:AUTO[:CONTinuous]` on page 142

2.2.6 Softkeys of the Bandwidth Menu – BW Key (R&S FSV-K7)

The following table shows all softkeys available in the "Bandwidth" menu in "Analog Demodulation" mode (BW key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Res BW (span > 0)....50
Demod BW....50
Meas Time....50
AF Filter....50
└ High Pass....50

└ Low Pass....51
└ Weighting....51
└ None....52
└ CCITT....52
└ CCIR Unweighted....52
└ CCIR Weighted....52
└ A Weighted....52
└ Deemphasis....53
└ All AF Filter Off....53
Demod Filter....53

Res BW (span > 0)
Opens an edit dialog box to enter a value for the resolution bandwidth. The range is specified in the data sheet.

This softkey is only available for spectrum measurements (see chapter 2.1.9, "Measurement Result Display", on page 20).

Remote command:
`[SENSe:]ADEMod:SPECtrum:BANDwidth|BWIDth[:RESolution]` on page 135

Demod BW
Opens an edit dialog box to enter the demodulation bandwidth of the analog demodulation. The demodulation bandwidth determines the sampling rate for recording the signal to be analyzed. For details on the relation between demodulation bandwidth and sampling rate refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Remote command:
`[SENSe:]BANDwidth|BWIDth:DEMod` on page 143

Meas Time
Opens an editor for entering the measurement time of the analog demodulation. For details on the measurement time values refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Note: For FM Stereo measurements (option K7S), the minimum measurement time is 2 ms.

Remote command:
`[SENSe:]ADEMod:MTIMe` on page 129

AF Filter
The bandwidth of the demodulated signal can be reduced by high pass or low pass filters and also a de-emphasis can be switched on. The selected filters are used for AM, FM and PM demodulation in common. Individual settings are not possible.

High Pass ← AF Filter
Opens the "High Pass" selection list to switch on a high pass filter with the given limit to separate the DC component. The filters are indicated by the 3 dB cutoff frequency. The 50 Hz and 300 Hz filters are designed as 2nd-order Butterworth filter (12 dB/octave). The 20 Hz filter is designed as 3rd-order Butterworth filter (18 dB/octave).

"None" deactivates the AF high pass filter. Default is "None".

The high pass filters are active in the following demodulation bandwidth range:

20 Hz	100 Hz ≤ demodulation bandwidth ≤ 1.6 MHz
50 Hz:	200 Hz ≤ demodulation bandwidth ≤ 3 MHz
300 Hz:	800 Hz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

Remote command:
`[SENSe:]FILTer<n>:HPASs[:STATe]` on page 146
`[SENSe:]FILTer<n>:HPASs:FREQuency` on page 147

Low Pass ← AF Filter
Opens the "Low Pass" selection list to select the filter type. Relative and absolute low pass filter are available.

- Absolute low pass filters:
  The 3 kHz, 15 kHz; 23 kHz and 150 kHz softkeys switch on a absolute low pass filter. The filters are indicated by the 3 dB cutoff frequency. The 3 kHz, 15 kHz and 23 kHz filters are designed as 5th-order Butterworth filters (30 dB/octave). The 150 kHz filter is designed as 8th-order Butterworth filter (48 dB/octave).
  The absolute low pass filters are active in the following demodulation bandwidth range:

3 kHz:	6.4 kHz ≤ demodulation bandwidth ≤ 3 MHz
15 kHz:	50 kHz ≤ demodulation bandwidth ≤ 8 MHz
23 kHz	50 kHz ≤ demodulation bandwidth ≤ 18 MHz
150 kHz:	400 kHz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

- Relative low pass filters:
  The filters (3 dB) can be selected in % of the demodulation bandwidth. The filters are designed as 5th-order Butterworth filter (30 dB/octave) and active for all demodulation bandwidths.
- "None" deactivates the AF low pass filter. Default is "None".

Remote command:
`[SENSe:]FILTer<n>:LPASs[:STATe]` on page 147
`[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute]` on page 147
`[SENSe:]FILTer<n>:LPASs:FREQuency:RELative` on page 148
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:LPASs:STATe` on page 232
`[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency` on page 233

Weighting ← AF Filter
Opens the "Weighting" selection list to select the weighting AF filter.

None ← Weighting ← AF Filter
Deactivates the weighting filter. This is the default setting.

Remote command:
`[SENSe:]FILTer<n>:HPASs[:STATe]` on page 146

CCITT ← Weighting ← AF Filter
Switches on a CCITT P.53 weighting filter. The weighting filter is active in the following demodulation bandwidth range:

20 kHz ≤ demodulation bandwidth ≤ 3 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
`[SENSe:]FILTer<n>:CCIT` on page 145
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:CCITt:STATe` on page 230

CCIR Unweighted ← Weighting ← AF Filter
Switches on the CCIR unweighted filter, which is the combination of the 20 Hz highpass and 23 kHz low pass filter. The weighting filter is active in the following demodulation bandwidth range:

50 kHz ≤ demodulation bandwidth ≤ 1.6 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
`[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe]` on page 145
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:CCIR[:UNWeighted][:STATe]` on page 230

CCIR Weighted ← Weighting ← AF Filter
Switches on the CCIR weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 3.0 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
`[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATe]` on page 145
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:CCIR:WEIGhted[:STATe]` on page 230

A Weighted ← Weighting ← AF Filter
Switches on the A weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 800 kHz

Remote command:
[SENSe:]FILTer<n>:AWEighted[:STATe] on page 144
SFM:
[SENSe:]SFM:<ChannelType>:FILTer:AWEighted[:STATe] on page 229

Deemphasis ← AF Filter
Opens the "Deemphasis" selection list to switch on a deemphasis with the given time constant.

The deemphasis is active in the following demodulation bandwidth range:

Note: For FM stereo measurements (K7S), the demodulation bandwidth is always 400 kHz, thus the deemphasis is always active.

25 µs:	25 kHz ≤ demodulation bandwidth ≤ 40 MHz
50 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
75 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
750 µs:	800 Hz ≤ demodulation bandwidth ≤ 3 MHz

The following table shows the required demodulation bandwidth for an error less than 0.5 dB up to a maximum AF frequency.

deemphasis	25 µs	50 µs	75 µs	750 µs
max. AF frequency	25 kHz	12 kHz	8 kHz	800 Hz
required demodulation bandwidth	≥ 200 kHz	≥ 100 kHz	≥ 50 kHz	≥ 6.4 kHz

For higher AF frequencies the demodulation bandwidth must be increased.

Remote command:
[SENSe:]FILTer<n>:DEMPhasis[:STATe] on page 146
[SENSe:]FILTer<n>:DEMPhasis:TCONstant on page 146
SFM:
[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:STATe on page 231
[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:TCONstant on page 231

All AF Filter Off ← AF Filter
Disables all specified AF Filters.

Remote command:
[SENSe:]FILTer<n>:AOFF on page 144

Demod Filter
By default, a flat demodulation filter is used in Analog Demodulation mode. However, in order to optimize the settling behaviour of the filter, a Gaussian filter can be used instead.

For details on sample rates, measurement times and trigger offsets for various demodulation bandwidths when using a Gaussian filter, see chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Remote command:
`[SENSe:]BANDwidth:DEMod:TYPE` on page 143

2.2.7 Softkeys of the Sweep Menu – SWEEP Key (R&S FSV-K7)

The following table shows all softkeys available in the "Sweep" menu in "Analog Demodulation" mode (SWEEP key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Continuous Sweep....54
Single Sweep....54
Continue Single Sweep....54
Meas Time....55
Sweep Count....55
Sweep Points....55

Continuous Sweep
Sets the continuous sweep mode: the sweep takes place continuously according to the trigger settings. This is the default setting.

The trace averaging is determined by the sweep count value (see the "Sweep Count" softkey, "Sweep Count" on page 55).

Remote command:
`INIT:CONT ON`, see `INITiate<n>:CONTinuous` on page 178

Single Sweep
Sets the single sweep mode: after triggering, starts the number of sweeps that are defined by using the Sweep Count softkey. The measurement stops after the defined number of sweeps has been performed.

Remote command:
`INIT:CONT OFF`, see `INITiate<n>:CONTinuous` on page 178

Continue Single Sweep
Repeats the number of sweeps set by using the Sweep Count softkey, without deleting the trace of the last measurement.

This is particularly of interest when using the trace configurations "Average" or "Max Hold" to take previously recorded measurements into account for averaging/maximum search.

Remote command:
`INITiate<n>:CONMeas` on page 178

Meas Time
Opens an editor for entering the measurement time of the analog demodulation. For details on the measurement time values refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Note: For FM Stereo measurements (option K7S), the minimum measurement time is 2 ms.

Remote command:
`[SENSe:]ADEMod:MTIMe` on page 129

Sweep Count
Opens an edit dialog box to enter the number of sweeps to be performed in the single sweep mode. Values from 0 to 32767 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in a diagram.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, the sweep count value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count =1, no averaging, maxhold or minhold operations are performed.

Remote command:
`[SENSe:]SWEep:COUNt` on page 150

Sweep Points
Opens an edit dialog box to enter the number of measured values to be collected during one sweep.

- Entry via rotary knob:
  – In the range from 101 to 1001, the sweep points are increased or decreased in steps of 100 points.
  – In the range from 1001 to 32001, the sweep points are increased or decreased in steps of 1000 points.
- Entry via keypad:
  All values in the defined range can be set.

The default value is 691 sweep points.

Remote command:
`[SENSe:]SWEep:POINts` on page 152

2.2.8 Softkeys of the Trace Menu – TRACE key (R&S FSV-K7)

The TRACE key is used to configure the data acquisition for measurement and the analysis of the measurement data.

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the active trace (1, 2, 3, 4, 5, 6) and opens the "Trace Mode" submenu for the selected trace.

The default setting is trace 1 in the overwrite mode (see "Clear Write" on page 15), the other traces are switched off (see "Blank" on page 16). For details see chapter 2.1.4, "Trace Mode Overview", on page 15.

Tip: To configure several traces in one step, press the Trace Wizard softkey to open a trace configuration dialog. See also chapter 2.1.3, "Configuring Traces", on page 13.

Remote command:
Selected via numeric suffix of:`TRACe<1...6>` commands

Clear Write ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

Remote command:
`DISP:TRAC:MODE WRIT`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 108

Max Hold ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
The maximum value is determined over several sweeps and displayed. The R&S FSV saves the sweep result in the trace memory only if the new value is greater than the previous one.

The detector is automatically set to "Positive Peak".

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

This mode is not available for statistics measurements.

Remote command:
`DISP:TRAC:MODE MAXH`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 108

Min Hold ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
The minimum value is determined from several measurements and displayed. The R&S FSV saves the smallest of the previously stored/currently measured values in the trace memory.

The detector is automatically set to "Negative Peak".

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

This mode is not available for statistics measurements.

Remote command:
`DISP:TRAC:MODE MINH`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 108

Average ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
The average is formed over several sweeps. The Sweep Count determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see chapter 2.1.7, "Detector Overview", on page 17).

This mode is not available for statistics measurements.

Remote command:
`DISP:TRAC:MODE AVER`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 108

View ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the icon on the tab label.

If the level range or reference level is changed, the R&S FSV automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

Remote command:
`DISP:TRAC:MODE VIEW`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 108

Blank ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Hides the selected trace.

Remote command:
`DISP:TRAC OFF`, see `DISPlay[:WINDow<n>]:TRACe<t>[:STATe]` on page 109

Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Opens a submenu to select the detector manually, or activate automatic selection.

If a detector was selected manually, the "MAN" indicator is highlighted.

If "AUTO" is selected, the detector is defined automatically, depending on the selected trace mode:

Trace mode	Detector
Clear Write	Auto Peak
Max Hold	Positive Peak
Min Hold	Negative Peak
Average	Sample Peak
View	–
Blank	–

For details see chapter 2.1.7, "Detector Overview", on page 17.

Note: In Analog Demod mode, if AUTO is selected, the Auto Peak detector is used regardless of the trace mode. However, if Noise or Phase Noise measurements are performed in Analog Demod mode, the Sample Detector is used.

Auto Select ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the best detector for the selected trace and filter mode. This is the default setting.

For details see also chapter 2.1.7, "Detector Overview", on page 17.

Trace mode	Detector
Clear/Write	Auto Peak
Average	Sample
Max Hold	Max Peak
Min Hold	Min Peak

Remote command:
[SENSe:][WINDow:]DETector<trace>[:FUNCtion]:AUTO on page 153

Auto Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Auto Peak" detector.

For details see chapter 2.1.7, "Detector Overview", on page 17.

Remote command:
DET APE, see [SENSe:][WINDow:]DETector<trace>[:FUNCtion] on page 153

Positive Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Positive Peak" detector.

For details see chapter 2.1.7, "Detector Overview", on page 17.

Remote command:
DET POS, see [SENSe:][WINDow:]DETector<trace>[:FUNCtion] on page 153

Negative Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Negative Peak" detector.

For details see chapter 2.1.7, "Detector Overview", on page 17.

Remote command:
DET NEG, see [SENSe:][WINDow:]DETector<trace>[:FUNCtion] on page 153

Sample ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Sample" detector.

For details see chapter 2.1.7, "Detector Overview", on page 17.

Remote command:
DET SAMP, see [SENSe:][WINDow:]DETector<trace>[:FUNCtion] on page 153

RMS ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "RMS" detector.

For details see chapter 2.1.7, "Detector Overview", on page 17.

Remote command:
DET RMS, see [SENSe:][WINDow:]DETector<trace>[:FUNCtion] on page 153

Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Average" detector.

For details see chapter 2.1.7, "Detector Overview", on page 17.

Remote command:
DET AVER, see [SENSe:][WINDow:]DETector<trace>[:FUNCtion] on page 153

Quasipeak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Quasipeak" detector.

The quasipeak detector is available with option R&S FSV-K54.

For details see chapter 2.1.7, "Detector Overview", on page 17.

Remote command:
DET QPE, see [SENSe:][WINDow:]DETector<trace>[:FUNCtion] on page 153

CISPR Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "CISPR Average" detector.

The CISPR Average detector is available with option R&S FSV-K54.

For details see chapter 2.1.7, "Detector Overview", on page 17.

Remote command:
DET CAV, see [SENSe:][WINDow:]DETector<trace>[:FUNCtion] on page 153

RMS Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "RMS Average" detector.

The quasipeak detector is available with option R&S FSV-K54.

For details see chapter 2.1.7, "Detector Overview", on page 17.

Remote command:
DET CRMS, see [SENSe:][WINDow:]DETector<trace>[:FUNCtion] on page 153

More Traces
Opens a submenu to select one of the traces not currently displayed in the main menu.

Trace Wizard
Opens the "Trace Wizard" dialog. See chapter 2.1.3, "Configuring Traces", on page 13.

Average Mode
Opens a submenu to select the averaging method for the average trace mode. The following methods are available:

- Lin
- Log
- Power

Logarithmic averaging is recommended to display signals with a low signal to noise ratio. While positive peak values are decreased in logarithmic averaging due to the characteristics involved, it is also true that negative peaks are increased relative to the average value. If the distorted amplitude distribution is averaged, a value is obtained that is smaller than the actual average value. The difference is -2.5 dB.

This low average value is usually corrected in noise power measurements by a 2.5 dB factor. Therefore the R&S FSV offers the selection of linear averaging. The trace data is converted to linear values prior to averaging, then averaged and reconverted to logarithmic values. After these conversions the data is displayed on the screen. The average value is always correctly displayed irrespective of the signal characteristic.

In case of stationary sinusoidal signals both logarithmic and linear averaging has the same results.

Lin ← Average Mode
Activates linear averaging. Linear averaging means that the power level values are converted into linear units prior to averaging. After the averaging, the data is converted back into its original unit.

This softkey takes effect if the grid is set to a linear scale (see "Range Linear" softkey, "Range Linear %" on page 44). In this case, the averaging is done in two ways (depending on the set unit – see "Unit" softkey):

- The unit is set to either W or dBm: the data is converted into W prior to averaging, i.e. averaging is done in W.
- The unit is set to either V, A, dBmV, dBµV, dBµA or dBpW: the data is converted into V prior to averaging, i.e. averaging is done in V.

Remote command:
`SENS:AVER1:TYPE LIN`, see `[SENSe:]AVERage<n>:TYPE` on page 153

Log ← Average Mode
Activates logarithmic averaging.

This averaging method only takes effect if the grid is set to a logarithmic scale ("Range" softkey), i.e. the unit of the data is dBm. In this case the values are averaged in dBm. Otherwise (i.e. with linear scaling), the behavior is the same as with linear averaging (see Lin softkey). For further information on logarithmic scaling refer to the "Average Mode" softkey.

Remote command:
`SENS:AVER1:TYPE VID`, see `[SENSe:]AVERage<n>:TYPE` on page 153

Power ← Average Mode
Activates linear power averaging.

The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.

Unlike the linear mode, the averaging is always done in W.

Remote command:
SENS:AVER1:TYPE POW, see [SENSe:]AVERage<n>:TYPE on page 153

ASCII Trace Export
Opens the "ASCII Trace Export Name" dialog box and saves the active trace in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the trace data. For details on an ASCII file see chapter 2.1.10, "ASCII File Export Format", on page 23.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see "Decim Sep" on page 61).

Remote command:
FORMat:DEXPort:DSEParator on page 177
MMEMory:STORe<n>:TRACe on page 176

Decim Sep
Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:
FORMat:DEXPort:DSEParator on page 177

2.2.9 Softkeys of the Trigger Menu – TRIG Key (R&S FSV-K7)

The following table shows all softkeys available in the "Trigger" menu in "Analog Demodulation" mode (TRIG key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Trigger Source....62
└ Free Run....62
└ External....62
└ RF Power....62
└ IF Power....63
└ FM....63
└ AM....63
└ PM....63
└ RF....63
└ Time....64
Trigger Level....64
Trigger Polarity....64
Trigger Offset....64

Repetition Interval....65
Trigger Hysteresis....65
Trigger Holdoff....65

Trigger Source
Opens the "Trg Source" submenu to select the trigger source.

In "Analog Demodulation" mode, the next measurement is triggered if the selected input signal exceeds the threshold specified using the "Trigger Level" softkey (see "Trigger Level" on page 64). A periodic signal modulated onto the carrier frequency can be displayed in this way. It is recommended that the measurement time covers at least five periods of the audio signal.

For triggering with AM, FM, PM or RF trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

Remote command:
`TRIGger<n>[:SEQuence]:SOURce` on page 161

Free Run ← Trigger Source
The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

Remote command:
`TRIG:SOUR IMM`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161

External ← Trigger Source
Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

Remote command:
`TRIG:SOUR EXT`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161

RF Power ← Trigger Source
Defines triggering of the measurement via signals which are outside the measurement channel.

This trigger mode is available with detector board 1307.9554.02 Rev 05.00 or higher. It is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17). If RF Power trigger mode is selected and digital baseband input is activated, the trigger mode is automatically switched to "Free Run".

In RF Power trigger mode the instrument uses a level detector at the first intermediate frequency. The detector threshold can be selected in a range between - 50 dBm and -10 dBm at the input mixer. The resulting trigger level at the RF input lies within the following range:

(-24dBm + RF Att) ≤ Triggerlevel ≤ (+5dBm + RF Att), max. 30 dBm, for Preamp = OFF

(-40dBm + RF Att) ≤ Triggerlevel ≤ (-11dBm + RF Att), max. 30 dBm, for Preamp = ON

with

500 MHz ≤ InputSignal ≤ 7 GHz

Note: If input values outside of this range occur (e.g. for fullspan measurements), the sweep may be aborted and a message indicating the allowed input values is displayed in the status bar.

Remote command:
`TRIG:SOUR RFP`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161
`SWE:EGAT:SOUR RFP` for gated triggering, see `[SENSe:]SWEep:EGATe:SOURce` on page 151

IF Power ← Trigger Source
Defines triggering of the measurement via signals which are outside the measurement channel.

For this purpose, the R&S FSV uses a level detector at the second intermediate frequency.

The available trigger levels depend on the RF attenuation and preamplification. A reference level offset, if defined, is also considered.

For details on available trigger levels and trigger bandwidths see the data sheet.

The bandwidth at the intermediate frequency is 20 MHz. The R&S FSV is triggered as soon as the trigger level is exceeded within a 10 MHz range around the selected frequency (= start frequency in the frequency sweep).

Thus, the measurement of spurious emissions, e.g. for pulsed carriers, is possible even if the carrier lies outside the selected frequency span.

Remote command:
`TRIG:SOUR IFP`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161
`SWE:EGAT:SOUR IFP` for gated triggering, see `[SENSe:]SWEep:EGATe:SOURce` on page 151

FM ← Trigger Source
Triggers on the specified frequency level of the FM signal.

Remote command:
`TRIG:SEQ:SOUR FM`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161

AM ← Trigger Source
Triggers on the specified modulation depth of the AM signal.

Remote command:
`TRIG:SEQ:SOUR AMR`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161

PM ← Trigger Source
Triggers on the specified phase of the PM signal.

Remote command:
`TRIG:SEQ:SOUR PM`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161

RF ← Trigger Source
Triggers on the specified level of the RF signal.

Note: The RF **offline** trigger is based on the I/Q data of the demodulated signal, limited to the demodulation bandwidth. For a wider trigger bandwidth and triggering based on the currently measured RF input signal, use the more powerful RF Power trigger.

Remote command:
`TRIG:SEQ:SOUR AM`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161

Time ← Trigger Source
Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms.

Remote command:
`TRIG:SOUR TIME`TRIGger<n>[:SEQuence]:SOURce on page 161

Trigger Level
Defines the trigger level as a numeric value.

In the trigger mode "Time", this softkey is not available.

Remote command:
`TRIGger<n>[:SEQuence]:LEVel:IFPower` on page 159
For digital input via the R&S Digital I/Q Interface, R&S FSV-B17:
`TRIGger<n>[:SEQuence]:LEVel:BBPower` on page 158

Trigger Polarity
Sets the polarity of the trigger source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all modes with the exception of the "Free Run" and "Time" mode.

"Pos" Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed.

"Neg" Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed.

Remote command:
`TRIGger<n>[:SEQuence]:SLOPe` on page 161
`[SENSe:]SWEep:EGATe:POLarity` on page 150

Trigger Offset
Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep. The time may be entered in multiples of 125 ns in the range -13 s to 13 s (default 0 s).

offset > 0:	start of the sweep is delayed
offset < 0:	sweep starts earlier (pre-trigger) only possible for span = 0 and gated trigger switched off not possible if RMS or average detector activated maximum allowed range and the maximum resolution limited by the sweep time: • $range_{max}$ = – 499/500 x sweep time • $resolution_{max}$ = sweep time/500

In the trigger modeTime, this softkey is not available.

For details on the relation between demodulation bandwidth and trigger offset refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Remote command:
`TRIGger<n>[:SEQuence]:HOLDoff[:TIME]` on page 157

Repetition Interval
Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms. This softkey is only available if the trigger source "Time" is selected (see "Time" on page 64).

Remote command:
`TRIGger<n>[:SEQuence]:TIME:RINTerval` on page 160

Trigger Hysteresis
Defines the value for the trigger hysteresis for "IF power" or "RF Power" trigger sources. The hysteresis in dB is the value the input signal must stay below the power trigger level in order to allow a trigger to start the measurement. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

Remote command:
`TRIGger<n>[:SEQuence]:IFPower:HYSTeresis` on page 157

Trigger Holdoff
Defines the value for the trigger holdoff. The holdoff value in s is the time which must pass before triggering, in case another trigger event happens.

This softkey is only available if "IFPower", "RF Power" or "BBPower" is the selected trigger source.

Remote command:
`TRIGger<n>[:SEQuence]:IFPower:HOLDoff` on page 157
For digital input via the R&S Digital I/Q Interface, R&S FSV-B17:
`TRIGger<n>[:SEQuence]:BBPower:HOLDoff` on page 156

2.2.10 Softkeys of the Marker Menu – MKR key (R&S FSV-K7)

The following table shows all softkeys available in the "Marker" menu in "Analog Demodulation" mode (MKR key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Marker 1 / Marker 2 / Marker 3 / … Marker 16,/ Marker Norm/Delta....66
More Markers....66
Marker to Trace....66
Marker Wizard....66
└ All Marker Off....67
All Marker Off....68
Marker Table....68
Marker Stepsize....68
└ Stepsize Standard....68

└ Stepsize Sweep Points....68
Marker Zoom (span > 0)....69
Link Mkr1 and Delta1....69
Link Time Marker....69
Link AF Spectrum Marker....69

Marker 1 / Marker 2 / Marker 3 / … Marker 16,/ Marker Norm/Delta
The "Marker X" softkey activates the corresponding marker and opens an edit dialog box to enter a value for the marker to be set to. Pressing the softkey again deactivates the selected marker.

If a marker value is changed using the rotary knob, the step size is defined via the Stepsize Standard or Stepsize Sweep Points softkeys.

Marker 1 is always the reference marker for relative measurements. If activated, markers 2 to 16 are delta markers that refer to marker 1. These markers can be converted into markers with absolute value display using the "Marker Norm/Delta" softkey. If marker 1 is the active marker, pressing the "Marker Norm/Delta" softkey switches on an additional delta marker.

Remote command:
`CALCulate<n>:MARKer<m>[:STATe]` on page 102
`CALCulate<n>:MARKer<m>:X` on page 103
`CALCulate<n>:MARKer<m>:Y?` on page 105
`CALCulate<n>:DELTamarker<m>[:STATe]` on page 167
`CALCulate<n>:DELTamarker<m>:X` on page 168
`CALCulate<n>:DELTamarker<m>:X:RELative` on page 168
`CALCulate<n>:DELTamarker<m>:Y?` on page 169

More Markers
Opens a sub-menu to select one of up to 16 available markers. See "Marker 1 / Marker 2 / Marker 3 / … Marker 16,/ Marker Norm/Delta" on page 66.

Marker to Trace
Opens an edit dialog box to enter the number of the trace on which the marker is to be placed.

Remote command:
`CALCulate<n>:MARKer<m>:TRACe` on page 102

Marker Wizard
Opens a configuration dialog for markers. The marker wizard allows you to configure and activate up to 16 different markers in one dialog. The first 8 markers are displayed on one tab, the last 8 markers on a second tab. For each marker, the following settings are available:

"Selected/ State" When you press the "Selected" or "State" field the corresponding marker is activated and the marker row is highlighted.

"Normal/Delta" Defines whether it is a normal marker or delta marker. For delta markers you can define a reference marker.

"Ref. Marker" Reference marker for delta markers. The marker values for the delta marker are indicated relative to the specified reference marker.
The reference marker can either be another active marker, or a fixed reference marker ("FXD", see "Ref Fixed" on page 70).

"Trace" Trace for which the marker is to be set.

Remote command:

`CALCulate<n>:MARKer<m>[:STATe]` on page 102

`CALCulate<n>:DELTamarker<m>[:STATe]` on page 167

`CALCulate<n>:MARKer<m>:TRACe` on page 102

`CALCulate<n>:DELTamarker<m>:TRACe` on page 168

`CALCulate<n>:DELTamarker<m>:MREF` on page 167

All Marker Off ← Marker Wizard

Switches all markers off. It also switches off all functions and displays that are associated with the markers/delta markers.

Remote command:

`CALCulate<n>:MARKer<m>:AOFF` on page 96

All Marker Off
Switches all markers off. It also switches off all functions and displays that are associated with the markers/delta markers.

Remote command:
`CALCulate<n>:MARKer<m>:AOFF` on page 96

Marker Table
Defines how the marker information is displayed.

For more information, see "Displayed Marker Information" in the description of the base unit.

"On" Displays the marker information in a table in a separate area beneath the diagram.

"Off" Displays the marker information within the diagram area.

"Aut" (Default) The marker table is displayed automatically if more than 2 markers are active, and removed if only 1 or 2 markers are active. This helps keep the information in the display clear.

Remote command:
`DISPlay:MTABle` on page 106

Marker Stepsize
Opens a submenu to set the step size of all markers and delta markers.

Default value for the marker step size is Stepsize Sweep Points.

Stepsize Standard ← Marker Stepsize
Moves the marker or delta marker from one measurement point to the next, if the marker or delta marker value is changed via the rotary knob ("Marker 1 / Marker 2 / Marker 3 / … Marker 16,/ Marker Norm/Delta" softkeys, see "Marker 1 / Marker 2 / Marker 3 / … Marker 16,/ Marker Norm/Delta" on page 66). If more measured values than measurement points exist, it is not possible to read out all measured values. In this case, use the Stepsize Sweep Points softkey.

Remote command:
`CALC:MARK:X:SSIZ STAN` (see `CALCulate<n>:MARKer<m>:X:SSIZe` on page 105)

Stepsize Sweep Points ← Marker Stepsize
Moves the marker or delta marker from one measured value to the next, if the marker or delta marker value is changed via the rotary knob ("Marker 1 / Marker 2 / Marker 3 / … Marker 16,/ Marker Norm/Delta" softkeys, see "Marker 1 / Marker 2 / Marker 3 / … Marker 16,/ Marker Norm/Delta" on page 66). If more measured values than measurement points exist, every single measured value is accessible and its value is displayed in the marker field.

The number of measured values is defined in the ""Sweep"" menu via the Sweep Points softkey.

This functionality is available for all base unit measurements with the exception of statistics ("APD" and "CCDF" softkeys in the "Measurement" menu).

Remote command:
`CALC:MARK:X:SSIZ POIN` (see `CALCulate<n>:MARKer<m>:X:SSIZe` on page 105)

Marker Zoom (span > 0)
Opens an edit dialog box to enter a display range for the zoom. The area around marker 1 is expanded accordingly and more details of the result can be seen. If no marker is activated, marker 1 is switched on and set on the largest signal.

The following sweep is stopped at the position of the reference marker. The frequency of the signal is counted and the measured frequency becomes the new center frequency. The zoomed display range is then configured and the new settings are used by the R&S FSV for further measurements.

If the display has not yet been switched to the new frequency display range and you press the softkey, the procedure is aborted. If an instrument setting is changed during this operation, the procedure is also aborted.

Remote command:
`CALCulate<n>:MARKer<m>:FUNCtion:ZOOM` on page 94

Link Mkr1 and Delta1
The delta marker 1 is linked to marker 1, so if the x-axis value of the marker 1 is changed, the delta marker 1 will follow on the same x-position. The link is off by default.

You can set the two markers on different traces to measure the difference (e.g. between a max hold trace and a min hold trace or between a measurement and a reference trace).

Remote command:
`CALCulate<n>:DELTamarker<m>:LINK` on page 167

Link Time Marker
Links the markers in all time domain diagrams.

Remote command:
`CALCulate<n>:MARKer<m>:LINK` on page 94

Link AF Spectrum Marker
Links the markers in all AF spectrum displays.

Remote command:
`CALCulate<n>:MARKer<m>:LINK` on page 94

2.2.11 Softkeys of the Marker Function Menu – MKR FUNC Key (R&S FSV-K7)

The following table shows all softkeys available in the "Marker Function" menu.

Select Marker (No)....70
Phase Noise....70
Ref Fixed....70

└ Ref. Fixed On/Off....70
└ Ref Point Level....71
└ Ref Point Frequency (span > 0)/Ref Point Time (zero span)....71
└ Peak Search....71
n dB down....71
Marker Peak List....72
└ Peak List On/Off....72
└ Sort Mode Freq/Lvl....72
└ Max Peak Count....72
└ Peak Excursion....73
└ Left Limit....73
└ Right Limit....73
└ Threshold....73
└ ASCII File Export....73
└ Decim Sep....74
└ Marker Number....74

Select Marker (No)
Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see "Marker 1 / Marker 2 / Marker 3 / … Marker 16,/ Marker Norm/ Delta" on page 66). "(No)" indicates the number of the currently active marker.

See "Marker 1 / Marker 2 / Marker 3 / … Marker 16,/ Marker Norm/Delta" on page 66.

Phase Noise
For AF spectrum displays, the Phase Noise marker is a normal marker with a special display value.

Remote command:
`CALCulate<n>:MARKer<m>:FUNCtion:PNOise:RESult?` on page 92
`CALCulate<n>:MARKer<m>:FUNCtion:PNOise:RESult?` on page 92

Ref Fixed
Opens a submenu to set all values of a reference point. Instead of using the current values of the reference marker (marker 1) as reference point for the delta markers, level and frequency or time are set to fixed values and used as reference point.

Ref. Fixed On/Off ← Ref Fixed
Switches the relative measurement to a fixed reference value on or off. The level and frequency or time values of marker 1 immediately become the reference point, but can be altered using the corresponding softkeys ("Ref Point Level" on page 71, "Ref Point Frequency (span > 0)/Ref Point Time (zero span)" on page 71 and "Peak Search" on page 71).

When set to ON, all delta markers which previously referenced marker 1 are automatically set to reference the fixed marker.

The reference marker assignment can be changed using the "Marker Wizard" (see "Marker Wizard" on page 66).

Remote command:
`CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed[:STATe]` on page 165

Ref Point Level ← Ref Fixed
Opens an edit dialog box to enter a reference level value. All relative level values of the delta markers refer to this reference level.

Remote command:
`CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y` on page 165

Ref Point Frequency (span > 0)/Ref Point Time (zero span) ← Ref Fixed
Opens an edit dialog box to enter a frequency reference or time value. All relative frequency or time values of the delta markers refer to this frequency reference. For phase noise measurement, input of reference time is not possible.

Remote command:
`CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X` on page 164

Peak Search ← Ref Fixed
Sets the maximum value of the selected trace as the reference point.

Remote command:
`CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:MAXimum[:PEAK]` on page 164

n dB down
Opens an edit dialog box to enter a value to define the level spacing of the two temporary markers to the right and left of marker 1 (default setting: 3 dB). Activates the temporary markers T1 and T2. The values of the temporary markers (T1, T2) and the entered value (ndB) are displayed in the marker field.

If a positive value is entered, the markers T1 and T2 are placed below the active reference marker. If a negative value (e.g. for notch filter measurements) is entered, the markers T1 and T2 are placed above the active reference marker. Marker T1 is placed to the left and marker T2 to the right of the reference marker.

In the marker table, the following results are displayed:

Span setting	Parameter name	Description
span > 0	Bw	frequency spacing of the two temporary markers
	Q factor	quality of the displayed bandwidth value (Bw)
span = 0	PWid	pulse width between the two temporary markers

If it is not possible to form the frequency spacing for the n dB value (e.g. because of noise display), dashes instead of a measured value are displayed.

Remote command:
CALC:MARK1:FUNC:NDBD:STAT ON, see CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:STATe on page 100
CALC:MARK1:FUNC:NDBD 3dB, see CALCulate<n>:MARKer<m>:FUNCtion:NDBDown on page 98
CALC:MARK1:FUNC:NDBD:RES? , see CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:RESult? on page 100
CALC:MARK:FUNC:NDBD:QFAC?, see CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:QFACtor on page 100
CALC:MARK1:FUNC:NDBD:FREQ? (span > 0), see CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:FREQuency? on page 99
CALC:MARK1:FUNC:NDBD:TIME? (span = 0), see CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:TIME? on page 101

Marker Peak List
Opens the "Peak List" submenu to define criteria for the sort order and the contents of the peak list. For each listed peak the frequency ("Stimulus") and level ("Response") values are given. In addition, the peaks are indicated in the trace display. A maximum of 50 entries are listed.

Remote command:
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:COUNt? on page 97
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:X on page 97
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:Y? on page 98

Peak List On/Off ← Marker Peak List
Activates/deactivates the marker peak list. If activated, the peak list is displayed and the peaks are indicated in the trace display.

Remote command:
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STAT on page 93

Sort Mode Freq/Lvl ← Marker Peak List
Defines the criteria for sorting:

"Freq" sorting in ascending order of frequency values (span > 0) or time values (span = 0)

"Lvl" sorting in ascending order of the level

Remote command:
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT on page 97

Max Peak Count ← Marker Peak List
Defines the maximum number of peaks to be determined and displayed.

Remote command:
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE on page 93

Peak Excursion ← Marker Peak List
Opens an edit dialog box for level measurements to enter the minimum level value by which a signal must rise or fall so that it will be identified as a maximum or a minimum by the search functions. Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

For more information see "Specifying the suitable peak excursion" and "Effect of different peak excursion settings".

Remote command:
`CALCulate<n>:MARKer<m>:PEXCursion` on page 101

Left Limit ← Marker Peak List
Opens an edit dialog box to enter a value for the lower limit (left vertical line: S1 for span > 0; T1 for zero span). The search is performed between the lines of the left and right limit (see also Right Limit softkey).

Remote command:
`CALCulate<n>:MARKer<m>:X:SLIMits:LEFT` on page 103

Right Limit ← Marker Peak List
Opens an edit dialog box to enter a value for the upper limit (left vertical line: S2 for span > 0; T2 for zero span). The search is performed between the lines of the left and right limit (see also Left Limit softkey). If no value is set, the upper limit corresponds to the stop frequency.

Remote command:
`CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT` on page 104

Threshold ← Marker Peak List
Opens an edit dialog box to define the threshold line. The threshold line represents the lower level limit for a "Peak" search and the upper level limit for a "Min" search.

Remote command:
`CALCulate<n>:THReshold:STATe` on page 95
`CALCulate<n>:THReshold` on page 95

ASCII File Export ← Marker Peak List
Opens the "ASCII File Export Name" dialog box and saves the active peak list in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the marker data. For details on an ASCII file see chapter 2.1.10, "ASCII File Export Format", on page 23.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see "Decim Sep" on page 61).

Remote command:
`FORMat:DEXPort:DSEParator` on page 177
`MMEMory:STORe<n>:LIST` on page 175

Decim Sep ← Marker Peak List
Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:
`FORMat:DEXPort:DSEParator` on page 177

Marker Number ← Marker Peak List
If enabled, the determined peaks are indicated by their corresponding marker number in the trace display.

Remote command:
`CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:ANN:LAB:STAT` on page 92

2.2.12 Softkeys of the Input/Output Menu

The following table shows all softkeys available in the "Input/Output" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Input (AC/DC)....74
Noise Source....75
Video Output....75
Tracking Generator....75
Power Sensor....75
Trigger Out....75
External Mixer....75
Probe Config....76
Signal Source....76
└ Input Path....76
└ Connected Device....76
└ Input Sample Rate....76
└ Full Scale Level....76
└ Level Unit....77
└ Adjust Reference Level to Full Scale Level....77
EXIQ....77
└ TX Settings....77
└ RX Settings....77
└ Send To....77
└ Firmware Update....77
└ R&S Support....77
└ DigIConf....78
Digital IQ Info....78

Input (AC/DC)
Toggles the RF input of the R&S FSV between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:
INPut:COUPling on page 171

Noise Source
Switches the supply voltage for an external noise source on or off. For details on connectors refer to the R&S FSV Quick Start Guide, "Front and Rear Panel" chapter.

Remote command:
DIAGnostic<n>:SERVice:NSOurce on page 177

Video Output
Sends a video output signal according to the measured level to the connector on the rear panel of the R&S FSV.

Note: Video output does not return valid values in IQ or FFT mode.

Remote command:
OUTP:IF VID, see OUTPut:IF[:SOURce] on page 175

Tracking Generator
This softkey is only available if the R&S FSV option Tracking Generator (R&S FSV-B9) or External Tracking Generator (R&S FSV-B10) or both are installed. It is not available in I/Q Analyzer mode.

For details see the base unit description.

Power Sensor
For precise power measurement a power sensor can be connected to the instrument via the front panel (USB connector) or the rear panel (power sensor, option R&S FSV-B5). The Power Sensor Support firmware option (R&S FSV-K9) provides the power measurement functions for this test setup.

This softkey is only available if the R&S FSV option Power Sensor (R&S FSV-K9) is installed.

For details see the chapter "Instrument Functions Power Sensor (K9)" in the base unit description.

This softkey is available for RF measurements.

Trigger Out
Sets the Trigger Out port in the Additional Interfaces (option R&S FSV-B5 only) to low or high. Thus, you can trigger an additional device via the external trigger port, for example.

Remote command:
OUTPut:TRIGger on page 177

External Mixer
Opens the submenu for the external mixer.

For details see the base unit description.

Probe Config
With firmware R&S FSV 1.61SP2 or newer, active probes are supported (via an adapter). This softkey opens an edit dialog box to activate and configure a connected probe which is to provide an input signal. It is only available if a probe is connected to the instrument's RF INPUT and USB connectors.

For details see the base unit Operating Manual.

Remote command:
`PROBe[:STATe]` on page 114
`PROBe:SETup:MODE` on page 114

Signal Source
Opens a dialog box to select the signal source.

For "Digital Baseband (I/Q)", the source can also be configured here.

Input Path ← Signal Source
Defines whether the "RF Radio Frequency" or the "Digital IQ" input path is used for measurements. "Digital IQ" is only available if option R&S FSV-B17 (R&S Digital I/Q Interface) is installed.

Note: Note that the input path defines the characteristics of the signal, which differ significantly between the RF input and digital input.

Remote command:
`INPut:SELect` on page 175

Connected Device ← Signal Source
Displays the name of the device connected to the optional R&S Digital I/Q Interface (R&S FSV-B17) to provide Digital IQ input. The device name cannot be changed here.

The device name is unknown.

Remote command:
`INPut:DIQ:CDEVice` on page 171

Input Sample Rate ← Signal Source
Defines the sample rate of the digital I/Q signal source. This sample rate must correspond with the sample rate provided by the connected device, e.g. a generator.

Remote command:
`INPut:DIQ:SRATe` on page 173

Full Scale Level ← Signal Source
The "Full Scale Level" defines the level that should correspond to an I/Q sample with the magnitude "1".

The level can be defined either in dBm or Volt.

Remote command:
`INPut:DIQ:RANGe[:UPPer]` on page 172

Level Unit ← Signal Source
Defines the unit used for the full scale level.

Remote command:
`INPut:DIQ:RANGe[:UPPer]:UNIT` on page 173

Adjust Reference Level to Full Scale Level ← Signal Source
If enabled, the reference level is adjusted to the full scale level automatically if any change occurs.

Remote command:
`INPut:DIQ:RANGe:COUPling` on page 172

EXIQ
Opens a configuration dialog box for an optionally connected R&S EX-IQ-BOX and a submenu to access the main settings quickly.

Note: The EX-IQ-Box functionality is not supported for R&S FSV models 1321.3008Kxx.

If the optional R&S DigIConf software is installed, the submenu consists only of one key to access the software. **Note that R&S DigIConf requires a USB connection (not LAN!) from the R&S FSV to the R&S EX-IQ-BOX in addition to the R&S Digital I/Q Interface connection. R&S DigIConf version 2.10 or higher is required.**

For typical applications of the R&S EX-IQ-BOX see also the description of the R&S Digital I/Q Interface (R&S FSV-B17) in the base unit manual.

For details on configuration see the "R&S®Ex I/Q Box - External Signal Interface Module Manual".

For details on installation and operation of the R&S DigIConf software, see the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".

TX Settings ← EXIQ
Opens the "EX-IQ-BOX Settings" dialog box to configure the R&S FSV for digital output to a connected device ("Transmitter" Type).

RX Settings ← EXIQ
Opens the "EX-IQ-BOX Settings" dialog box to configure the R&S FSV for digital input from a connected device ("Receiver" Type).

Send To ← EXIQ
The configuration settings defined in the dialog box are transferred to the R&S EX-IQ-BOX.

Firmware Update ← EXIQ
If a firmware update for the R&S EX-IQ-BOX is delivered with the R&S FSV firmware, this function is available. In this case, when you select the softkey, the firmware update is performed.

R&S Support ← EXIQ
Stores useful information for troubleshooting in case of errors.

This data is stored in the `C:\R_S\Instr\user\Support` directory on the instrument.

If you contact the Rohde&Schwarz support to get help for a certain problem, send these files to the support in order to identify and solve the problem faster.

DigIConf ← EXIQ
Starts the optional R&S DigIConf application. This softkey is only available if the optional software is installed.

To return to the R&S FSV application, press any key on the front panel. The application is displayed with the "EXIQ" menu, regardless of which key was pressed.

For details on the R&S DigIConf application, see the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".

Note: If you close the R&S DigIConf window using the "Close" icon, the window is minimized, not closed.
If you select the "File > Exit" menu item in the R&S DigIConf window, the application is closed. Note that in this case the settings are lost and the EX-IQ-BOX functionality is no longer available until you restart the application using the "DigIConf" softkey in the R&S FSV once again.

Remote command:
Remote commands for the R&S DigIConf software always begin with `SOURce:EBOX`.
Such commands are passed on from the R&S FSV to the R&S DigIConf automatically which then configures the R&S EX-IQ-BOX via the USB connection.
All remote commands available for configuration via the R&S DigIConf software are described in the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".
Example 1:
```
SOURce:EBOX:*RST
SOURce:EBOX:*IDN?
```
Result:
"Rohde&Schwarz,DigIConf,02.05.436 Build 47"
Example 2:
```
SOURce:EBOX:USER:CLOCk:REFerence:FREQuency 5MHZ
```
Defines the frequency value of the reference clock.

Digital IQ Info
Displays a dialog box with information on the digital I/Q input and output connection via the optional R&S Digital I/Q Interface (R&S FSV-B17), if available. The information includes:

- Device identification
- Used port
- (Maximum) digital input/output sample rates and maximum digital input/output transfer rates
- Status of the connection protocol
- Status of the PRBS descewing test

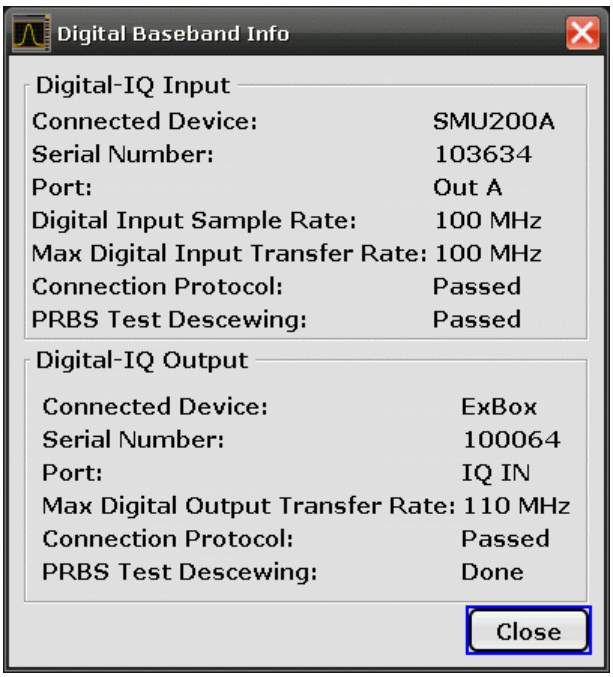

For details see "Interface Status Information" in "Instrument Functions - R&S Digital I/Q Interface (Option R&S FSV-B17)" in the description of the base unit.

Remote command:
`INPut:DIQ:CDEVice` on page 171

2.3 Remote Commands of the Analog Demodulation (R&S FSV–K7)

In this section all remote control commands specific to the Analog Demodulation option are described in detail. The abbreviation ADEMOD stands for the Analog Demodulation operating mode. For details on conventions used in this chapter refer to chapter 2.3.1, "Notation", on page 81.

For further information on analyzer or basic settings commands, refer to the corresponding subsystem in the base unit description.

In particular, the following subsystems are identical to the base unit; refer to the base unit description:

- CALCulate:DELTamarker
- CALCulate:MARKer (except for the K7-specific commands described in chapter 2.3.2, "CALCulate Subsystem (Analog Demodulation, R&S FSV–K7)", on page 83)
- INITiate subsystem
- INPut subsystem
- OUTput subsystem

Subsystems of the Analog Demodulation (R&S FSV–K7)

2.3.1 Notation....81
2.3.2 CALCulate Subsystem (Analog Demodulation, R&S FSV–K7)....83
2.3.2.1 CALCulate:MARKer:FUNCtion:ADEMod Subsystem (Analog Demodulation, R&S FSV-K7)....83
2.3.2.2 Other CALCulate commands....89
2.3.2.3 Other Referenced CALCulate Commands....96
2.3.3 DISPlay Subsystem (Analog Demodulation, R&S FSV–K7)....106
2.3.4 INSTrument Subsystem (Analog Demodulation, R&S FSV–K7)....113
2.3.5 PROBe subsystem....113
2.3.6 SENSe Subsystem (Analog Demodulation, R&S FSV–K7)....114
2.3.6.1 Trace Mode Result Types....115
2.3.6.2 Formats for Returned Values: ASCII Format and Binary Format....115
2.3.6.3 SENSe:ADEMod Subsystem (Analog Demodulation, R&S FSV-K7)....116
2.3.6.4 SENSe:ADJust Subsystem....141
2.3.6.5 SENSe:BANDwidth Subsystem (Analog Demodulation, R&S FSV–K7)....143
2.3.6.6 SENSe:FILTer Subsystem (Analog Demodulation, R&S FSV-K7)....143
2.3.6.7 SENSe:FREQuency Subsystem (Analog Demodulation, R&S FSV–K7)....148
2.3.6.8 SENSe:SWEep Subsystem (Analog Demodulation, R&S FSV–K7)....150
2.3.6.9 Other commands in the SENSe subsystem....152
2.3.7 TRACe Subsystem (Analog Demodulation, R&S FSV–K7)....154
2.3.7.1 Commands of the TRACe subsystem....154
2.3.7.2 Formats for Returned Values: ASCII Format and Binary Format....155
2.3.8 TRIGger Subsystem (Analog Demodulation, R&S FSV–K7)....156
2.3.9 UNIT Subsystem (Analog Demodulation, R&S FSV–K7)....163
2.3.10 Other Commands Referenced in this Manual....164
2.3.10.1 CALCulate:DELTamarker Subsystem (Analog Demodulation, R&S FSV–K7)....164
2.3.10.2 INPut subsystem....170
2.3.10.3 MMEMory subsystem....175
2.3.10.4 OUTPut subsystem....176
2.3.10.5 Other Commands....177

2.3.1 Notation

In the following sections, all commands implemented in the instrument are first listed and then described in detail, arranged according to the command subsystems. The notation is adapted to the SCPI standard. The SCPI conformity information is included in the individual description of the commands.

Individual Description

The individual description contains the complete notation of the command. An example for each command, the *RST value and the SCPI information are included as well.

The options and operating modes for which a command can be used are indicated by the following abbreviations:

Abbreviation	Description
A	spectrum analysis
A-F	spectrum analysis – span > 0 only (frequency mode)
A-T	spectrum analysis – zero span only (time mode)
ADEMOD	analog demodulation (option R&S FSV-K7)
BT	Bluetooth (option R&S FSV-K8)
CDMA	CDMA 2000 base station measurements (option R&S FSV-K82)
EVDO	1xEV-DO base station analysis (option R&S FSV-K84)
GSM	GSM/Edge measurements (option R&S FSV-K10)
IQ	IQ Analyzer mode
OFDM	WiMAX IEEE 802.16 OFDM measurements (option R&S FSV-K93)
OFDMA/WiBro	WiMAX IEEE 802.16e OFDMA/WiBro measurements (option R&S FSV-K93)
NF	Noise Figure measurements (R&S FSV-K30)
PHN	Phase Noise measurements (R&S FSV-K40)
PSM	Power Sensor measurements (option R&S FSV-K9)
SFM	Stereo FM measurements (optionR&S FSV-K7S)
SPECM	Spectogram mode (option R&S FSV-K14)
TDS	TD-SCDMA base station / UE measurements (option R&S FSV-K76/K77)
VSA	Vector Signal Analysis (option R&S FSV-K70)
WCDMA	3GPP Base Station measurements (option R&S FSV-K72), 3GPP UE measurements (option R&S FSV-K73)
WLAN	WLAN TX measurements (option R&S FSV-K91)

The spectrum analysis mode is implemented in the basic unit. For the other modes, the corresponding options are required.

Upper/Lower Case Notation

Upper/lower case letters are used to mark the long or short form of the key words of a command in the description. The instrument itself does not distinguish between upper and lower case letters.

Special Characters

|	A selection of key words with an identical effect exists for several commands. These keywords are indicated in the same line; they are separated by a vertical stroke. Only one of these keywords needs to be included in the header of the command. The effect of the command is independent of which of the keywords is used.

Example:

```
SENSe:FREQuency:CW|:FIXed
```

The two following commands with identical meaning can be created. They set the frequency of the fixed frequency signal to 1 kHz:

```
SENSe:FREQuency:CW 1E3
```

```
SENSe:FREQuency:FIXed 1E3
```

A vertical stroke in parameter indications marks alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.

Example: Selection of the parameters for the command

```
[SENSe<1…4>:]AVERage<1…4>:TYPE VIDeo | LINear
```

[]	Key words in square brackets can be omitted when composing the header. The full command length must be accepted by the instrument for reasons of compatibility with the SCPI standards. Parameters in square brackets can be incorporated optionally in the command or omitted as well.

{}	Parameters in braces can be incorporated optionally in the command, either not at all, once or several times.

Description of Parameters

Due to the standardization, the parameter section of SCPI commands consists always of the same syntactical elements. SCPI has therefore specified a series of definitions, which are used in the tables of commands. In the tables, these established definitions are indicated in angled brackets (<…>) and is briefly explained in the following.

For details see the chapter "SCPI Command Structure" in the base unit description.

<Boolean>

This keyword refers to parameters which can adopt two states, "on" and "off". The "off" state may either be indicated by the keyword OFF or by the numeric value 0, the "on" state is indicated by ON or any numeric value other than zero. Parameter queries are always returned the numeric value 0 or 1.

<numeric_value> <num>

These keywords mark parameters which may be entered as numeric values or be set using specific keywords (character data). The following keywords given below are permitted:

- `MAXimum`: This keyword sets the parameter to the largest possible value.
- `MINimum`: This keyword sets the parameter to the smallest possible value.
- `DEFault`: This keyword is used to reset the parameter to its default value.
- `UP`: This keyword increments the parameter value.
- `DOWN`: This keyword decrements the parameter value.

The numeric values associated to MAXimum/MINimum/DEFault can be queried by adding the corresponding keywords to the command. They must be entered following the quotation mark.

Example:

```
SENSe:FREQuency:CENTer? MAXimum
```

Returns the maximum possible numeric value of the center frequency as result.

<arbitrary block program data>

This keyword is provided for commands the parameters of which consist of a binary data block.

2.3.2 CALCulate Subsystem (Analog Demodulation, R&S FSV–K7)

The CALCulate subsystem contains commands for converting instrument data, transforming and carrying out corrections. These functions are carried out subsequent to data acquisition, i.e. following the SENSe subsystem.

2.3.2.1 CALCulate:MARKer:FUNCtion:ADEMod Subsystem (Analog Demodulation, R&S FSV-K7)....83
2.3.2.2 Other CALCulate commands....89
2.3.2.3 Other Referenced CALCulate Commands....96

2.3.2.1 CALCulate:MARKer:FUNCtion:ADEMod Subsystem (Analog Demodulation, R&S FSV-K7)

The CALCulate:MARKer:FUNCtion:ADEMod subsystem contains the marker functions for the Analog Demodulation mode.

Commands of the CALCulate:MARKer:FUNCtion:ADEMod Subsystem

CALCulate<n>:MARKer:FUNCtion:ADEMod:AFRequency[:RESult<t>]?....84
CALCulate<n>:MARKer:FUNCtion:ADEMod:AM[:RESult<t>]?....84
CALCulate<n>:MARKer:FUNCtion:ADEMod:CARRier[:RESult<t>]?....85
CALCulate<n>:MARKer:FUNCtion:ADEMod:FERRor[:RESult<t>]?....86

CALCulate<n>:MARKer:FUNCtion:ADEMod:FM[:RESult<t>]?....86
CALCulate<n>:MARKer:FUNCtion:ADEMod:PM[:RESult<t>]?....87
CALCulate<n>:MARKer:FUNCtion:ADEMod:SINad:RESult<t>?....88
CALCulate<n>:MARKer:FUNCtion:ADEMod:THD:RESult<t>?....88

CALCulate<n>:MARKer:FUNCtion:ADEMod:AFRequency[:RESult<t>]?

This command queries the audio frequency with analog demodulation in the specified window.

If several demodulation modes are activated simultaneously (e.g. with the `[SENSe:]ADEMod:FM[:TDOMain][:TYPE]` command, the audio frequency of the display mode selected with `CALCulate<n>:FEED` on page 89 is returned.

Suffix:

<n> 1
window

<t> 1...6
irrelevant

Example: `ADEM ON`, see `[SENSe:]ADEMod[:STATe]` on page 117
Switches on analog demodulator
`CALC:FEED 'XTIM:AM:TDOM'`, see `CALCulate<n>:FEED` on page 89
Switches on AM result display.
`DISP:TRAC ON`, see `DISPlay[:WINDow<n>]:TRACe<t>[:STATe]` on page 109
Switches the trace on.
`CALC:MARK:FUNC:ADEM:AFR?`
Queries the audio frequency.

Usage: Query only

Mode: ADEMOD

CALCulate<n>:MARKer:FUNCtion:ADEMod:AM[:RESult<t>]? <Result>
CALCulate<n>:MARKer:FUNCtion:ADEMod:AM[:RESult<t>]?? <MeasType>

This command queries the results of the AM modulation measurement.

Suffix:

<n> 1...4
irrelevant

<t> 1...6
trace 1, 2, 3, 4, 5 or 6

Parameters:

<Result> The result of the selected measurement type is returned.

Query parameters:

<MeasType> PPEak | MPEak | MIDDle | RMS

PPEak
Measurement with detector Pluspeak (+PK)

MPEak
Measurement with detector MinusPeak (-PK)

MIDDle
Averaging ±PK/2

RMS
RMS measurement

Example: `ADEM ON` (see `[SENSe:]ADEMod[:STATe]` on page 117)
Switches on the analog demodulator.
`CALC:FEED 'XTIM:AM:TDOM'`, see `CALCulate<n>:FEED` on page 89
Switches on the AM result display.
`DISP:TRAC ON`, see `DISPlay[:WINDow<n>]:TRACe<t>[:STATe]` on page 109
Switches on the trace.
`CALC:MARK:FUNC:ADEM:AM? PPE`
Queries the peak value.

Usage: Query only

Mode: ADEMOD

CALCulate<n>:MARKer:FUNCtion:ADEMod:CARRier[:RESult<t>]?

This command queries the carrier power.

With RF Power result display, the carrier power is determined from trace 1 to 6 indicated in the suffix. With all other result displays, the carrier power is determined from the current trace data (CLR/WRITE trace).

Suffix:

<n> 1...4
irrelevant

<t> 1...6
irrelevant

Example: `ADEM ON` (see `[SENSe:]ADEMod[:STATe]` on page 117)
Switches on analog demodulator
`CALC:FEED 'XTIM:RFP'`, see `CALCulate<n>:FEED` on page 89
Switches on RF power result display
`CALC:MARK:FUNC:ADEM:CARR?`
Queries the carrier power

Usage: Query only

Mode: ADEMOD

CALCulate<n>:MARKer:FUNCtion:ADEMod:FERRor[:RESult<t>]?

This command queries the frequency error with FM and PM demodulation. The frequency error is determined from the current measurement data (CLR/WRITE trace).

The offset thus determined differs from that calculated in the `[SENSe:]ADEMod:FM:OFFSet` on page 128 command since, for determination of the frequency deviation, the modulation is removed by means of low pass filtering, producing results that are different from those obtained by averaging with the SENSe command.

Suffix:

<n> 1...4
irrelevant

<t> 1...6
irrelevant

Example: `ADEM ON` (see `[SENSe:]ADEMod[:STATe]` on page 117)
Switches on analog demodulator
`CALC:FEED 'XTIM:FM:TDOM'`, see `CALCulate<n>:FEED` on page 89
Switches on FM result display
`CALC:MARK:FUNC:ADEM:FERR?`
Queries the frequency error of trace 1

Usage: Query only

Mode: ADEMOD

CALCulate<n>:MARKer:FUNCtion:ADEMod:FM[:RESult<t>]? <Result>
CALCulate<n>:MARKer:FUNCtion:ADEMod:FM[:RESult<t>]?? <MeasType>

This command queries the results of FM modulation measurement.

Suffix:

<n> 1...4
irrelevant

<t> 1...6
trace 1, 2, 3, 4, 5 or 6

Parameters:

<Result> The result of the selected measurement type is returned.

Query parameters:

<MeasType> PPEak | MPEak | MIDDle | RMS

PPEak
Measurement with detector Pluspeak (+PK)

MPEak
Measurement with detector MinusPeak (-PK)

MIDDle
Averaging ±PK/2

RMS
RMS measurement

Example: `ADEM ON` (see `[SENSe:]ADEMod[:STATe]` on page 117)
Switches on the analog demodulator.
`CALC:FEED 'XTIM:FM:TDOM'`, see `CALCulate<n>:FEED` on page 89
Switches on the FM result display.
`CALC:MARK:FUNC:ADEM:FM? PPE`
Queries the peak value.

Usage: Query only

Mode: ADEMOD

CALCulate<n>:MARKer:FUNCtion:ADEMod:PM[:RESult<t>]? <Result>
CALCulate<n>:MARKer:FUNCtion:ADEMod:PM[:RESult<t>]?? <MeasType>

This command queries the results of PM modulation measurement of analog demodulation.

Suffix:

<t> 1...6
trace 1, 2, 3, 4, 5 or 6

<n> 1...4
irrelevant

Parameters:

<Result> The result of the selected measurement type is returned.

Query parameters:

<MeasType> PPEak | MPEak | MIDDle | RMS

PPEak
Measurement with detector Pluspeak (+PK)

MPEak
Measurement with detector MinusPeak (-PK)

MIDDle
Averaging ±PK/2

RMS
RMS measurement

Example: `ADEM ON` (see `[SENSe:]ADEMod[:STATe]` on page 117)
Switches on the analog demodulator.
`CALC:FEED 'XTIM:FM:TDOM'`, see `CALCulate<n>:FEED` on page 89
Switches on the FM result display.
`CALC:MARK:FUNC:ADEM:PM? PPE`
Queries the peak value.

Usage: Query only

Mode: ADEMOD

CALCulate<n>:MARKer:FUNCtion:ADEMod:SINad:RESult<t>?

This command queries the result of the SINAD measurement in the specified window.

Suffix:
<n> 1...4
window

<t> 1...6
trace 1, 2, 3, 4, 5 or 6

Example: `ADEM ON` (see `[SENSe:]ADEMod[:STATe]` on page 117)
Switches on analog demodulator
`CALC:FEED 'XTIM:FM:AFSP'`, see `CALCulate<n>:FEED` on page 89
Switches on AF spectrum of FM
`CALC:MARK:FUNC:ADEM:SIN:RES?`
Queries SINAD value

Usage: Query only

Mode: ADEMOD

CALCulate<n>:MARKer:FUNCtion:ADEMod:THD:RESult<t>?

This command queries the result of the THD measurement in the specified window.

Suffix:
<n> 1...4
window

<t> 1...6
trace 1, 2, 3, 4, 5 or 6

Example: `ADEM ON` (see `[SENSe:]ADEMod[:STATe]` on page 117)
Switches on analog demodulator
`CALC:FEED 'XTIM:FM:AFSP'`, see `CALCulate<n>:FEED` on page 89
Switches on AF spectrum of FM
`DISP:TRAC ON`, see `DISPlay[:WINDow<n>]:TRACe<t>[:STATe]` on page 109
Switches on the trace
`CALC:MARK:FUNC:ADEM:THD:RES?`
Queries THD result

Usage: Query only

Mode: ADEMOD

2.3.2.2 Other CALCulate commands

CALCulate<n>:FEED <Evaluation>

This command selects the evaluation method of the measured data that is to be displayed in the specified window.

The suffix <1...6> indicates which of the traces is evaluated in the result summary. Note that all result summaries are identical, as the results of all evaluations are included in the summary.

Suffix:
<n> 1...4
window

Parameters:

<Evaluation> XTIM:AM:RELative[:TDOMain] | XTIM:AM:RELative:AFSPectrum<1…6> | XTIM:AM[:ABSolute][:TDOMain] | XTIM:RFPower[:TDOMain] | XTIM:FM[:TDOMain] | XTIM:FM:AFSPectrum<1…6> | XTIM:PM[:TDOMain] | XTIM:PM:AFSPectrum<1…6> | XTIM:AMSummary<1…6>[:ABSolute] | XTIM:AMSummary<1…6>:RELative | XTIM:FMSummary<1…6> | XTIM:PMSummary<1…6> | XTIM:SPECtrum | XTIM:SUMMary<1...6> | XTIM:RFPower[:TDOMain] | XTIM:SPECtrum | XTIM:SUMMary<1...6> | XFRequency:SFM:LEFT | XFRequency:SFM:RIGHt | XFRequency:SFM:MPX | XFRequency:SFM:MONO | XFRequency:SFM:STEReo | XFRequency:SFM:RDS | XFRequency:SFM:PILot | XTIMe:SFM:LEFT | XTIMe:SFM:RIGHt | XTIMe:SFM:MPX | XTIMe:SFM:MONO | XTIMe:SFM:STEReo | XTIMe:SFM:RDS | XTIMe:SFM:PILot

XTIM:AM:RELative[:TDOMain]
Demodulated AM signal in time domain

XTIM:AM:RELative:AFSPectrum<1…6>
AF spectrum of the demodulated AM signal

XTIM:AM[:ABSolute][:TDOMain]
RF signal in time domain (RF power)
Same as 'XTIM:RFPower'

XTIM:RFPower[:TDOMain]
RF power of the signal (RF signal in time domain)

XTIM:FM[:TDOMain]
Demodulated FM signal in time domain

XTIM:FM:AFSPectrum<1…6>
AF spectrum of the demodulated FM signal

XTIM:PM[:TDOMain]
Demodulated PM signal in time domain

XTIM:PM:AFSPectrum<1…6>
AF spectrum of the demodulated PM signal

XTIM:AMSummary<1…6>[:ABSolute]
Result summary for RF signal

XTIM:AMSummary<1…6>:RELative
Result summary for demodulated AM signal

XTIM:FMSummary<1…6>
Result summary for demodulated FM signal

XTIM:PMSummary<1…6>
Result summary for demodulated PM signal

XTIM:SPECtrum

RF spectrum of the signal determined from the measured data via FFT

XTIM:SUMMary<1...6>
Summary of all evaluation lists

XFRequency:SFM:LEFT
Left channel spectrum of FM stereo signal

XFRequency:SFM:RIGHt
Right channel spectrum of FM stereo signal

XFRequency:SFM:MPX
MPX channel spectrum of FM stereo signal

XFRequency:SFM:MONO
Mono channel spectrum of FM stereo signal

XFRequency:SFM:STEReo
Stereo channel spectrum of FM stereo signal

XFRequency:SFM:RDS
RDS channel spectrum of FM stereo signal

XFRequency:SFM:PILot
Pilot channel spectrum of FM stereo signal

XTIMe:SFM:LEFT
Left channel of FM stereo signal in time domain

XTIMe:SFM:RIGHt
Right channel of FM stereo signal in time domain

XTIMe:SFM:MPX
MPX channel of FM stereo signal in time domain

XTIMe:SFM:MONO
Mono channel of FM stereo signal in time domain

XTIMe:SFM:STEReo
Stereo channel of FM stereo signal in time domain

XTIMe:SFM:RDS
RDS channel of FM stereo signal in time domain

XTIMe:SFM:PILot
Pilot channel of FM stereo signal in time domain

Example:
```
INST:SEL ADEM
```
(see INSTrument[:SELect] on page 113)
Activates analog demodulator.
```
CALC:FEED 'XTIM:FM'
```
Selects the display of the FM signal.

Usage: SCPI confirmed

Mode: ADEMOD, SFM

CALCulate<n>:FORMat <Limitation>

This command activates the limitation to ±180°.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Limitation> PHASe | UPHase

PHASe
Limitation to ±180°

UPHase
Unwrapped

*RST: UPHase

Example: `CALC:FORM PHAS`
Activates the limitation to ±180°.

Usage: SCPI confirmed

Mode: ADEMOD

CALCulate<n>:MARKer<m>:FUNCtion:PNOise:RESult?

This command queries the result of the phase noise measurement at the specified marker in the specified window.

A complete sweep with synchronization to the sweep end must be performed between switching on the function and querying the measured value in order to obtain a correct query result. This is only possible in single sweep mode.

Suffix:
<n> 1...4
window

<m> 1...16
marker

Example: `INIT:CONT OFF`
Switches to single sweep mode.
`CALC:MARK2 ON`
Switches on marker 2.
`CALC:MARK2:FUNC:PNO ON`
Switches on the phase noise marker 2.
`INIT;*WAI`
Starts a sweep and waits for the end.
`CALC:MARK2:PNO:RES?`
Outputs the phase noise result of marker 2.

Usage: Query only

Mode: ADEMOD

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:ANN:LAB:STAT <State>

This command turns labels for peaks found during a peak search on and off.

The labels correspond to the marker number in the marker peak list.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<State> **ON | OFF**

*RST: ON

Example: `CALC:MARK:FUNC:FPE:ANN:LAB:STAT OFF`
Removes the peak labels from the diagram

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE <MaxNoPeaks>

This command defines the maximum number of peaks the marker peak list may contain.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<MaxNoPeaks> Maximum number of peaks to be determined.

*RST: 50

Example: `CALC:MARK:FUNC:FPE:LIST:SIZE 10`
The marker peak list will contain a maximum of 10 peaks.

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STAT <State>

This command turns a peak search on and off.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<State> ON | OFF

*RST: OFF

Example: `CALC:MARK:FUNC:FPE:STAT ON`
Activates marker peak search

CALCulate<n>:MARKer<m>:FUNCtion:PNOise <State>

This command switches the phase noise measurement for the specified marker on or off in the specified window. The phase noise power density is measured at the position of the markers. The result can be queried with `CALCulate<n>:MARKer<m>:FUNCtion:PNOise:RESult?` on page 92.

Suffix:
<n> 1...4
window

<m> 1...16
marker

Parameters:
<State> ON | OFF

*RST: OFF

Example: `CALC:MARK2:FUNC:PNO ON`
Switches on the phase noise marker 2.

Mode: ADEMOD

CALCulate<n>:MARKer<m>:FUNCtion:ZOOM <Range>

This command defines the range to be zoomed around marker 1. Marker 1 is activated first, if necessary.

The subsequent frequency sweep is stopped at the marker position and the frequency of the signal is counted. This frequency becomes the new center frequency, and the zoomed span is set.

Note that you should perform a complete measurement with synchronization to the end of the measurement. This is only possible for single sweeps.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<Range> **<numeric_value>**

Example: `INIT:CONT OFF`
Switches to single sweep mode
`CALC:MARK:FUNC:ZOOM 1kHz;*WAI`
Activates zooming and waits for its end.

CALCulate<n>:MARKer<m>:LINK <DisplayType>

Links the markers in all displays of the specified type.

Suffix:
<n> 1...4
window

<m> 1...16
marker

Parameters:

<DisplayType> TIME | SPECtrum | BOTH | NONE

TIME
Links the markers in all time domain diagrams

SPECtrum
Links the markers in all AF Spectrum displays

BOTH
Links the markers both in the time domain diagrams and in the AF Spectrum displays

NONE
Markers are not linked.

*RST: NONE

Example: `CALC1:MARK1:LINK TIME`
Links the marker 1 in all time domain diagrams in screen A.

Mode: ADEMOD

CALCulate<n>:THReshold <Threshold>

This command defines a threshold value for the marker peak search.

A threshold line is automatically turned on.

Suffix:

<n> irrelevant

Parameters:

<Threshold> The unit depends on `CALCulate<n>:UNIT:POWer`.

*RST: (STATe to OFF)

Example: `CALC:THR -82DBM`
Sets the threshold value to -82 dBm.

CALCulate<n>:THReshold:STATe <State>

This command turns the threshold line for the marker peak search on and off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:THR:STAT ON`
Switches on the threshold line.

CALCulate<n>:UNIT:ANGLe <Unit>

This command selects the unit for angles.

The unit is defined globally for all windows.

Suffix:
<n> irrelevant

Parameters:
<Unit> DEG | RAD
*RST: RAD

Example: `CALC:UNIT:ANGL DEG`

Mode: ADEMOD

CALCulate<n>:UNIT:POWer <Unit>

This command selects the unit of the y-axis.

The unit applies to all measurement windows.

Suffix:
<n> irrelevant

Parameters:
<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT | DBUA | AMPere
*RST: dBm

Example: `CALC:UNIT:POW DBM`
Sets the power unit to dBm.

CALC:UNIT:THD <Mode>

Selects the unit for THD measurements.

Parameters:
<Mode> DB | PCT
*RST: DB

Example: `CALC:UNIT:THD PCT`

Mode: ADEMOD, SFM

2.3.2.3 Other Referenced CALCulate Commands

CALCulate<n>:MARKer<m>:AOFF

This command all markers off, including delta markers and marker measurement functions.

Suffix:
<n> Selects the measurement window.

<m> depends on mode
irrelevant

Example: CALC:MARK:AOFF
Switches off all markers.

Usage: Event

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:COUNt?

This command queries the number of peaks that have been found during a peak search.

Suffix:
<n> irrelevant

<m> Selects the marker.

Return values:
<NumberOfPeaks>

Example: CALC:MARK:FUNC:FPE 3
Searches the 3 highest maxima for trace 1
CALC:MARK:FUNC:FPE:COUN?
Queries the number of maxima found

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT <SortMode>

This command selects the order in which the results of a peak search are returned.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<SortMode> **X**
Sorts the peaks according to increasing position on the x-axis.
Y
Sorts the peaks according to decreasing position on the y-axis.

Example: CALC:MARK:FUNC:FPE:SORT Y
Sets the sort mode to decreasing y values

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:X

This command queries the position of the peaks on the x-axis.

The order depends on the sort order that has been set with CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT on page 97.

The number of peaks on the number that has been set with CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:COUNt?.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<PeakPosition> Position of the peaks on the x-axis. The unit depends on the measurement.

Example:

```
CALC:MARK:FUNC:FPE:SORT Y
```
Sets the sort mode to decreasing y values
```
CALC:MARK:FUNC:FPE 3
```
Searches the 3 highest maxima for trace 1
```
CALC:MARK:FUNC:FPE:COUN?
```
Queries the number of maxima found
```
CALC:MARK:FUNC:FPE:X?
```
Queries the frequencies (span <> 0) or. time (span = 0) of the maxima found
```
107.5E6,153.8E6,187.9E6
```
frequencies in increasing order
```
2.05E-3,2.37E-3, 3.71e-3
```
times in increasing order

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:Y?

This command queries the position of the peaks on the y-axis.

The order depends on the sort order that has been set with `CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT` on page 97.

The number of peaks on the number that has been set with `CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:COUNt?`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<PeakPosition> Position of the peaks on the y-axis. The unit depends on the measurement.

Example:

```
CALC:MARK:FUNC:FPE:SORT Y
```
Sets the sort mode to decreasing y values
```
CALC:MARK:FUNC:FPE 3
```
Searches the 3 highest maxima for trace 1
```
CALC:MARK:FUNC:FPE:COUN?
```
Queries the number of maxima found
```
CALC:MARK:FUNC:FPE:Y?
```
Queries the levels of the maxima found

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown <Distance>

This command defines the distance of the n dB down markers to the reference marker.

The temporary markers T1 and T2 are positioned n dB below the active reference marker. The frequency and time position of these markers can be queried with `CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:FREQuency?` and `CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:TIME?`. The bandwidth between the markers can be queried with `CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:RESult?`.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<Distance> Distance of the temporary markers to the reference marker in dB.

*RST: 6dB

Example: `CALC:MARK:FUNC:NDBD 3dB`
Sets the level spacing to 3 dB.

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:FREQuency?

This command queries the position of the n dB down markers on the x-axis when measuring in the frequency domain.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Return values:

<Frequency> **<frequency 1>**
absolute frequency of the n dB marker to the left of the reference marker in Hz

<frequency 2>
absolute frequency of the n dB marker to the right of the reference marker in Hz

Example: `INIT:CONT OFF`
Switches to single sweep mode.
`CALC:MARK:FUNC:NDBD ON`
Switches on the n dB down function.
`INIT;*WAI`
Starts a sweep and waits for the end.
`CALC:MARK:FUNC:NDBD:FREQ?`
Outputs the frequencies of the temporary markers.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:QFACtor

This command queries the Q factor (quality) of n dB down measurements.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:
```
INIT:CONT OFF
```
Switches to single sweep mode.
```
CALC:MARK:FUNC:NDBD ON
```
Switches on the n dB down function.
```
INIT;*WAI
```
Starts a sweep and waits for the end.
```
CALC:MARK:FUNC:NDBD:QFAC?
```
Queries the Q factor of the measured bandwidth.

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:RESult?

This command queries the distance of the n dB down markers from each other.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<Distance> The result depends on the span.
In case of frequency domain measurements, the command returns the bandwidth between the two n dB down markers in Hz.
In case of time domain measurements, the command returns the pulse width between the two n dB down markers in seconds.

Example:
```
INIT:CONT OFF
```
Switches to single sweep mode.
```
CALC:MARK:FUNC:NDBD ON
```
Switches on the n dB down function.
```
INIT;*WAI
```
Starts a sweep and waits for the end.
```
CALC:MARK:FUNC:NDBD:RES?
```
Outputs the measured value.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:STATe <State>

This command turns the n dB Down marker function on and off.

Suffix:
<n> Selects the measurement window.

<m> irrelevant

Parameters:
<State> ON | OFF

*RST: OFF

Example: `CALC:MARK:FUNC:NDBD:STAT ON`
Switches on the "N dB Down" function.

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:TIME?

This command queries the position of the n dB down markers on the x-axis when measuring in the time domain.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:
<n> Selects the measurement window.

<m> irrelevant

Return values:
<Time> **<time 1>**
absolute position in time of the n dB marker to the left of the reference marker in seconds

<time 2>
absolute position in time of the n dB marker to the right of the reference marker in seconds

Example: `INIT:CONT OFF`
Switches to single sweep mode
`CALC:MARK:FUNC:NDBD ON`
Switches on the n dB down function.
`INIT;*WAI`
Starts a sweep and waits for the end.
`CALC:MARK:FUNC:NDBD:TIME?`
Outputs the time values of the temporary markers.

Usage: Query only

CALCulate<n>:MARKer<m>:PEXCursion <Excursion>

This command defines the peak excursion

The peak excursion sets the requirements for a peak to be detected during a peak search.

The unit depends on the selected operating mode and measurement.

Mode/Display mode	Unit
Spectrum	dB
ADEMOD, RF display	dB
ADEMOD, AM display	PCT
ADEMOD, FM display	kHz
ADEMOD, PM display	RAD

Suffix:
<n> Selects the measurement window.

<m> irrelevant

Parameters:
<Excursion> The peak excursion is the distance to a trace maximum that must be attained before a new maximum is recognized, or the distance to a trace minimum that must be attained before a new minimum is recognized

*RST: 6dB in "Spectrum" mode and RF displays; 5 PCT in AM displays, 50 kHz in FM displays, (0.5 RAD in PM displays

Example: `CALC:MARK:PEXC 10dB`
Defines peak excursion 10 dB.

CALCulate<n>:MARKer<m>[:STATe] <State>

This command turns markers on and off.

If the corresponding marker number is currently active as a deltamarker, it is turned into a normal marker.

Suffix:
<n> Selects the measurement window.

<m> depends on mode
Selects the marker.

Parameters:
<State> ON | OFF

*RST: OFF

Example: `CALC:MARK3 ON`
Switches on marker 3 or switches to marker mode.

CALCulate<n>:MARKer<m>:TRACe <Trace>

This command selects the trace a marker is positioned on.

The corresponding trace must have a trace mode other than "Blank".

If necessary, the corresponding marker is switched on prior to the assignment.

Suffix:
<n> Selects the measurement window.

<m> depends on mode
Selects the marker.

Parameters:
<Trace> **1 ... 6**
Trace number the marker is positioned on.

Example: `CALC:MARK3:TRAC 2`
Assigns marker 3 to trace 2.

CALCulate<n>:MARKer<m>:X <Position>

This command positions a marker on a particular coordinate on the x-axis.

If marker 2, 3 or 4 is selected and used as delta marker, it is switched to marker mode.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<Position> Numeric value that defines the marker position on the x-axis. The unit is either Hz (frequency domain) or s (time domain) or dB (statistics).

Range: The range depends on the current x-axis range.

Example: `CALC:MARK2:X 1.7MHz`
Positions marker 2 to frequency 1.7 MHz.

CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <Limit>

This command sets the left limit of the marker search range.

If the power measurement in zero span is active, this command limits the evaluation range to the trace.

Note: The function is only available if the search limit for marker and delta marker is switched on (see `CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]`).

Suffix:
<n> Selects the measurement window.

<m> irrelevant

Parameters:

<Limit> The value range depends on the span or sweep time.
The unit is Hz for frequency domain measurements and s for time domain measurements.

Range: 0 to MAX
*RST: left diagram border

Example: `CALC:MARK:X:SLIM ON`
Switches the search limit function on.
`CALC:MARK:X:SLIM:LEFT 10MHz`
Sets the left limit of the search range to 10 MHz.

CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT <Limit>

This command sets the right limit of the marker search range.

If the power measurement in zero span is active, this command limits the evaluation range to the trace.

Note: The function is only available if the search limit for marker and delta marker is switched on (`CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]`).

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<Limit> The value range depends on the span or sweep time.
The unit is Hz for frequency domain measurements and s for time domain measurements.

Range: 0 to MAX
*RST: left diagram border

Example: `CALC:MARK:X:SLIM ON`
Switches the search limit function on.
`CALC:MARK:X:SLIM:RIGH 20MHz`
Sets the right limit of the search range to 20 MHz.

CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>

This command turns marker search limits on and off.

If the power measurement in zero span is active, this command limits the evaluation range on the trace.

Suffix:

<n> Selects the measurement window.

<m> marker

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:MARK:X:SLIM ON`
Switches on search limitation.

CALCulate<n>:MARKer<m>:X:SSIZe <StepSize>

This command defines the step size of the rotary knob for marker or delta marker value changes. It only takes effect in manual operation.

The marker step size is unavailable for statistical measurements.

Suffix:
<n> irrelevant

<m> irrelevant

Parameters:
<StepSize>

STANdard
step size corresponds to space between two pixels

POINts
step size corresponds to space between two measured values (number of measured values is defined via the `[SENSe<n>:]SWEep:POINts` command, see `[SENSe:]SWEep:POINts` on page 152)

*RST: POINts

Example: `CALC:MARK:X:SSIZ STAN`
Sets the measured value step size.

CALCulate<n>:MARKer<m>:Y?

This command queries the measured value of a marker.

The corresponding marker is activated before or switched to marker mode, if necessary.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

If the analog demodulator (option Analog Demodulation, R&S FSV–K7) is activated, the query result is output in the following units:

Result display	Output unit
AM	%
FM	Hz
PM	rad/deg (defined with `CALCulate<n>:UNIT:ANGLe` on page 95)
RF	dB (Range Log or Range Linear %) % (Range Linear dB)

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<Result> The measured value of the selected marker is returned.

Example:

```
INIT:CONT OFF
```
Switches to single sweep mode.
```
CALC:MARK2 ON
```
Switches marker 2.
```
INIT;*WAI
```
Starts a sweep and waits for the end.
```
CALC:MARK2:Y?
```
Outputs the measured value of marker 2.

Usage: Query only

2.3.3 DISPlay Subsystem (Analog Demodulation, R&S FSV–K7)

The DISPLay subsystem controls the selection and presentation of textual and graphic information as well as of measurement data on the display.

DISPlay:MTABle....106
DISPlay[:WINDow<n>]:STATe....107
DISPlay[:WINDow<n>][:SUBWindow<1|2>]:SELect....107
DISPlay[:WINDow<n>]:SSELect?....107
DISPlay[:WINDow<n>]:TRACe<t>:MODE....108
DISPlay[:WINDow<n>]:TRACe<t>[:STATe]....109
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]....109
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE....109
DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous....110
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel....110
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet....111
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition....111
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue....111
DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing....112
DISPlay:WSELect?....112

DISPlay:MTABle <DisplayMode>

This command turns the marker table on and off.

Parameters:

<DisplayMode>

ON
Marker table is displayed.

OFF
Marker table is not displayed.

AUTO
Marker table is only displayed if 2 or more markers are active.

*RST: AUTO

Example: To activate the table display:
`DISP:MTAB ON`
To query the current state of the marker table display:
`DISP:MTAB?`

DISPlay[:WINDow<n>]:STATe <State>

This command activates the measurement specified window.

Suffix:
<n> 1...4
window

Parameters:
<State> ON | OFF

Example: `DISP:WIND2:STAT ON`
Displays a second window (Screen B).

Usage: SCPI confirmed

Mode: ADEMOD

DISPlay[:WINDow<n>][:SUBWindow<1|2>]:SELect

Moves the focus area to the selected window and subwindow.

Suffix:
<n> 1
window

Example: `DISP:WIND2:STAT ON`
Displays a second window (Screen B).
`CALC2:FEED 'XTIMe:FM:AFSPektrum1'`
Displays an AF spectrum diagram of the demodulated FM signal from trace 1 in screen B.
`DISP:WIND2:SEL`
Switches the focus area to the evaluation list of the AF spectrum diagram in screen B.

Usage: SCPI confirmed

Mode: ADEMOD

DISPlay[:WINDow<n>]:SSELect?

Queries the currently selected subwindow.

Suffix:
<n> 1...4
window

Return values:

<Result> 1 | 2

1
Diagram

2
Result list

Example: `DISP:WIND2:SUBW2:SEL`
Switches the focus area to the result list in screen B.
`DISP:WIND2:SSEL?`
Result: 2

Usage: Query only
SCPI confirmed

Mode: ADEMOD

DISPlay[:WINDow<n>]:TRACe<t>:MODE <Mode>

This command defines the type of display and the evaluation of the traces. WRITE corresponds to the Clr/Write mode of manual operation. The trace is switched off (= BLANK in manual operation) with `DISPlay[:WINDow<n>]:TRACe<t>[:STATe]`.

The number of measurements for AVERage, MAXHold and MINHold is defined with the `[SENSe:]AVERage<n>:COUNt` or `[SENSe:]SWEep:COUNt` commands. It should be noted that synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

Parameters:

<Mode> WRITe | VIEW | AVERage | MAXHold | MINHold | BLANk

*RST: WRITe for TRACe1, STATe OFF for TRACe2/3/4/5/6
For details on trace modes refer to chapter 2.1.4, "Trace Mode Overview", on page 15.

Example: `INIT:CONT OFF`
Switching to single sweep mode.
`SWE:COUN 16`
Sets the number of measurements to 16.
`DISP:TRAC3:MODE MAXH`
Switches on the calculation of the maximum peak for trace 3.
`INIT;*WAI`
Starts the measurement and waits for the end of the 16 sweeps.

DISPlay[:WINDow<n>]:TRACe<t>[:STATe] <State>

This command switches on or off the display of the corresponding trace. The other measurements are not aborted but continue running in the background.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

Parameters:

<State> ON | OFF

*RST: ON for TRACe1, OFF for TRACe2 to 6

Example: `DISP:TRAC3 ON`

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe] <Range>

This command defines the display range of the y-axis with logarithmic scaling.

The command works only for a logarithmic scaling. You can select the scaling with `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Range> Range: 10 to 200
*RST: 100
Default unit: dB

Example: `DISP:TRAC:Y 110dB`

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE <Mode>

This command selects the type of scaling of the y-axis.

When `SYSTem:DISPlay:UPDate` is turned off, this command has no immediate effect on the screen.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Mode>

ABSolute
absolute scaling of the y-axis

RELative
relative scaling of the y-axis

*RST: ABS

Example:
```
DISP:TRAC:Y:MODE REL
```

DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous <State>

This command defines whether traces in Min Hold, Max Hold and Average mode are reset in the window specified by the suffix <n> after parameter change or not.

Normally, the measurement is started anew after parameter changes, before the measurement results are evaluated (e.g. using a marker). In all cases that require a new measurement after parameter changes, the trace is reset automatically to avoid false results (e.g. with span changes). For applications that require no reset after parameter changes, the automatic reset can be switched off.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

Parameters:

<State> OFF | ON

OFF
After certain parameter changes the traces are reset.

ON
The automatic reset is switched off.

*RST: OFF

Example:
```
DISP:WIND:TRAC3:MODE:HCON ON
```
Switches off the reset function.

Mode: A

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel <ReferenceLevel>

This command defines the reference level.

With the reference level offset ≠ 0, the value range of the reference level is modified by the offset.

Suffix:

<n> irrelevant.

<t> irrelevant

Parameters:

<ReferenceLevel> The unit is variable.

Range: see datasheet
*RST: -10dBm

Example: `DISP:TRAC:Y:RLEV -60dBm`

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet <Value>

This command defines a reference level offset.

Suffix:

<n> irrelevant.

<t> irrelevant

Parameters:

<Value> Range: -200 to 200
*RST: 0
Default unit: dB

Example: `DISP:TRAC:Y:RLEV:OFFS -10dB`

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition <Position>

This command defines the position of the reference level on the display grid..

When using a tracking generator (only with option R&S FSV-B9 or -B10, requires active normalization), and in Bluetooth mode (option R&S FSV-K8) this command defines the position of the reference value for all windows.

Suffix:

<n> Selects the measurement window.

<t> irrelevant

Parameters:

<Position> 0 PCT corresponds to the lower display border, 100% corresponds to the upper display border.

Range: 0 to 100
*RST: Spectrum mode: 100 PCT, with tracking generator or time display: 50 PCT
Default unit: PCT

Example: `DISP:TRAC:Y:RPOS 50PCT`

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue <Value>

This command defines the reference value assigned to the reference position in the specified window. Separate reference values are maintained for the various displays.

Suffix:
<n> 1...4
window

<t> irrelevant

Parameters:
<Value> *RST: 0 PCT = AM display, (0 Hz = FM display), (0 rad = PM display), (100 PCT = AF spectrum display of AM signal), (250 kHz = AF spectrum display of FM signal), (10 rad = AF spectrum display of PM signal)

Example: `DISP:TRAC:Y:RVAL 0`
Sets the value assigned to the reference position to 0 Hz (analog demodulation)

DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing <ScalingType>

This command selects the scaling of the y-axis.

For AF spectrum displays, only the parameters "LINear" and "LOGarithmic" are permitted.

Suffix:
<n> Selects the measurement window.

<t> irrelevant

Parameters:
<ScalingType> **LOGarithmic**
Logarithmic scaling.

LINear
Linear scaling in %.

LDB
Linear scaling in dB.

*RST: LOGarithmic

Example: `DISP:TRAC:Y:SPAC LIN`
Select a linear scale.

DISPlay:WSELect?

Queries the currently selected window.

Example: `DISP:WIND2:SEL`
Switches the focus area to screen B.
`DISP:WSEL?`
Result: 2

Usage: Query only
SCPI confirmed

Mode: ADEMOD

2.3.4 INSTrument Subsystem (Analog Demodulation, R&S FSV–K7)

The INSTrument subsystem selects the operating mode of the unit either via text parameters or fixed numbers.

INSTrument[:SELect] 113
INSTrument:NSELect <Mode> 113

INSTrument[:SELect] <Mode>

Selects the instrument mode.

Parameters:

<Mode>
ADEMod
Analog Demodulation option, R&S FSV–K7
SFM
FM Stereo option, R&S FSV–K7

Mode: ADEMOD, SFM

INSTrument:NSELect <Mode> <Mode>

Selects the instrument mode.

Parameters:

<Mode>
3
Analog Demodulation option, R&S FSV–K7
7
FM Stereo option, R&S FSV–K7

Mode: ADEMOD, SFM

2.3.5 PROBe subsystem

With firmware R&S FSV 1.61SP2 or newer, active probes are supported (via an adapter). The following commands activate and configure a connected probe which is to provide an input signal. They are only available if a probe is connected to the instrument's RF INPUT and USB connectors.

For details see the base unit description.

PROBe:ID:PARTnumber?

This command returns the material part number of the connected probe.

Example: `PROB:ID:PART?`

Usage: Query only

PROBe:ID:SRNumber?

This command returns the serial number of the connected probe.

Example: PROB:ID:SRN?

Usage: Query only

PROBe:SETup:MODE <Mode>

This command defines which action is taken when the probe's micro button is pressed.

Parameters:

<Mode> **RSINgle**
A single sweep is performed.

NOACtion
No action is taken.

*RST: OFF

Example: PROB:SET:STAT ON

PROBe:SETup:NAME?

This command returns the name of the connected probe.

Example: PROB:SET:NAME?

Usage: Query only

PROBe:SETup:STATe?

This command queries whether a probe is connected to the instrument's RF INPUT and USB connectors and was recognized by the R&S FSV.

Example: PROB:SET:STAT ON

Usage: Query only

PROBe[:STATe] <State>

This command activates a connected probe. Use this command to switch off the probe and measure the digital input without considering the transducer factor of the probe.

Parameters:

<State> **ON | OFF**

*RST: OFF

Example: PROB:STAT ON

2.3.6 SENSe Subsystem (Analog Demodulation, R&S FSV–K7)

The SENSe subsystem is organized in several subsystems. The commands of these subsystems directly control device-specific settings, they do not refer to the signal characteristics of the measurement signal.

The SENSe subsystem controls the essential parameters of the analyzer. In accordance with the SCPI standard, the keyword "SENSe" is optional for this reason, which means that it is not necessary to include the SENSe node in command sequences.

The following subsystems are included:

2.3.6.1 Trace Mode Result Types....115
2.3.6.2 Formats for Returned Values: ASCII Format and Binary Format....115
2.3.6.3 SENSe:ADEMod Subsystem (Analog Demodulation, R&S FSV-K7)....116
2.3.6.4 SENSe:ADJust Subsystem....141
2.3.6.5 SENSe:BANDwidth Subsystem (Analog Demodulation, R&S FSV–K7)....143
2.3.6.6 SENSe:FILTer Subsystem (Analog Demodulation, R&S FSV-K7)....143
2.3.6.7 SENSe:FREQuency Subsystem (Analog Demodulation, R&S FSV–K7)....148
2.3.6.8 SENSe:SWEep Subsystem (Analog Demodulation, R&S FSV–K7)....150
2.3.6.9 Other commands in the SENSe subsystem....152

2.3.6.1 Trace Mode Result Types

The following result types can be set:

WRITe	The current trace results will be obtained
AVERage	The trace results will be averaged over the given # of measurements
MAXHold	The maximum trace result values will be obtained over the given # of measurements
MINHold	The minimum trace result values will be obtained over the given # of measurements
VIEW	The trace results are frozen and displayed, i.e. they are not calculated for subsequent measurements. Traces in this mode cannot be queried.
OFF	The result type will not be used.

It is not possible to query trace data when result type VIEW is selected.
Each value besides OFF can only be assigned to one result type at a time.
If all result types are set to OFF, the AM, FM, or PM demodulator will be deactivated.

2.3.6.2 Formats for Returned Values: ASCII Format and Binary Format

- ASCII Format (FORMat ASCII):
  The command reads out a list of comma separated values (CSV) of the measured values in floating point format.
- Binary Format (FORMat REAL,32):
  The command reads out binary data (Definite Length Block Data according to IEEE 488.2), each measurement value being formatted in 32 Bit IEEE 754 Floating-Point-Format. The schematics of the result string will be as follows:
  #41024<value1><value2>…<value n> with

#4	number of digits (= 4 in the example) of the following number of data bytes
1024	number of following data bytes (= 1024 in the example)
<value>	4-byte floating point value

2.3.6.3 SENSe:ADEMod Subsystem (Analog Demodulation, R&S FSV-K7)

The SENSe:ADEMod Subsystem contains commands to set up the instrument for the measurement of analog demodulated signals and query the result at the end of the measurement.

Further information

- chapter 2.3.6.1, "Trace Mode Result Types", on page 115
- chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 115

[SENSe:]ADEMod[:STATe] 117
[SENSe:]ADEMod<n>:AF:CENTer 117
[SENSe:]ADEMod<n>:AF:COUPling 118
[SENSe:]ADEMod<n>:AF:SPAN 118
[SENSe:]ADEMod<n>:AF:SPAN:FULL 118
[SENSe:]ADEMod<n>:AF:STARt 119
[SENSe:]ADEMod<n>:AF:STOP 119
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult? 120
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE] 121
[SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE] 121
[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult? 122
[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE] 123
[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESult? 124
[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation 125
[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation:TYPE 125
[SENSe:]ADEMod:FM[:TDOMain][:TYPE] 125
[SENSe:]ADEMod:FM[:TDOMain]:RESult 126
[SENSe:]ADEMod:FM:AFSPectrum[:TYPE] 127
[SENSe:]ADEMod:FM:AFSPectrum:RESult 127
[SENSe:]ADEMod:FM:OFFSet 128
[SENSe:]ADEMod:MTIMe 129
[SENSe:]ADEMod:PM[:TDOMain][:TYPE] 129
[SENSe:]ADEMod:PM[:TDOMain]:RESult 130
[SENSe:]ADEMod:PM:AFSPectrum[:TYPE] 131
[SENSe:]ADEMod:PM:AFSPectrum:RESult 132
[SENSe:]ADEMod:PM:RPOint[:X] 133
[SENSe:]ADEMod:RLENgth? 134
[SENSe:]ADEMod:SET 134
[SENSe:]ADEMod:SPECtrum[:TYPE] 135
[SENSe:]ADEMod:SPECtrum:BANDwidth|BWIDth[:RESolution] 135
[SENSe:]ADEMod:SPECtrum:RESult 136
[SENSe:]ADEMod:SPECtrum:SPAN[:MAXimum] 137

[SENSe:]ADEMod:SPECtrum:SPAN:ZOOM....138
[SENSe:]ADEMod:SQUelch[:STATe]....138
[SENSe:]ADEMod:SQUelch:LEVel....138
[SENSe:]ADEMod:SRATe?....139
[SENSe:]ADEMod<n>:ZOOM[:STATe]....139
[SENSe:]ADEMod<n>:ZOOM:STARt....139
[SENSe:]ADEMod<n>:ZOOM:LENGth....140
[SENSe:]ADEMod<n>:ZOOM:LENGth:MODE....140

[SENSe:]ADEMod[:STATe] <State>

This command activates the analog demodulator of the instrument. The instrument will be set to zero span at the current center frequency.

Parameters:

<State> ON | OFF

*RST: OFF

Example: `ADEM ON`
Switches the analog demodulator on.

Mode: ADEMOD

[SENSe:]ADEMod<n>:AF:CENTer <Frequency>

This command sets the center frequency for AF spectrum result display.

Suffix:

<n> 1...4
irrelevant

Parameters:

<Frequency> *RST: 1.25 MHz

Example: `ADEM ON`, see `CALCulate<n>:FEED` on page 89
Switches on the analog demodulator
`CALC:FEED 'XTIM:FM:AFSP'`, see `CALCulate<n>:FEED` on page 89
Switches on AF spectrum result display of FM
`ADEM:BAND 5 MHz`, see `[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation` on page 125
Sets the measurement bandwidth
`ADEM:AF:CENT 500kHz`, see `[SENSe:]ADEMod<n>:AF:CENTer` on page 117
Sets the AF center frequency
`ADEM:AF:SPAN 200kHz`, see `[SENSe:]ADEMod<n>:AF:SPAN` on page 118
Sets the AF span

Mode: ADEMOD

[SENSe:]ADEMod<n>:AF:COUPling <Coupling>

This command selects the coupling of the AF path of the analyzer in the specified window.

Suffix:
<n> 1...4
window

Parameters:
<Coupling> AC | DC
*RST: AC (PM); DC (FM)

Example: `ADEM:AF:COUP DC`
Switches on DC coupling.

Mode: ADEMOD

[SENSe:]ADEMod<n>:AF:SPAN <Span>

This command sets the span for AF spectrum result display.

The span is limited to half the measurement bandwidth of analog demodulation (`[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation` on page 125).

Suffix:
<n> 1...4
irrelevant

Parameters:
<Span> *RST: 2.5 MHz

Example: `ADEM ON`, see `[SENSe:]ADEMod[:STATe]` on page 117
Switches on the analog demodulator
`CALC:FEED 'XTIM:FM:AFSP'`, see `CALCulate<n>:FEED` on page 89
Switches on AF spectrum result display of FM
`ADEM:BAND 5 MHz`, see `[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation` on page 125
Sets the measurement bandwidth
`ADEM:AF:CENT 500kHz`, see `[SENSe:]ADEMod<n>:AF:CENTer` on page 117
`ADEM:AF:SPAN 200 kHz`
Sets the AF span to 200 kHz

Mode: ADEMOD

[SENSe:]ADEMod<n>:AF:SPAN:FULL

This command sets the maximum span for AF spectrum result display.

The maximum span corresponds to half the measurement bandwidth of analog demodulation (`[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation` on page 125).

Suffix:
<n> 1...4
irrelevant

Example: ADEM ON, see [SENSe:]ADEMod[:STATe] on page 117
Switches on the analog demodulator
CALC:FEED 'XTIM:FM:AFSP', see CALCulate<n>:FEED on page 89
Switches on AF spectrum result display of FM
ADEM:BAND 5 MHz, see [SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation on page 125
Sets the measurement bandwidth to 5 MHz
ADEM:AF:SPAN:FULL
Sets the AF span to 2.5 MHz

Mode: ADEMOD

[SENSe:]ADEMod<n>:AF:STARt <Frequency>

This command sets the start frequency for AF spectrum result display.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Frequency> *RST: 0 MHz

Example: ADEM ON, see [SENSe:]ADEMod[:STATe] on page 117
Switches on the analog demodulator
CALC:FEED 'XTIM:FM:AFSP', see CALCulate<n>:FEED on page 89
Switches on AF spectrum result display of FM
ADEM:BAND 5 MHz, see [SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation on page 125
Sets the measurement bandwidth to 5 MHz
ADEM:AF:STAR 0 kHz
Sets the AF start frequency to 0 kHz
[SENSe:]ADEMod<n>:AF:STOP on page 119
Sets the AF stop frequency to 500 kHz

Mode: ADEMOD

[SENSe:]ADEMod<n>:AF:STOP <Frequency>

This command sets the stop frequency for AF spectrum result display.

The stop frequency is limited to half the measurement bandwidth of analog demodulation ([SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation on page 125).

Suffix:
<n> 1...4
irrelevant

Parameters:
<Frequency> *RST: 2.5 MHz

Example: `ADEM ON`, see `[SENSe:]ADEMod[:STATe]` on page 117
Switches on the analog demodulator
`CALC:FEED 'XTIM:FM:AFSP'`, see `CALCulate<n>:FEED` on page 89
Switches on AF spectrum result display of FM
`ADEM:BAND 5 MHz`, see `[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation` on page 125
Sets the measurement bandwidth to 5 MHz
`[SENSe:]ADEMod<n>:AF:STARt` on page 119
Sets the AF start frequency to 0 kHz
`ADEM:AF:STOP 500 kHz`
Sets the AF stop frequency to 500 kHz

Mode: ADEMOD

[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult? <TraceMode>

This command reads the result data of the RF signal in zero span in the specified trace mode. The data format of the output data block is defined by the FORMat command (see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 115).

The output unit is dBm (logarithmic display) or V (linear display).

Query parameters:
<TraceMode> WRITe | AVERage | MAXHold | MINHold | VIEW
The specified trace mode must be one of those configured by `[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE]` on page 121. Otherwise a query error is generated.
For details on trace modes see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.

Example:
```
ADEM:SET 8MHz,32000,EXT,POS,-500,30
```
Sets up demodulator parameters
```
ADEM:AM AVER,MAXH,MINH
```
Sets up AM results to be measured
```
ADEM ON
```
Switches on demodulator
```
INIT; *WAI
```
Starts measurement and waits for sync
```
FORM ASC
```
Selects output format
```
ADEM:AM:RES? AVER
```
Reads AM average results
```
ADEM:AM:RES? MAXH
```
Reads AM max hold results
```
ADEM:AM:RES? MINH
```
Reads AM min hold results

Usage: Query only

Mode: ADEMOD

[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE] <TraceMode>

This command selects the trace modes of the RF signal to be measured simultaneously in zero span. For each of the six available traces a mode can be defined.

Parameters:

<TraceMode> <TraceMode1>, <TraceMode2>, <TraceMode3>, <TraceMode4>, <TraceMode5>, <TraceMode6>

WRITe | AVERage | MAXHold | MINHold | VIEW | OFF
For details on trace modes see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.

*RST: WRITe,OFF,OFF,OFF,OFF,OFF (FM-Stereo:OFF,OFF,OFF,OFF,OFF,OFF)

Example:
```
ADEM:AM AVER,MAXH,MINH,OFF,OFF,OFF
```
Determines average, max hold and min hold values simultaneously for the traces 1-3.
```
ADEM:AM WRIT,OFF,OFF,OFF,OFF,OFF
```
Determines only the current measurement values for trace 1.
```
ADEM:AM OFF,OFF,OFF,OFF,OFF,OFF
```
Switches AM demodulation off.

Mode: ADEMOD

[SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE] <TraceMode>

This command selects the result types to be measured simultaneously by AM demodulation.

Parameters for setting and query:

<TraceMode> <TraceMode1>, <TraceMode2>, <TraceMode3>, <TraceMode4>, <TraceMode5>, <TraceMode6>

WRITe | AVERage | MAXHold | MINHold | VIEW | OFF
For details on trace modes see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.

*RST: WRITe,OFF,OFF,OFF,OFF,OFF (FM-Stereo:OFF,OFF,OFF,OFF,OFF,OFF)

Example: `ADEM:AM:REL AVER,MAXH,MINH`
Determines average, max hold and min hold values simultaneously.
`ADEM:AM:REL WRIT,OFF,OFF`
Determines only the current measurement values.
`ADEM:AM:REL OFF,OFF,OFF`
Switches AM demodulation off.

Mode: ADEMOD

[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult? <TraceMode>

This command reads the result data obtained by AM demodulation for the specified result type. The data format of the output data block is defined by the FORMat command (see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 115).

The output unit is %.

Query parameters:

<TraceMode> WRITe | AVERage | MAXHold | MINHold | VIEW

The specified trace mode must be one of those configured by `[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE]` on page 121. Otherwise a query error is generated.
For details on trace modes see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.

Example:
```
ADEM:SET 8MHz,32000,EXT,POS,-500,30
```
Sets up demodulator parameters
```
ADEM:FM AVER,MAXH,MINH
```
Selects FM results to be measured
```
ADEM:AM:REL WRIT,OFF,OFF
```
Selects AM results to be measured
```
ADEM ON
```
Switches on demodulator
```
INIT; WAI
```
Starts measurement and waits for sync
```
FORM ASC
```
Selects output format
```
ADEM:FM:RES? AVER
```
Reads FM average results
```
ADEM:FM:RES? MAXH
```
Reads FM max hold results
```
ADEM:FM:RES? MINH
```
Reads FM min hold results
```
ADEM:AM:REL:RES? WRIT
```
Reads current AM result data

Usage: Query only

Mode: ADEMOD

[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE] <TraceMode>

This command selects the AF spectrum result types of the AM-demodulated signal to be measured simultaneously.

Note: in FM stereo mode (option K7S), only those traces can be measured that are currently displayed in at least one screen.

Parameters:

<TraceMode> <TraceMode1>, <TraceMode2>, <TraceMode3>, <TraceMode4>, <TraceMode5>, <TraceMode6>

WRITe | AVERage | MAXHold | MINHold | VIEW | OFF
For details on trace modes see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.

*RST: WRITe,OFF,OFF,OFF,OFF,OFF (FM-Stereo:OFF,OFF,OFF,OFF,OFF,OFF)

Example:
```
ADEM:AM:REL:AFSP AVER,MAXH,MINH
```
Determines average, maximum and minimum value simultaneously
```
ADEM:AM:REL:AFSP WRIT,OFF,OFF
```
Determines only current measurement results
```
ADEM:AM:REL:AFSP OFF,OFF,OFF
```
Switches off calculation of the AF spectrum

Mode: ADEMOD

[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESult? <TraceMode>

This command reads out the AF spectrum result data of the AM-demodulated signal for the specified result type. The data format of the output data is determined with the FORMat command (see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 115).

The output unit is dB (logarithmic display) or % (linear display).

Query parameters:

<TraceMode> WRITe | AVERage | MAXHold | MINHold | VIEW

The specified trace mode must be one of those configured by `[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE]` on page 121. Otherwise a query error is generated.
For details on trace modes see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.

Example:

```
ADEM:SET 8MHz,32000,EXT,POS,-500,30
```
Sets the demodulator
```
ADEM:FM AVER,MAXH,MINH
```
Selects the FM results to be measured
```
ADEM:AM:REL WRIT,OFF,OFF
```
Selects the AM results to be measured
```
ADEM:AM:REL:AFSP WRIT,OFF,OFF
```
Selects the AF spectrum results of the demodulated AM signal to be measured
```
ADEM ON
```
Switches on the demodulator
```
INIT; WAI
```
Starts the measurement and waits for the termination
```
FORM ASC
```
Selects the output format
```
ADEM:FM:RES? AVER
```
Reads the FM average result data
```
ADEM:FM:RES? MAXH
```
Reads the FM Maxhold result data
```
ADEM:FM:RES? MINH
```
Reads the FM Minhold result data
```
ADEM:AM:REL:RES? WRIT
```
Reads the current AM result data
```
ADEM:AM:REL:AFSP:RES? WRIT
```
Reads the current AF spectrum result data of the demodulated AM signal

Usage: Query only

Mode: ADEMOD

[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation <Bandwidth>

This command defines the demodulation bandwidth used for analog demodulation. The required sampling rate is automatically set depending on the selected demodulation bandwidth. The available demodulation bandwidths are determined by the existing sampling rates. For details on the relation between demodulation bandwidth and sampling rate refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Parameters:

<Bandwidth> *RST: 5 MHz
For details on the correlation of bandwidth and sample rate refer to chapter "Instrument Functions", section "Analog Demodulation (Option K7)" – chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Example: `ADEM:BAND:DEM 1MHz`
Sets the demodulation bandwidth to 1 MHz.

Mode: ADEMOD

[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation:TYPE <FilterType>

This command defines the type of demodulation filter to be used.

Parameters:

<FilterType> **FLAT**
Standard flat demodulation filter

GAUSs
Gaussian filter for optimized settling behaviour

*RST: FLAT

Example: `BAND:DEM:TYPE GAUS`
Selects the Gaussian filter.

Mode: ADEMOD

[SENSe:]ADEMod:FM[:TDOMain][:TYPE] <Type>

This command selects the result types to be measured simultaneously by FM demodulation.

Parameters:

<Type> *RST: WRITe,OFF,OFF
<result type 1|2|3|4|5|6>: WRITe, AVERage, MAXHold, MINHold, VIEW, OFF; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 115 .

Example: [SENSe:]ADEMod:FM[:TDOMain][:TYPE] on page 125
"Creates average, max hold and min hold values simultaneously
DEM:FM WRIT,OFF,OFF
Only creates the current measurement values
ADEM:FM OFF,OFF,OFF
Switches analog demodulator off

Mode: ADEMOD

[SENSe:]ADEMod:FM[:TDOMain]:RESult <Type>

This command reads the result data obtained by analog demodulation for the specified result type. The data format of the output data block is defined by the FORMat command.

Return values:

<Type> <result type>: WRITe, AVERage, MAXHold, MINHold; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 115. The result type indicated must be one of those configured by [SENSe:]ADEMod:FM[:TDOMain][:TYPE] on page 125. Otherwise a query error will be generated.

Return values ASCII Format (FORMat ASCII) or Binary Format (FORMat REAL, 32); for details see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 115 .
Default unit: Hz

Example: ADEM:SET 8MHz,32000,EXT,POS,-500,30, see [SENSe:]ADEMod:SET on page 134
Sets up demodulator parameters
ADEM:FM AVER,MAXH,MINH, see [SENSe:]ADEMod:FM[:TDOMain][:TYPE] on page 125
Selects FM results to be measured
ADEM:AM WRIT,OFF,OFF
Selects AM results to be measured
ADEM ON, see [SENSe:]ADEMod[:STATe] on page 117
Switches on demodulator
INIT; WAI
Starts measurement and waits for sync
FORM ASC, see FORMat[:DATA] on page 177
Selects output format
ADEM:FM:RES? AVER
Reads FM average results
ADEM:FM:RES? MAXH
Reads FM max hold results
ADEM:FM:RES? MINH
Reads FM min hold results
ADEM:AM:RES? WRIT
Reads current AM results

Mode: ADEMOD

[SENSe:]ADEMod:FM:AFSPectrum[:TYPE] <Type>

This command selects the AF spectrum result types of the FM demodulated signal to be measured simultaneously.

Parameters:

<Type> *RST: OFF,OFF,OFF
<result type 1|2|3|4|5|6>: WRITe, AVERage, MAXHold, MINHold, VIEW, OFF; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.
The result type "AF spectrum of the FM demodulated signal" cannot be activated at the same time as "AF spectrum of AM or PM demodulated signal".

Example:
`ADEM:FM:AFSP AVER,MAXH,MINH`
Determines average, maximum and minimum value simultaneously
`ADEM:FM:AFSP WRIT,OFF,OFF`
Determines only current measurement results
`ADEM:FM:AFSP OFF,OFF,OFF`
Switches calculation of AF spectrum off

Mode: ADEMOD

[SENSe:]ADEMod:FM:AFSPectrum:RESult <Type>

This command reads out the AF spectrum result data of the FM demodulated signal for the specified result type. The data format of the output data is determined with the FORMat command.

Return values:

<Type> <result type>: WRITe, AVERage, MAXHold, MINHold; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.
The specified result type must be one of those configured with the `[SENSe:]ADEMod:FM:AFSPectrum[:TYPE]` command. Otherwise a query error will be generated.

Return values ASCII Format (FORMat ASCII) or Binary Format (FORMat REAL, 32); for details see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 115.
Default unit: dB (logarithmic display) or Hz (linear display)

Example:

ADEM:SET 8MHz,32000,EXT,POS,-500,30, see [SENSe:]ADEMod:SET on page 134
Sets demodulator
ADEM:FM AVER,MAXH,MINH, see [SENSe:]ADEMod:FM[:TDOMain][:TYPE] on page 125
Selects the FM results to be measured
ADEM:AM:REL WRIT,OFF,OFF, see [SENSe:]ADEMod:FM:AFSPectrum[:TYPE] on page 127
Selects the AM results to be measured
ADEM:FM:AFSP WRIT,OFF,OFF, see [SENSe:]ADEMod:FM:AFSPectrum[:TYPE] on page 127
Selects the AF spectrum results of the demodulated FM signal to be measured
ADEM ON, see [SENSe:]ADEMod[:STATe] on page 117
Switches the demodulator on
INIT; WAI
Starts the measurement and waits for termination
FORM ASC, see FORMat[:DATA] on page 177
Selects output format
ADEM:FM:RES? AVER, see [SENSe:]ADEMod:FM[:TDOMain]:RESult on page 126
Reads FM average result data
ADEM:FM:RES? MAXH, see [SENSe:]ADEMod:FM[:TDOMain]:RESult on page 126
Reads FM maxhold result data
ADEM:FM:RES? MINH, see [SENSe:]ADEMod:FM[:TDOMain]:RESult on page 126
Reads FM minhold result data
ADEM:AM:RES? WRIT, see [SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult? on page 120
Reads current AM result data
ADEM:FM:AFSP:RES? WRIT
Reads current AF spectrum result data of demodulated FM signal

Mode: ADEMOD

[SENSe:]ADEMod:FM:OFFSet <Type>

This command calculates the FM offset of the currently available measurement data set.

If averaging has been activated before acquiring the data set (using [SENSe:]ADEMod:FM[:TDOMain][:TYPE] on page 125, the averaged FM offset over several measurements can also be obtained by setting <result type> = AVERage.

The offset thus determined differs from the one calculated by the CALCulate<n>:MARKer:FUNCtion:ADEMod:FERRor[:RESult<t>]? on page 86 command since, for determination of the frequency deviation, the modulation is removed by means of low pass filtering,producing results that are different from those obtained by averaging.

Parameters:

<Type> <result type> | IMMediate | AVERage

IMMediate
The current measurement results will be used for calculating the FM offset

AVERage
The measurement results that were averaged over the given # of measurements will be used for calculating the FM offset

If no average measurement was active during the last measurement sequence only the `[SENSe:]ADEMod:FM:OFFSet IMMediate` command (see `[SENSe:]ADEMod:FM:OFFSet` on page 128) will return a correct result (data to calculate the offset are taken from the last measured data set).
`[SENSe:]ADEMod:FM:OFFSet AVERage` will cause a query error in this case.

Example: `ADEM:SET 8MHz,32000,EXT,POS,-500,30`, see `[SENSe:]ADEMod:SET` on page 134
Sets up demodulator parameters to execute 30 measurements
`ADEM:FM AVER,OFF,OFF`
Selects FM results to perform averaging
`ADEM:AM OFF,OFF,OFF`
Switches off AM demodulation
`ADEM ON`, see `[SENSe:]ADEMod[:STATe]` on page 117
Switches on analog demodulator
`INIT; WAI`
Starts measurement and waits for sync
`ADEM:FM:OFFS? IMM`
Reads FM offset of last measurement of the sequence of 30
`ADEM:FM:OFFS? AVER`
Reads FM offset averaged over 30 measurements

Mode: ADEMOD

[SENSe:]ADEMod:MTIMe <Time>

This command defines the measurement time for analog demodulation.

Parameters:

<Time> *RST: 62.5us

Example: `ADEM:MTIM 62.5us`
Sets the measurement time to 62.5 µs.

Mode: ADEMOD

[SENSe:]ADEMod:PM[:TDOMain][:TYPE] <Type>

This command selects the result types of the PM-demodulated signal to be created simultaneously.

Parameters:

<Type> *RST: OFF,OFF,OFF
<result type 1|2|3|4|5|6>: WRITe, AVERage, MAXHold, MINHold, VIEW; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.

Example: `ADEM:PM AVER,MAXH,MINH`, see `[SENSe:]ADEMod:PM[:TDOMain][:TYPE]` on page 129
Determines average, maximum and minimum value simultaneously
`ADEM:PM WRIT,OFF,OFF`
Determines only current measurement results
`ADEM:PM OFF,OFF,OFF`
Switches the PM demodulator off.

Mode: ADEMOD

[SENSe:]ADEMod:PM[:TDOMain]:RESult <Type>

This command reads the result data of the PM demodulation for the specified result type. The data format of the output data is determined with the FORMat command.

Return values:

<Type> <result type>: WRITe, AVERage, MAXHold, MINHold; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.
The specified result type must be one of those configured with the `[SENSe:]ADEMod:PM[:TDOMain][:TYPE]` command. Otherwise a query error will be generated.

Return values ASCII Format (FORMat ASCII) or Binary Format (FORMat REAL, 32); for details see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 115 .

Default unit: dB (logarithmic display) or RAD or DEG (linear display)

Example:
`ADEM:SET 8MHz,32000,EXT,POS,-500,30`, see `[SENSe:]ADEMod:SET` on page 134
Sets the demodulator parameters.
`ADEM:PM AVER,MAXH,MINH`, see `[SENSe:]ADEMod:PM[:TDOMain][:TYPE]` on page 129
Selects the PM results to be measured.
`ADEM:AM WRIT,OFF,OFF`
Selects the AM results to be measured.
`ADEM ON`, see `[SENSe:]ADEMod[:STATe]` on page 117
Switches on the demodulator.
`INIT; WAI`
Starts the measurement and waits for termination.
`FORM ASC`, see `FORMat[:DATA]` on page 177
Selects the output format.
`ADEM:PM:RES? AVER`
Reads the PM average result data.
`ADEM:PM:RES? MAXH`
Reads the PM maxhold result data.
`ADEM:PM:RES? MINH`
Reads the PM minhold result data.
`ADEM:AM:RES? WRIT`
Reads the current AM result data.

Mode: ADEMOD

[SENSe:]ADEMod:PM:AFSPectrum[:TYPE] <Type>

This command selects the AF spectrum result types of the PM-demodulated signal to be measured simultaneously.

Parameters:

<Type> *RST: OFF,OFF,OFF
<result type 1|2|3|4|5|6>: WRITe, AVERage, MAXHold, MINHold, VIEW; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.
The result type "AF spectrum of the PM demodulated signal" cannot be activated at the same time as "AF spectrum of AM or FM demodulated signal".

Example:
`ADEM:PM:AFSP AVER,MAXH,MINH`
Determines average, maximum and minimum value simultaneously
`ADEM:PM:AFSP WRIT,OFF,OFF`
Determines only current measurement results
`ADEM:PM:AFSP OFF,OFF,OFF`
Switches calculation of AF spectrum off

Mode: ADEMOD

[SENSe:]ADEMod:PM:AFSPectrum:RESult <Type>

This command reads out the AF spectrum result data of the PM-demodulated signal for the specified result type. The data format of the output data is determined with the FORMat command.

Return values:

<Type> <result type>: WRITe, AVERage, MAXHold, MINHold; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 115 . The specified result type must be one of those configured with the `[SENSe:]ADEMod:PM:AFSPectrum[:TYPE]` on page 131 command. Otherwise a query error will be generated.

Return values ASCII Format (FORMat ASCII) or Binary Format (FORMat REAL, 32); for details see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 115 .

Default unit: dB (logarithmic display) or RAD or DEG (linear display)

Example: `ADEM:SET 8MHz,32000,EXT,POS,-500,30`, see `[SENSe:]ADEMod:SET` on page 134
Sets demodulator
`ADEM:PM AVER,MAXH,MINH`, see `[SENSe:]ADEMod:PM[:TDOMain][:TYPE]` on page 129
Selects the PM results to be measured
`ADEM:AM:REL WRIT,OFF,OFF`, see `[SENSe:]ADEMod:FM:AFSPectrum[:TYPE]` on page 127
Selects the AM results to be measured
`ADEM:PM:AFSP WRIT,OFF,OFF`, see `[SENSe:]ADEMod:PM:AFSPectrum[:TYPE]` on page 131
Selects the AF spectrum results of the demodulated PM signal to be measured
`ADEM ON`, see `[SENSe:]ADEMod[:STATe]` on page 117
Switches the demodulator on
`INIT; WAI`
Starts the measurement and waits for termination
`FORM ASC`, see `FORMat[:DATA]` on page 177
Selects output format
`ADEM:PM:RES? AVER`, see `[SENSe:]ADEMod:PM:AFSPectrum:RESult` on page 132
Reads PM average result data
`ADEM:PM:RES? MAXH`, see `[SENSe:]ADEMod:PM:AFSPectrum:RESult` on page 132
Reads PM maxhold result data
`ADEM:PM:RES? MINH`, see `[SENSe:]ADEMod:PM:AFSPectrum:RESult` on page 132
Reads PM minhold result data
`ADEM:AM:RES? WRIT`, see `[SENSe:]ADEMod:PM:AFSPectrum:RESult` on page 132
Reads current AM result data
`ADEM:PM:AFSP:RES? WRIT`
Reads current AF spectrum result data of demodulated PM signal

Mode: ADEMOD

[SENSe:]ADEMod:PM:RPOint[:X] <Time>

This command determines the position where the phase of the PM-demodulated signal is set to 0 rad. The maximum possible value depends on the measurement time selected in the instrument; this value is output in response to the query `ADEM:PM:RPO:X? MAX`.

Parameters:

<Time> 0 s to measurement time
*RST: 0 s

Example: `ADEM:PM:RPO 500us`
Sets the position where the phase to 0 rad setting to 500 µs.

Usage: SCPI confirmed

Mode: ADEMOD

[SENSe:]ADEMod:RLENgth?

This command returns the record length set up for the current analog demodulation measurement.

Example: `ADEM:RLEN?`
Returns the current record length.

Usage: Query only

Mode: ADEMOD

[SENSe:]ADEMod:SET <sample rate> | <record length> | <trigger source> | <trigger slope> | <offset samples> | <# of meas>

This command configures the analog demodulator of the instrument.

Parameters:

<sample rate> **numeric value**
The frequency at which measurement values are taken from the A/D-converter and stored in I/Q memory.
Allowed range: refer to Sample Rate, Measurement Time and Trigger Offset.
Note: for FM stereo measurements (K7S option), the sample rate is always 500 kHz (as the demodulation bandwidth is permanently set to 400 kHz). Thus, this parameter is ignored in this case.
*RST: 8 MHz

<record length> Number of samples to be stored in I/Q memory.
Range: 1 to 400001 with AF filter or AF trigger active, 1 to 480001 with both AF filter and AF trigger deactive
*RST: 501)

<trigger source> Selection of the trigger source to use for the demodulator.
IMMediate | EXTernal | IFPower | RFPower| AF | AM | AMRelative | FM | PM
Note: After selecting IF Power, the trigger threshold can be set with the `TRIGger<n>[:SEQuence]:LEVel:IFPower` command.
*RST: IMMediate

<trigger slope> POSitive | NEGative
Used slope of the trigger signal.
The value indicated here will be ignored for <trigger source> = IMMediate.
*RST: POSitive

<offset samples> Number of samples to be used as an offset to the trigger signal. For details refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.
The value indicated here is ignored for <trigger source> = "IMMediate".

*RST: 0

<# of meas> Number of repetitions of the measurement to be executed. The value indicated here is especially necessary for the average/maxhold/minhold function.

Range: 0 to 32767
*RST: 0

Example: `ADEM:SET 8MHz,32000,EXT,POS,-500,30`
Performs a measurement at:
sample rate = 8 MHz
record length = 32000
trigger source = EXTernal
trigger slope = POSitive
offset samples = -500 (500 samples before trigger occurred)
# of meas = 30

Mode: ADEMOD

[SENSe:]ADEMod:SPECtrum[:TYPE] <Type>

This command selects the result types to be created in parallel by the RF spectrum measurement with active analog demodulation.

Parameters:

<Type> *RST: OFF,OFF,OFF
<result type 1|2|3|4|5|6>: WRITe, AVERage, MAXHold, MINHold, VIEW, OFF; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.

Example: `ADEM:SPEC AVER,MAXH,MINH`
Creates average, max hold and min hold values at a time
`ADEM:SPEC WRIT,OFF,OFF`
Only creates the current measurement values
`ADEM:SPEC OFF,OFF,OFF`
Switches analog demodulator off

Mode: ADEMOD

[SENSe:]ADEMod:SPECtrum:BANDwidth|BWIDth[:RESolution] <Bandwidth>

This command sets the resolution bandwidth for the spectrum representation that was determined from the analog demodulation data.

The recording time required is calculated from the sampling rate indirectly set via [SENSe:]ADEMod:SPECtrum:SPAN[:MAXimum] on page 137 or [SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation on page 125. If the available recording time is not sufficient for the given bandwidth, the recording time is set to its maximum and the resolution bandwidth is enlarged to the resulting bandwidth.

Parameters:

<Bandwidth> refer to data sheet

*RST: 61.2 kHz

Example: ADEM ON, see [SENSe:]ADEMod[:STATe] on page 117
Switches on the analog demodulator
CALC:FEED 'XTIM:SPEC', see CALCulate<n>:FEED on page 89
Switches on the RF spectrum result display
or
CALC:FEED 'XTIM:FM:AFSP', see CALCulate<n>:FEED on page 89
Switches on the AF spectrum result display of FM signal
ADEM:SPEC:BAND 61.2kHz
Sets the resolution bandwidth to 61.2 kHz.

Mode: ADEMOD

[SENSe:]ADEMod:SPECtrum:RESult <Type>

This command reads out the RF spectrum result data for the specified result type. The data format of the output data block is defined by the FORMat command.

Return values:

<Type> <result type>: WRITe, AVERage, MAXHold, MINHold; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.
The result type indicated must be one of those configured by [SENSe:]ADEMod:SPECtrum[:TYPE] on page 135. Otherwise a query error will be generated.

Return values ASCII Format (FORMat ASCII) or Binary Format (FORMat REAL, 32); for details see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 115 .
The output units are described in CALCulate<n>:MARKer<m>:PEXCursion on page 101.

Example:
ADEM:SET 8MHz,32000,EXT,POS,-500,30, see [SENSe:]ADEMod:SET on page 134
Sets demodulator
ADEM:SPEC AVER,MAXH,MINH
Selects RF spectrum results to be measured
ADEM:SPEC WRIT,OFF,OFF
Selects the AM results to be measured
ADEM ON, see [SENSe:]ADEMod[:STATe] on page 117
Switches the demodulator on
INIT; WAI
Starts the measurement and waits for termination
FORM ASC, see FORMat[:DATA] on page 177
Selects output format
ADEM:SPEC:RES? AVER
Reads RF spectrum average results
ADEM:SPEC:RES? MAXH
Reads RF spectrum max hold results
ADEM:SPEC:RES? MINH
Reads RF spectrum min hold results
ADEM:SPEC:RES? WRIT
Reads spectrum current results

Mode: ADEMOD

[SENSe:]ADEMod:SPECtrum:SPAN[:MAXimum] <FreqRange>

This command sets the maximum frequency range for displaying the RF spectrum that was determined from the FM demodulation data. The maximum span corresponds to the measurement bandwidth of analog demodulation (for details refer to [SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation on page 125).

For details refer on the relation of bandwidth and sample rate refer to Sample Rate, Measurement Time and Trigger Offset.

Parameters:
<FreqRange> *RST: 5 MHz

Example:
ADEM ON, see [SENSe:]ADEMod[:STATe] on page 117
Switches on the analog demodulator
CALC:FEED 'XTIM:SPEC', see CALCulate<n>:FEED on page 89
Switches on RF spectrum result display.
ADEM:SPEC:SPAN:MAX 5 MHz
Sets the max. span to 5 MHz
ADEM:SPEC:SPAN:ZOOM 1 MHz
Sets the displayed span to 1 MHz

Mode: ADEMOD

[SENSe:]ADEMod:SPECtrum:SPAN:ZOOM <FreqRange>

This command sets the frequency range for the RF spectrum result display determined from analog demodulation data. The frequency range for result display is limited to the maximum span (`[SENSe:]ADEMod:SPECtrum:SPAN[:MAXimum]` on page 137) or to the measurement bandwidth of analog demodulation (`[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation` on page 125).

Parameters:

<FreqRange> *RST: 5 MHz

Example: `ADEM ON`, see `[SENSe:]ADEMod[:STATe]` on page 117
Switches on the analog demodulator
`CALC:FEED 'XTIM:SPEC'`, see `CALCulate<n>:FEED` on page 89
Switches on RF spectrum result display.
`ADEM:SPEC:SPAN:MAX 5 MHz`, see `[SENSe:]ADEMod:SPECtrum:SPAN[:MAXimum]` on page 137
Sets the maximum span to 5 MHz
`ADEM:SPEC:SPAN:ZOOM 1 MHz`
Sets displayed span to 1 MHz

Mode: ADEMOD

[SENSe:]ADEMod:SQUelch[:STATe] <State>

This command activates the squelch function, i.e. if the signal falls below a defined threshold (see `[SENSe:]ADEMod:SQUelch:LEVel` on page 138), the demodulated data is automatically set to 0.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `DEM:SQU ON`
Signals below the level threshold are squelched.

Usage: SCPI confirmed

Mode: A, ADEMOD, SFM

[SENSe:]ADEMod:SQUelch:LEVel <Threshold>

This command defines the level threshold below which the demodulated data is set to 0 if squelching is enabled (see `[SENSe:]ADEMod:SQUelch[:STATe]` on page 138).

Parameters:

<Threshold> numeric value
The absolute threshold level
Range: -150 dBm to 30 dBm
*RST: -40 dBm

Example: `DEM:SQU:LEV -80`
If the signal drops below -80 dBm, the demodulated data is set to 0.

Usage: SCPI confirmed

Mode: ADEMOD, SFM

[SENSe:]ADEMod:SRATe?

This command returns the sample rate set up for the current analog demodulation measurement.

Example: `ADEM:SRAT?`
Returns the current sample rate.

Usage: Query only

Mode: ADEMOD

[SENSe:]ADEMod<n>:ZOOM[:STATe] <State>

The command enables or disables the zoom function for the analog-demodulated measurement data in the specified window. Depending on the selected measurement time and the demodulation bandwidth, the number of recorded test points may be greater than that shown on the display.

If the zoom function is enabled, the default number of sweep points in "Spectrum" mode of the result memory are displayed from the specified start time with `[SENSe:]ADEMod<n>:ZOOM:STARt` on page 139.

If the zoom function is disabled, data reduction is used to adapt the test points to the number of points available on the display.

Suffix:
<n> 1...4
window

Parameters:
<State> ON | OFF
*RST: OFF

Example: `ADEM:ZOOM ON`
Switches on the zoom function

Mode: ADEMOD

[SENSe:]ADEMod<n>:ZOOM:STARt <Time>

The command selects the start time for the display of individual measured values of the analog demodulation in the specified window. The maximum possible value depends on the measurement time, which is set in the instrument and can be queried with the `[SENSe:]ADEMod:MTIMe` on page 129 command.

If the zoom function is enabled, the default number of sweep points in "Spectrum" mode of the result memory are displayed from the specified start time with [SENSe:]ADEMod<n>:ZOOM:STARt on page 139.

Suffix:
<n> 1...4
window

Parameters:
<Time> *RST: 0 s
0 s to measurement time – (default number of sweep points in "Spectrum" mode – 1 * 1/sample rate)

Example: ADEM:ZOOM:STAT ON (see [SENSe:]ADEMod<n>:ZOOM[:STATe] on page 139)
Switches on the zoom function
ADEM:ZOOM:STAR 500us
Sets the starting point of the display to 500 µs.

Mode: ADEMOD

[SENSe:]ADEMod<n>:ZOOM:LENGth <Length>

The command allows you to define the length of the zoom area for the analog-demodulated measurement data in the specified window manually. If the length is defined manually using this command, the zoom mode is also set to manual.

Suffix:
<n> 1...4
window

Parameters:
<Length> *RST: sweep time
Length of the zoom area in seconds.

Example: ADEM:ZOOM:LENG 2s
Zoom mode is set to manual and the zoom length to 2 seconds.

Mode: ADEMOD

[SENSe:]ADEMod<n>:ZOOM:LENGth:MODE <Mode>

The command defines whether the length of the zoom area for the analog-demodulated measurement data is defined automatically or manually in the specified window. By default and in automatic mode, the number of sweep points is used as the zoom length. If the zoom length was already entered using [SENSe:]ADEMod<n>:ZOOM:LENGth on page 140, manual zoom mode is set automatically.

Suffix:
<n> 1...4
window

Parameters:

<Mode> AUTO | MAN

*RST: AUTO

Example: `ADEM:ZOOM:LENG:MODE MAN`
Zoom function uses the length defined manually.

Mode: ADEMOD

2.3.6.4 SENSe:ADJust Subsystem

The ADJust subsystem controls automatic definition of frequency and level settings.

[SENSe:]ADJust:ALL....141
[SENSe:]ADJust:CONFiguration:HYSTeresis:LOWer....141
[SENSe:]ADJust:CONFiguration:HYSTeresis:UPPer....141
[SENSe:]ADJust:CONFigure:LEVel:DURation....142
[SENSe:]ADJust:FREQuency....142
[SENSe:]ADJust:LEVel....142
[SENSe:]ADJust:SCALe:Y:AUTO[:CONTinuous]....142

[SENSe:]ADJust:ALL

This command determines the ideal frequency and level configuration for the current measurement.

Example: `ADJ:ALL`

[SENSe:]ADJust:CONFiguration:HYSTeresis:LOWer <Threshold>

This command defines a lower threshold the signal must drop below before the reference level is automatically adjusted when the "Auto Level" function is performed.

For more information see `[SENSe:]ADJust:LEVel`).

Parameters:

<Threshold> Range: 0 to 200
*RST: +1 dB
Default unit: dB

Example: `SENS:ADJ:CONF:HYST:LOW 2`

Example: For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level falls below 18 dBm.

[SENSe:]ADJust:CONFiguration:HYSTeresis:UPPer <Threshold>

This command defines an upper threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

For more information see `[SENSe:]ADJust:LEVel`).

Parameters:

<Threshold> Range: 0 to 200
*RST: +1 dB
Default unit: dB

Example: `SENS:ADJ:CONF:HYST:UPP 2`
For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level rises above 22 dBm.

[SENSe:]ADJust:CONFigure:LEVel:DURation <Duration>

This command defines the duration of the level measurement used to determine the optimal reference level automatically (for `SENS:ADJ:LEV ON`).

Parameters:

<Duration> <numeric value> in seconds
Range: 0.001 to 16000.0
*RST: 0.001
Default unit: s

Example: `ADJ:CONF:LEV:DUR:5`

[SENSe:]ADJust:FREQuency

This command defines the center frequency automatically by determining the highest level in the frequency span.

Example: `ADJ:FREQ`

[SENSe:]ADJust:LEVel

This command automatically sets the optimal reference level for the current measurement.

You can define a threshold that the signal must exceed before the reference level is adjusted, see `[SENSe:]ADJust:CONFiguration:HYSTeresis:UPPer` and `[SENSe:]ADJust:CONFiguration:HYSTeresis:LOWer`.

Example: `ADJ:LEV`

[SENSe:]ADJust:SCALe:Y:AUTO[:CONTinuous] <state>

Activates automatic scaling of the y-axis. Currently auto-scaling is only available for AF measurements. RF power and RF spectrum measurements are not affected by the auto-scaling.

Parameters:

<state> ON | OFF
*RST: OFF

Example: `SENS1:ADJ:SCAL:Y:AUTO ON`

Mode: ADEMOD, SFM

2.3.6.5 SENSe:BANDwidth Subsystem (Analog Demodulation, R&S FSV–K7)

This subsystem controls the setting of the instruments filter bandwidths. Both groups of commands (BANDwidth and BWIDth) perform the same functions.

[SENSe:]BANDwidth|BWIDth:DEMod....143
[SENSe:]BANDwidth:DEMod:TYPE....143

[SENSe:]BANDwidth|BWIDth:DEMod <Bandwidth>

This command sets the bandwidth for analog demodulation. Depending on the selected demodulation bandwidth, the instrument selects the required sampling rate.

The available values of the demodulation bandwidths are determined by the sampling rates. For details on the correlation between demodulation bandwidth and sampling rate refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Parameters:
<Bandwidth> *RST: 5 MHz

Example: `BAND:DEM 1MHz`
Sets test bandwidth to 1 MHz

Mode: A-F, ADEMOD

[SENSe:]BANDwidth:DEMod:TYPE <FilterType>

This command defines the type of demodulation filter to be used.

Parameters:
<FilterType>
FLAT
Standard flat demodulation filter
GAUSs
Gaussian filter for optimized settling behaviour
*RST: FLAT

Example: `BAND:DEM:TYPE GAUS`
Selects the Gaussian filter.

Mode: ADEMOD

2.3.6.6 SENSe:FILTer Subsystem (Analog Demodulation, R&S FSV-K7)

The SENSe:FILTer subsystem selects the filters to reduce the bandwidth of the demodulated signal. The selected filters are used for AM, FM and PM demodulation in common.

Using the commands in the SENSe:FILTer subsystem you can define filter settings for each window individually. Note, however, that if the same modulation type is used in several windows, the settings defined for that modulation are used in all the corresponding windows.

Commands of the SENSe:FILTer subsystem

[SENSe:]FILTer<n>:AOFF....144
[SENSe:]FILTer<n>:AWEighted[:STATe]....144
[SENSe:]FILTer<n>:CCIT....145
[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe]....145
[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATe]....145
[SENSe:]FILTer<n>:DEMPhasis[:STATe]....146
[SENSe:]FILTer<n>:DEMPhasis:TCONstant....146
[SENSe:]FILTer<n>:HPASs[:STATe]....146
[SENSe:]FILTer<n>:HPASs:FREQuency....147
[SENSe:]FILTer<n>:LPASs[:STATe]....147
[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute]....147
[SENSe:]FILTer<n>:LPASs:FREQuency:RELative....148

[SENSe:]FILTer<n>:AOFF

This command switches all AF filters in the specified window off.

Suffix:
<n> 1...4
window

Example: `SENS:FILT:AOFF`

Usage: Event

Mode: ADEMOD, SFM

[SENSe:]FILTer<n>:AWEighted[:STATe] <State>

This command activates/deactivates the "A" weighting filter in the specified window.

For details on the A weighted filter see "A Weighted" on page 31.

Suffix:
<n> 1...4
window

Parameters:
<State> ON | OFF
*RST: OFF

Example: `FILT:AWE ON`
Activates the A weighting filter.

Mode: ADEMOD

[SENSe:]FILTer<n>:CCIT <State>

This command activates/deactivates the CCITT (CCITT P.53) weighting filter in the specified window.

For details on the CCITT filter see "CCITT" on page 30.

Suffix:
<n> 1...4
window

Parameters:
<State> ON | OFF
*RST: OFF

Example: `FILT:CCIT ON`
Activates the CCITT weighting filter.

Mode: ADEMOD

[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe] <State>

This command activates/deactivates the unweighted CCIR filter in the specified window.

For details on the unweighted CCIR filter see "CCIR Unweighted" on page 31.

Suffix:
<n> 1...4
window

Parameters:
<State> ON | OFF
*RST: OFF

Example: `FILT:CCIR:UNW ON`
Activates the unweighted CCIR filter.

Mode: ADEMOD

[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATe] <State>

This command activates/deactivates the weighted CCIR filter in the specified window.

For details on the weighted CCIR filter see "CCIR Weighted" on page 31.

Suffix:
<n> 1...4
window

Parameters:
<State> ON | OFF
*RST: OFF

Example: `FILT:CCIR:WEIG ON`
Activates the weighted CCIR filter.

Mode: ADEMOD

[SENSe:]FILTer<n>:DEMPhasis[:STATe] <State>

This command activates/deactivates the selected deemphasis in the specified window.

For details about deemphasis refer to "Deemphasis" on page 31.

Suffix:
<n> 1...4
window

Parameters:
<State> ON | OFF
*RST: OFF

Example: `FILT:DEMP ON`
Activates the selected deemphasis.

Mode: ADEMOD

[SENSe:]FILTer<n>:DEMPhasis:TCONstant

This command selects the deemphasis in the specified window.

For details on deemphasis refer to "Deemphasis" on page 31.

For details on the demodulation bandwidth range refer to "Demod BW" on page 29.

Suffix:
<n> 1...4
window

Parameters:
25 us | 50 us | 75 us | 750 us
*RST: 50 us

Example: `FILT:DEMP:TCON 750us`
Selects the deemphasis for the demodulation bandwidth range from 800 Hz to 4 MHz with a time constant of 750 µs.

Mode: ADEMOD

[SENSe:]FILTer<n>:HPASs[:STATe] <State>

This command activates/deactivates the selected high pass filter in the specified window.

For details on the high pass filter refer to "High Pass" on page 29.

Suffix:
<n> 1...4
window

Parameters:
<State> ON | OFF
*RST: OFF

Example: `FILT:HPAS ON`
Activates the selected high pass filter.

Mode: ADEMOD

[SENSe:]FILTer<n>:HPASs:FREQuency <FilterType>

This command selects the high pass filter type in the specified window. For details on filters refer to "High Pass" on page 29.

For details about the demodulation bandwidth range refer to "Demod BW" on page 29.

Suffix:
<n> 1...4
window

Parameters:
<FilterType> Range: 50 to 300
*RST: 300Hz
Default unit: Hz

Example: `FILT:HPAS:FREQ 300Hz`
Selects the high pass filter for the demodulation bandwidth range from 800 Hz to 16 MHz.

Mode: ADEMOD

[SENSe:]FILTer<n>:LPASs[:STATe] <State>

This command activates/deactivates the selected low pass filter in the specified window.

For details on the low pass filter refer to "Low Pass" on page 29.

Suffix:
<n> 1...4
window

Parameters:
<State> ON | OFF
*RST: OFF

Example: `FILT:LPAS ON`
Activates the selected low pass filter.

Mode: ADEMOD

[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute] <FilterType>

This command selects the absolute low pass filter type in the specified window. For details on filters refer to "Low Pass" on page 29.

For details about the demodulation bandwidth range refer to "Demod BW" on page 29.

Suffix:
<n> 1...4
window

Parameters:
<FilterType> 3kHz | 15kHz | 150kHz
*RST: 15kHz

Example: `FILT:LPAS:FREQ 150kHz`
Selects the low pass filter for the demodulation bandwidth range from 400 kHz to 16 MHz.

Mode: ADEMOD

[SENSe:]FILTer<n>:LPASs:FREQuency:RELative <FilterType>

This command selects the relative low pass filter type in the specified window. For details on filters refer to Low Pass softkey.

For details about the demodulation bandwidth range refer to "Demod BW" on page 29.

Suffix:
<n> 1...4
window

Parameters:
<FilterType> 5PCT | 10PCT | 25PCT
*RST: 25PCT

Example: `FILT:LPAS:FREQ 25PCT`
Selects the low pass filter as 25 % of the demodulation bandwidth.

Mode: ADEMOD

2.3.6.7 SENSe:FREQuency Subsystem (Analog Demodulation, R&S FSV–K7)

The SENSe:FREQuency subsystem defines the frequency axis of the active display. The frequency axis can either be defined via the start/stop frequency or via the center frequency and span.

[SENSe:]FREQuency:CENTer....148
[SENSe:]FREQuency:CENTer:STEP....149
[SENSe:]FREQuency:CENTer:STEP:LINK....149
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor....149

[SENSe:]FREQuency:CENTer <Frequency>

This command defines the center frequency (frequency domain) or measuring frequency (time domain).

Parameters:

<Frequency> Range: 0 to fmax
*RST: fmax/2
Default unit: Hz
f_{max} is specified in the data sheet. min span is 10 Hz

Example: `FREQ:CENT 100 MHz`

[SENSe:]FREQuency:CENTer:STEP <StepSize>

This command defines the center frequency step size.

Parameters:

<StepSize> Range: 1 to fmax
*RST: 0.1 x <span value>
Default unit: Hz

Example: `FREQ:CENT:STEP 120 MHz`

[SENSe:]FREQuency:CENTer:STEP:LINK <CouplingType>

This command couples and decouples the center frequency step size to the span or the resolution bandwidth.

Parameters:

<CouplingType>

SPAN
Couples the step size to the span. Available for measurements in the frequency domain.
(for RF spectrum result display)

RBW
Couples the step size to the resolution bandwidth. Available for measurements in the time domain.
(for all result displays except RF spectrum)

OFF
Decouples the step size (manual input).

*RST: SPAN

Example: `FREQ:CENT:STEP:LINK SPAN`

[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor <Factor>

This command defines a step size factor if the center frequency step size is coupled to the span or the resolution bandwidth.

Parameters:

<Factor> Range: 1 to 100
*RST: 10
Default unit: PCT

Example: `FREQ:CENT:STEP:LINK:FACT 20PCT`

2.3.6.8 SENSe:SWEep Subsystem (Analog Demodulation, R&S FSV–K7)

The SENSe:SWEep subsystem controls the sweep parameters.

[SENSe:]SWEep:COUNt....150
[SENSe:]SWEep:EGATe:HOLDoff....150
[SENSe:]SWEep:EGATe:POLarity....150
[SENSe:]SWEep:EGATe:SOURce....151
[SENSe:]SWEep:EGATe:TYPE....151
[SENSe:]SWEep:POINts....152
[SENSe:]SWEep:TIME....152

[SENSe:]SWEep:COUNt <NumberSweeps>

This command defines the number of sweeps started with single sweep, which are used for calculating the average or maximum value. If the values 0 or 1 are set, one sweep is performed.

Parameters:

<NumberSweeps> 0 to 32767

*RST: 0 (GSM: 200, PHN:1)

Example:

```
SWE:COUN 64
```
Sets the number of sweeps to 64.
```
INIT:CONT OFF
```
Switches to single sweep mode.
```
INIT;*WAI
```
Starts a sweep and waits for its end.

[SENSe:]SWEep:EGATe:HOLDoff <DelayTime>

This command defines the delay time between the external gate signal and the continuation of the sweep.

Note: Using gate mode "level" (see `[SENSe:]SWEep:EGATe:TYPE` on page 151) and an IFP trigger (see `TRIGger<n>[:SEQuence]:SOURce` on page 161), the holdoff time for the IFP trigger is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

Parameters:

<DelayTime> 0 s to 30 s

*RST: 0s

Example:

```
SWE:EGAT:HOLD 100us
```

[SENSe:]SWEep:EGATe:POLarity <Polarity>

This command determines the polarity of the external gate signal. The setting applies both to the edge of an edge-triggered signal and the level of a level-triggered signal.

Parameters:

<Polarity> POSitive | NEGative

*RST: POSitive

Example: `SWE:EGAT:POL POS`

[SENSe:]SWEep:EGATe:SOURce <Source>

This command selects the signal source for gated measurements.

If an IF power signal is used, the gate is opened as soon as a signal at > -20 dBm is detected within the IF path bandwidth (10 MHz).

For details see the "Trigger Source" on page 62 softkey.

Parameters:

<Source> EXTernal | IFPower | VIDeo | RFPower | PSEN

*RST: IFPower

Example: `SWE:EGAT:SOUR IFP`
Switches the gate source to IF power.

[SENSe:]SWEep:EGATe:TYPE <Type>

This command sets the type of triggering by the external gate signal.

A delay between applying the gate signal and the start of recording measured values can be defined, see `[SENSe:]SWEep:EGATe:HOLDoff` on page 150.

Parameters:

<Type> LEVel | EDGE

LEVel
The gate is level-triggered:
After detection of the gate signal, the gate remains open until the gate signal disappears. The gate opening time cannot be defined with the command `[SENSe:]SWEep:EGATe:HOLDoff`.
Note: Using gating with gate mode "level" and an IFP trigger (see `TRIGger<n>[:SEQuence]:SOURce` on page 161), the holdoff time for the IFP trigger is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

EDGE
The gate is edge-triggered:
After detection of the set gate signal edge, the gate remains open until the gate delay (`[SENSe:]SWEep:EGATe:HOLDoff`) has expired.

*RST: EDGE

Example: `SWE:EGAT:TYPE EDGE`

[SENSe:]SWEep:POINts <NumberPoints>

This command defines the number of measurement points to be collected during one sweep.

Parameters:

<NumberPoints> Range: 101 to 32001
*RST: 691

Example: `SWE:POIN 251`

[SENSe:]SWEep:TIME <Time>

This command defines the sweep time.

Parameters:

<Time> Refer to Instrument Functions Analog Demodulation (R&S FSV–K7) – Sample Rate, Measurement Time and Trigger Offset.

2.3.6.9 Other commands in the SENSe subsystem

[SENSe:]AVERage<n>:COUNt <NoMeasurements>

This command defines the number of measurements which contribute to the average value.

Note that continuous averaging is performed after the indicated number has been reached in continuous sweep mode.

In single sweep mode, the sweep is stopped as soon as the indicated number of measurements (sweeps) is reached. Synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

This command has the same effect as the `[SENSe<source>:]SWEep:COUNt` command. In both cases, the number of measurements is defined whether the average calculation is active or not.

The number of measurements applies to all traces in the window.

Suffix:

<n> Selects the measurement window.

Parameters:

<NoMeasurements> 0 to 32767
*RST: 0

Example:
`SWE:CONT OFF`
Switching to single sweep mode.
`AVER:COUN 16`
Sets the number of measurements to 16.
`AVER:STAT ON`
Switches on the calculation of average.
`INIT;*WAI`
Starts the measurement and waits for the end of the 16 sweeps.

[SENSe:]AVERage<n>:TYPE <FunctionType>

This command selects the type of average function.

Suffix:
<n> Selects the measurement window.

Parameters:
<FunctionType> VIDeo | LINear | POWer

VIDeo
The logarithmic power values are averaged.

LINear
The power values are averaged before they are converted to logarithmic values.

POWer
The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.

*RST: VIDeo

Example: `AVER:TYPE LIN`
Switches to linear average calculation.

[SENSe:][WINDow:]DETector<trace>[:FUNCtion] <Function>

This command selects the detector for the data acquisition in the selected trace.

Suffix:
<trace> 1...6
Selects the trace.

<trace> 1...6
trace

Parameters:
<Function> APEak | NEGative | POSitive | SAMPle | RMS | AVERage | QPEak

*RST: APEak
For details on detectors refer to chapter 2.1.7, "Detector Overview", on page 17.

Example: `DET POS`
Sets the detector to "positive peak".

[SENSe:][WINDow:]DETector<trace>[:FUNCtion]:AUTO <State>

This command either couples the detector to the current trace setting or turns coupling off.

Suffix:
<trace> 1...6
trace

Parameters:

<State> ON | OFF

*RST: ON

Example: `DET:AUTO OFF`

2.3.7 TRACe Subsystem (Analog Demodulation, R&S FSV–K7)

The TRACe subsystem controls access to the instruments internal trace memory.

2.3.7.1 Commands of the TRACe subsystem....154
2.3.7.2 Formats for Returned Values: ASCII Format and Binary Format....155

2.3.7.1 Commands of the TRACe subsystem

TRACe<n>[:DATA]? <ResultType>

This command returns the current trace data or measurement results. In case of several result displays, you have to use specific parameters to query the results.

For details on saving and recalling data refer to the `MMEMory` subsystem in the description of the base unit.

Suffix:

<n> 1...4
window; For applications that have only one measurement screen, the suffix is irrelevant.

Query parameters:

<ResultType> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6

Selects the type of result to be returned.

TRACE1 | ...| TRACE6
The query returns a list of results with one value for each sweep point in the currently set level unit.
For details see table 2-4

Example: `TRAC? TRACE1`
Returns the trace data for Trace 1.

Usage: Query only

Mode: A, ADEMOD, BT, NF, PHN, TDS

Table 2-4: Results for <TRACe...> ResultTypes

The query returns a list of results with one value for each sweep point in the currently set level unit. By default, the list contains 691 values. The currently used number of sweep points can be determined using SWE:POIN?, see `[SENSe:]SWEep:POINts` on page 152.
`FORMat REAL,32` is used as format for binary transmission, and `FORMat ASCii` for ASCII transmission.
With the auto peak detector, only positive peak values can be read out.
In **IQ Analyzer mode**, if the result display configuration "Real/Imag (I/Q)" is selected, this query returns the I values of each trace point first, then the Q values:
<result>= $I_1,I_2,...,I_n, Q_1,Q_2,...,Q_n$

2.3.7.2 Formats for Returned Values: ASCII Format and Binary Format

ASCII Format (FORMat ASCII)

The command reads out a list of comma separated values (CSV) of the measured values in floating point format.

Reading out data in binary format is quicker than in ASCII format. Thus, binary format is recommended for large amounts of data.

Binary Format (FORMat REAL,32)

The command reads out binary data (Definite Length Block Data according to IEEE 488.2), each measurement value being formatted in 32 Bit IEEE 754 Floating-Point-Format.

Depending on the number of samples to be transferred, 2 different kinds of syntax are used:

For <10^{10} samples:

The schema of the result string is as follows:

`#<NoOfDigits><NoOfDataBytes><value1><value2>…<value n>`, with

#	Header prefix, 1 byte
<NoOfDigits>	Number of digits of the following number of data bytes (= 4 in the example), 1 byte
<NoOfDataBytes>	Number of following data bytes in decimal form (= 1024 in the example), 1...9 bytes
<Value>	Data values, each one is a 4-byte floating point value

Example:

`#41024<value1><value2>…<value 256>`

4: the following number of data bytes has 4 digits

1024: 1024 Bytes of following data; float: 4 Bytes / value => 1024 / 4 = 256 values (128 I and 128 Q values)

<value x>: 4 Byte values, must be interpreted as float

For ≧10^{10} samples:

The schema of the result string is as follows:

`#(<NoOfDataBytes>)<value1><value2>…<value n>`, with

#	Header prefix, 1 byte
(	1 byte
<NoOfDataBytes>	number of following data bytes (= 1024 in the example), 10 bytes
)	1 byte
<Value>	Data values, each one is a 4-byte floating point value

Example:

`#(1677721600)<value 1><value 2> ... <value 419430400>`

(1677721600): 1677721600 Bytes of following data; float: 4 Bytes / value ==> 1677721600/ 4 = 419430400 values (200Ms I and 200Ms Q values)

<value x>: 4 Byte values, must be interpreted as float

2.3.8 TRIGger Subsystem (Analog Demodulation, R&S FSV–K7)

The TRIGger subsystem is used to synchronize instrument actions with events. It is thus possible to control and synchronize the start of a sweep.

TRIGger<n>[:SEQuence]:BBPower:HOLDoff....156
TRIGger<n>[:SEQuence]:HOLDoff[:TIME]....157
TRIGger<n>[:SEQuence]:IFPower:HOLDoff....157
TRIGger<n>[:SEQuence]:IFPower:HYSTeresis....157
TRIGger<n>[:SEQuence]:LEVel:AM[:ABSolute]....158
TRIGger<n>[:SEQuence]:LEVel:AM:RELative....158
TRIGger<n>[:SEQuence]:LEVel:BBPower....158
TRIGger<n>[:SEQuence]:LEVel:FM....159
TRIGger<n>[:SEQuence]:LEVel:IFPower....159
TRIGger<n>[:SEQuence]:LEVel:RFPower....159
TRIGger<n>[:SEQuence]:LEVel:PM....160
TRIGger<n>[:SEQuence]:TIME:RINTerval....160
TRIGger<n>[:SEQuence]:LEVel:VIDeo....160
TRIGger<n>[:SEQuence]:SLOPe....161
TRIGger<n>[:SEQuence]:SOURce....161

TRIGger<n>[:SEQuence]:BBPower:HOLDoff <Value>

This command sets the holding time before the next BB power trigger event (for digital input via the R&S Digital I/Q Interface, R&S FSV-B17).

Suffix:
<n> irrelevant

Parameters:
<Value> *RST: 150 ns

Example: `TRIG:SOUR BBP`
Sets the baseband power trigger source.
`TRIG:BBP:HOLD 200 ns`
Sets the holding time to 200 ns.

Mode: all

TRIGger<n>[:SEQuence]:HOLDoff[:TIME] <Delay>

This command defines the length of the trigger delay.

A negative delay time (pretrigger) can be set in zero span only.

Suffix:
<n> irrelevant

Parameters:
<Delay> Range: zero span: -sweeptime (see data sheet) to 30 s; span: 0 to 30 s
*RST: 0 s

Example: `TRIG:HOLD 500us`

TRIGger<n>[:SEQuence]:IFPower:HOLDoff <Value>

This command sets the holding time before the next IF power trigger event.

Suffix:
<n> irrelevant

Parameters:
<Value> *RST: 150 ns

Example: `TRIG:SOUR IFP`
Sets the IF power trigger source.
`TRIG:IFP:HOLD 200 ns`
Sets the holding time to 200 ns.

TRIGger<n>[:SEQuence]:IFPower:HYSTeresis <Value>

This command sets the limit that the hysteresis value for the IF power trigger has to fall below in order to trigger the next measurement.

Suffix:
<n> irrelevant

Parameters:
<Value> *RST: 3 dB

Example: `TRIG:SOUR IFP`
Sets the IF power trigger source.
`TRIG:IFP:HYST 10DB`
Sets the hysteresis limit value.

TRIGger<n>[:SEQuence]:LEVel:AM[:ABSolute] <Level>

The command sets the level when RF power signals are used as trigger source.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

Suffix:
n irrelevant

Parameters:
<Level>
Range: -100 to +30
*RST: -20 dBm
Default unit: dBm

Example: `TRIG:LEV:AM -30 dBm`
Sets the RF power signal trigger threshold to -30 dBm

Mode: ADEMOD

TRIGger<n>[:SEQuence]:LEVel:AM:RELative <Level>

The command sets the level when AM-modulated signals are used as trigger source.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

Suffix:
n irrelevant

Parameters:
<Level>
Range: -100 to +100
*RST: 0 %
Default unit: %

Example: `TRIG:LEV:AM:REL -20 %`
Sets the AM trigger threshold to -20 %

Mode: ADEMOD

TRIGger<n>[:SEQuence]:LEVel:BBPower <Level>

This command sets the level of the baseband power trigger source (for digital input via the R&S Digital I/Q Interface, R&S FSV-B17).

Suffix:
<n> irrelevant

Parameters:

<Level> Range: -50 dBm to +20 dBm
*RST: -20 DBM

Example: `TRIG:LEV:BB -30DBM`

Mode: All

TRIGger<n>[:SEQuence]:LEVel:FM <Level>

The command sets the level when FM-modulated signals are used as trigger source.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

Suffix:

n irrelevant

Parameters:

<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: `TRIG:LEV:FM 10 kHz`
Sets the FM trigger threshold to 10 kHz

Mode: ADEMOD

TRIGger<n>[:SEQuence]:LEVel:IFPower <TriggerLevel>

This command defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Suffix:

<n> irrelevant

Parameters:

<TriggerLevel> *RST: -20 dBm

Example: `TRIG:LEV:IFP -30DBM`

TRIGger<n>[:SEQuence]:LEVel:RFPower <TriggerLevel>

This command defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Suffix:

<n> irrelevant

Parameters:
<TriggerLevel> *RST: -20 dBm

Example: `TRIG:LEV:RFP -30dBm`

TRIGger<n>[:SEQuence]:LEVel:PM <Level>

The command sets the level when PM-modulated signals are used as trigger source.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

Suffix:
n irrelevant

Parameters:
<Level> Range: -1000 to +1000
*RST: 0 RAD
Default unit: RAD | DEG

Example: `TRIG:LEV:PM 1.2 RAD`
Sets the PM trigger threshold to 1.2 rad

Mode: ADEMOD

TRIGger<n>[:SEQuence]:TIME:RINTerval <Interval>

This command sets the repetition interval for the time trigger source.

Suffix:
<n> irrelevant

Parameters:
<Interval> 2.0 ms to 5000
*RST: 1.0

Example: `TRIG:SOUR TIME`
Selects the time trigger input for triggering.
`TRIG:TIME:RINT 50`
The sweep starts every 50 s.

Mode: All

TRIGger<n>[:SEQuence]:LEVel:VIDeo <Value>

This command sets the level of the video trigger source.

Suffix:
<n> irrelevant

Parameters:
<Value> 0 to 100 PCT
*RST: 50 PCT

Example: `TRIG:LEV:VID 50PCT`

TRIGger<n>[:SEQuence]:SLOPe <Type>

This command selects the slope of the trigger signal. The selected trigger slope applies to all trigger signal sources.

Suffix:
<n> irrelevant

Parameters:
<Type> POSitive | NEGative
*RST: POSitive

Example: `TRIG:SLOP NEG`

TRIGger<n>[:SEQuence]:SOURce <Source>

This command selects the trigger source.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal. For details on trigger modes refer to the Trigger Source softkey.

For details on trigger modes refer to the "Trg/Gate Source" softkey in the base unit description.

Suffix:
<n> irrelevant

Parameters:

<Source>

IMMediate
Free Run

EXTern
External trigger

IFPower
Power trigger at the second intermediate frequency

TIME
Time interval

GP0 | GP1 | GP2 | GP3 | GP4 | GP5
For I/Q Analyzer or AnalogDemod mode only:
Defines triggering of the measurement directly via the LVDS connector. The parameter specifies which general purpose bit (0 to 5) will provide the trigger data.
This trigger mode is available for input from the R&S Digital I/Q Interface (option R&S FSV-B17) only.
The assignment of the general purpose bits used by the Digital IQ trigger to the LVDS connector pins is provided in table 2-5

VIDeo
Video mode is only available in the time domain and only in Spectrum mode.

BBPower
Baseband power (for digital input via the R&S Digital I/Q Interface, R&S FSV-B17)

PSEN
External power sensor (requires R&S FSV-K9 option)

AF
AF power signal

FM
FM power signal

AM
corresponds to the RF power signal

AMRelative
corresponds to the AM signal

PM
PM power signal

*RST: IMMediate

Example:

```
TRIG:SOUR EXT
```

Selects the external trigger input as source of the trigger signal

Table 2-5: Assignment of general purpose bits to LVDS connector pins

Bit	LVDS pin
GP0	SDATA4_P - Trigger1
GP1	SDATA4_P - Trigger2
GP2	SDATA0_P - Reserve1

Bit	LVDS pin
GP3	SDATA4_P - Reserve2
GP4	SDATA0_P - Marker1
GP5	SDATA4_P - Marker2

2.3.9 UNIT Subsystem (Analog Demodulation, R&S FSV–K7)

UNIT:ANGLe <Unit>

This command selects the unit for angles (e.g. for PM display).

The unit is defined globally for all windows.

Suffix:
<n> irrelevant

Parameters:
<Unit> DEG | RAD
*RST: RAD

Example: `UNIT:ANGL DEG`

Mode: ADEMOD, SFM

UNIT:POWer <Unit>

This command selects the unit for power.

The unit is defined globally for all windows.

Suffix:
<n> irrelevant

Parameters:
<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT | DBUA | AMPere
*RST: dBm

Example: `UNIT:POW DBM`
Sets the power unit to dBm.

Mode: A, ADEMOD, SFM, SPECM

UNIT:THD <Mode>

Selects the unit for THD measurements.

Parameters:
<Mode> DB | PCT
*RST: DB

Example: `UNIT:THD PCT`

Mode: ADEMOD, SFM

2.3.10 Other Commands Referenced in this Manual

2.3.10.1 CALCulate:DELTamarker Subsystem (Analog Demodulation, R&S FSV–K7)

The CALCulate:DELTamarker subsystem controls the delta marker functions of the instrument.

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:MAXimum[:PEAK] 164
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X 164
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y 165
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed[:STATe] 165
CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise[:STATe] 166
CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise:AUTO 166
CALCulate<n>:DELTamarker<m>:LINK 167
CALCulate<n>:DELTamarker<m>:MREF 167
CALCulate<n>:DELTamarker<m>[:STATe] 167
CALCulate<n>:DELTamarker<m>:TRACe 168
CALCulate<n>:DELTamarker<m>:X 168
CALCulate<n>:DELTamarker<m>:X:RELative 168
CALCulate<n>:DELTamarker<m>:Y? 169

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:MAXimum[:PEAK]

This command moves the fixed reference marker to the peak power.

When measuring the phase noise, the command defines a new reference point level for delta marker 2.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:DELT:FUNC:FIX:RPO:MAX`
Sets the reference point level for delta markers to the peak of the selected trace.

Usage: Event

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X <Reference>

This command defines the horizontal position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

When measuring the phase noise, the command defines the frequency reference for delta marker 2.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<Reference> Numeric value that defines the horizontal position of the reference. For frequency domain measurements, it is a frequency in Hz. For time domain measurements, it is a point in time in s.

*RST: Fixed reference: OFF

Example: `CALC:DELT:FUNC:FIX:RPO:X 128 MHz`
Sets the frequency reference to 128 MHz.

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y <RefPointLevel>

This command defines the vertical position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

When measuring the phase noise, the command defines the level reference for delta marker 2.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<RefPointLevel> Numeric value that defines the vertical position of the reference. The unit and value range is variable.

*RST: Fixed reference: OFF

Example: `CALC:DELT:FUNC:FIX:RPO:Y -10dBm`
Sets the reference point level for delta markers to -10 dBm.

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed[:STATe] <State>

This command switches the relative measurement to a fixed reference value on or off. Marker 1 is activated previously and a peak search is performed, if necessary. If marker 1 is activated, its position becomes the reference point for the measurement. The reference point can then be modified with the `CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X` commands and `CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y` independently of the position of marker 1 and of a trace. It applies to all delta markers as long as the function is active.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<State> ON | OFF

*RST: OFF

Example:
```
CALC:DELT:FUNC:FIX ON
```
Switches on the measurement with fixed reference value for all delta markers.
```
CALC:DELT:FUNC:FIX:RPO:X 128 MHZ
```
Sets the frequency reference to 128 MHz.
```
CALC:DELT:FUNC:FIX:RPO:Y 30 DBM
```
Sets the reference level to +30 dBm.

CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise[:STATe] <State>

This command turns the phase noise measurement at the delta marker position on and off.

The correction values for the bandwidth and the log amplifier are taken into account in the measurement.

The reference marker for phase noise measurements is either a normal marker or a fixed reference. If necessary, the command turns on the reference marker

A fixed reference point can be modified with the `CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X` and `CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y` commands independent of the position of marker 1 and of a trace.

Suffix:

<n> Selects the measurement window.

<m> irrelevant
Note: marker 2 is always the deltamarker for phase noise measurement results.

Parameters:

<State> ON | OFF

*RST: OFF

Example:
```
CALC:DELT:FUNC:PNO ON
```
Switches on the phase-noise measurement with all delta markers.
```
CALC:DELT:FUNC:FIX:RPO:X 128 MHZ
```
Sets the frequency reference to 128 MHz.
```
CALC:DELT:FUNC:FIX:RPO:Y 30 DBM
```
Sets the reference level to +30 dBm

CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise:AUTO <State>

This command turns an automatic peak search for the fixed reference marker at the end of a sweep on and off.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:DELT:FUNC:PNO:AUTO ON`

Activates an automatic peak search for the reference marker in a phase-noise measurement.

CALCulate<n>:DELTamarker<m>:LINK <State>

This command links delta marker 1 to marker 1.

If you change the horizontal position of the marker, so does the delta marker.

Suffix:

<n> Selects the measurement window.

<m> 1
irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:DELT:LINK ON`

CALCulate<n>:DELTamarker<m>:MREF <RefMarkerNo>

This command defines the reference marker for a delta marker other than marker 1.

The reference may be another marker or the fixed reference.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<RefMarkerNo> **1 ... 16**
Selects markers 1 to 16 as the reference.

FIXed
Selects the fixed reference as the reference.

Example: `CALC:DELT3:MREF 2`

Specifies that the values of delta marker 3 are relative to marker 2.

CALCulate<n>:DELTamarker<m>[:STATe] <State>

This command turns delta markers on and off.

If the corresponding marker was a normal marker, it is turned into a delta marker.

No suffix at DELTamarker turns on delta marker 1.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<State> ON | OFF

*RST: OFF

Example: `CALC:DELT1 ON`
Switches marker 1 to delta marker mode.

CALCulate<n>:DELTamarker<m>:TRACe <TraceNumber>

This command selects the trace a delta marker is positioned on.

The corresponding trace must have a trace mode other than "Blank".

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<TraceNumber> **1 ... 6**
Trace number the marker is positioned on.

Example: `CALC:DELT3:TRAC 2`
Assigns delta marker 3 to trace 2.

CALCulate<n>:DELTamarker<m>:X <Position>

This command positions a delta marker on a particular coordinate on the x-axis.

The position is an absolute value.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Parameters:
<Position> 0 to maximum frequency or sweep time

Example: `CALC:DELT:X?`
Outputs the absolute frequency/time of delta marker 1.

CALCulate<n>:DELTamarker<m>:X:RELative

This command queries the x-value of the selected delta marker relative to marker 1 or to the reference position (for `CALC:DELT:FUNC:FIX:STAT ON`). The command activates the corresponding delta marker, if necessary.

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:DELT3:X:REL?`
Outputs the frequency of delta marker 3 relative to marker 1 or relative to the reference position.

CALCulate<n>:DELTamarker<m>:Y?

This command queries the measured value of a delta marker. The corresponding delta marker is activated, if necessary. The output is always a relative value referred to marker 1 or to the reference position (reference fixed active).

To obtain a correct query result, a complete sweep with synchronization to the sweep end must be performed between the activation of the delta marker and the query of the y value. This is only possible in single sweep mode.

Depending on the unit defined with `CALC:UNIT:POW` or on the activated measuring functions, the query result is output in the units below:

Table 2-6: Analog demodulation measurements

Parameter, measuring function or result display	Output unit
AM result display (R&S FSV–K7)	% (lin) dB (log)
FM result display (R&S FSV–K7)	Hz (lin) dB (log)
PM result display (R&S FSV–K7)	rad | deg (lin) dB (log)
RF result display (R&S FSV–K7)	dB (Range Log or Range Linear %) % (Range Linear %)

Suffix:
<n> Selects the measurement window.

<m> Selects the marker.

Example: `INIT:CONT OFF`
Switches to single sweep mode.
`INIT;*WAI`
Starts a sweep and waits for its end.
`CALC:DELT2 ON`
Switches on delta marker 2.
`CALC:DELT2:Y?`
Outputs measurement value of delta marker 2.

Usage: Query only

2.3.10.2 INPut subsystem

INPut:ATTenuation....170
INPut:ATTenuation:AUTO....170
INPut:COUPling....171
INPut:DIQ:CDEVice....171
INPut:DIQ:RANGe:COUPling....172
INPut:DIQ:RANGe[:UPPer]....172
INPut:DIQ:RANGe[:UPPer]:UNIT....173
INPut:DIQ:SRATe....173
INPut:EATT....173
INPut:EATT:AUTO....174
INPut:GAIN:STATe....174
INPut:IMPedance....174
INPut:SELect....175

INPut:ATTenuation <Value>

This command programs the input attenuator. To protect the input mixer against damage from overloads, the setting 0 dB can be obtained by entering numerals, not by using the DOWN command.

The attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps). If the defined reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

In the default state with "Spectrum" mode, the attenuation set on the step attenuator is coupled to the reference level of the instrument. If the attenuation is programmed directly, the coupling to the reference level is switched off.

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<Value> *RST: 10 dB (AUTO is set to ON)

Example: `INP:ATT 30dB`
Sets the attenuation on the attenuator to 30 dB and switches off the coupling to the reference level.

Mode: all

INPut:ATTenuation:AUTO <State>

This command automatically couples the input attenuation to the reference level (state ON) or switches the input attenuation to manual entry (state OFF).

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<State> ON | OFF

*RST: ON

Example: `INP:ATT:AUTO ON`
Couples the attenuation set on the attenuator to the reference level.

INPut:COUPling <CouplingType>

Toggles the RF input of the R&S FSV between AC and DC coupling.

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<CouplingType> AC | DC
*RST: AC

Example: `INP:COUP:DC`

INPut:DIQ:CDEVice

This command queries the current configuration and the status of the digital baseband input from the optional R&S Digital I/Q Interface (option R&S FSV-B17).

For details see the section "Interface Status Information" for the R&S Digital I/Q Interface (R&S FSV-B17) in the description of the base unit.

Return values:

<ConnState> Defines whether a device is connected or not.
0
No device is connected.
1
A device is connected.

<DeviceName> Device ID of the connected device

<SerialNumber> Serial number of the connected device

<PortName> Port name used by the connected device

<SampleRate> Maximum or currently used sampling rate of the connected device in Hz (depends on the used connection protocol version; indicated by <SampleRateType> parameter)

<MaxTransferRate> Maximum data transfer rate of the connected device in Hz

<ConnProtState> State of the connection protocol which is used to identify the connected device.
Not Started
Has to be Started
Started
Passed
Failed
Done

<PRBSTestState> State of the PRBS test.
Not Started
Has to be Started
Started
Passed
Failed
Done

<SampleRateType> **0**
Maximum sampling rate is displayed
1
Current sampling rate is displayed

<Placeholder> for future use; currently "0"

Example:
```
INP:DIQ:CDEV?
```
Result:
```
1,SMU200A,103634,Out
A,70000000,100000000,Passed,Not Started,0,0
```

Mode: IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMOD, TDS

INPut:DIQ:RANGe:COUPling <State>

If enabled, the reference level for digital input is adjusted to the full scale level automatically if the fullscale level changes.

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:
<State> ON | OFF
*RST: OFF

Example:
```
INP:DIQ:RANG:COUP OFF
```

Mode: IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMOD, TDS

INPut:DIQ:RANGe[:UPPer] <Level>

Defines or queries the "Full Scale Level", i.e. the level that should correspond to an I/Q sample with the magnitude "1".

It can be defined either in dBm or Volt (see "Full Scale Level" on page 76).

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<Level> <numeric value>

Range: 70.711 nV to 7.071 V
*RST: 1 V

Example: `INP:DIQ:RANG 1V`

Mode: A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEMOD, GSM, OFDM, OFDMA/WiBro, WLAN

INPut:DIQ:RANGe[:UPPer]:UNIT <Unit>

Defines the unit of the full scale level (see "Level Unit" on page 77). The availability of units depends on the measurement application you are using.

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<Level> V | dBm | dBpW | W | dBmV | dBuV | dBuA | A

*RST: Volt

Example: `INP:DIQ:RANG:UNIT A`

Mode: IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMOD, TDS

INPut:DIQ:SRATe <SampleRate>

This command specifies or queries the sample rate of the input signal from the R&S Digital I/Q Interface (see "Input Sample Rate" on page 76).

Note: the final user sample rate of the R&S FSV may differ and is defined using `SENSe:ADEM:SRATe` (see `[SENSe:]ADEMod:SRATe?` on page 139).

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<SampleRate> Range: 1 Hz to 10 GHz
*RST: 32 MHz

Example: INP:DIQ:SRAT 200 MHz

Mode: A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEMOD, GSM, OFDM, OFDMA/WiBro, WLAN

INPut:EATT <Attenuation>

This command defines the electronic attenuation.

If necessary, the command also turns the electronic attenuator on.

This command is only available with option R&S FSV-B25, but not if R&S FSV-B17 is active.

The attenuation can be varied in 1 dB steps from 0 to 25 dB. Other entries are rounded to the next lower integer value.

If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

Parameters:

<Attenuation> 0...25

*RST: 0 dB (OFF)

Example: `INP1:EATT 10 dB`

Mode: all

INPut:EATT:AUTO <State>

This command switches the automatic behaviour of the electronic attenuator on or off. If activated, electronic attenuation is used to reduce the operation of the mechanical attenuation whenever possible.

This command is only available with option R&S FSV-B25, but not if R&S FSV-B17 is active.

Parameters:

<State> ON | OFF

*RST: ON

Example: `INP1:EATT:AUTO OFF`

Mode: all

INPut:GAIN:STATe <State>

This command turns the 20 dB preamplifier on and off.

With option R&S FSV-B22, the preamplifier only has an effect below 7 GHz.

With option R&S FSV-B24, the amplifier applies to the entire frequency range.

This command is not available when using R&S Digital I/Q Interface (R&S FSV-B17).

Parameters:

<State> ON | OFF

*RST: OFF

Example: `INP:GAIN:STAT ON`
Turns the preamplifier on.

INPut:IMPedance <Impedance>

This command selects the nominal input impedance.

75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75Ω/50Ω).

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:
<Impedance> 50 | 75
*RST: 50 Ω

Example: `INP:IMP 75`

INPut:SELect <Source>

This command selects the signal source for measurements.

Parameters:
<Source> RF | DIQ

RF
Radio Frequency ("RF INPUT" connector)

DIQ
Digital IQ (only available with R&S Digital I/Q Interface, option R&S FSV-B17)

*RST: RF

Example: INP:SEL RF

Mode: A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEMOD, GSM, OFDM, OFDMA/WiBro, WLAN

2.3.10.3 MMEMory subsystem

MMEMory:STORe<n>:LIST <FileName>

This command stores the current list evaluation results in a `<file name>.dat` file. The file consists of a data section containing the list evaluation results.

Suffix:
<n> irrelevant

Parameters:
<FileName> <file name>

Example: `MMEM:STOR:LIST 'test'`
Stores the current list evaluation results in the `test.dat` file.

OUTPut:IF[:SOURce] <Source>

This command selects the source of the IF output.

Parameters:

<Source>

IF
intermediate frequency output

VIDeo
video output, 200 mV

*RST: IF

Example: `OUTP:IF VID`
Selects the video signal for the IF output connector.

MMEMory:STORe<n>:TRACe <Trace>, <FileName>

This command stores the selected trace in the specified window in a file with ASCII format. The file format is described in chapter 2.1.10, "ASCII File Export Format", on page 23

The decimal separator (decimal point or comma) for floating-point numerals contained in the file is defined with the `FORMat:DEXPort:DSEParator` command (see `FORMat:DEXPort:DSEParator` on page 177).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:

<Trace> 1 to 6

selected measurement trace

<FileName> DOS file name
The file name includes indication of the path and the drive name. Indication of the path complies with DOS conventions.

Example: `MMEM:STOR:TRAC 3,'TEST.ASC'`
Stores trace 3 in the file TEST.ASC.

2.3.10.4 OUTPut subsystem

OUTPut:DIQ <State>

If enabled, the captured IQ data is output to the R&S Digital I/Q Interface in a continuous stream. This function requires the LVDS interface option (R&S FSV-B17).

Digital input and digital output cannot be used simultaneously.

Parameters:

<State> **ON | OFF**

*RST: OFF

Example: `OUTP:DIQ ON`

Mode: ADEMOD, IQ, VSA

OUTPut:TRIGger <PortLevel>

This command selects level of the Trigger Out port. Thus, you can trigger an additional device via the external trigger port, for example.

Parameters:

<PortLevel> LOW | HIGH

*RST: LOW

Example: `OUTP:TRIG HIGH`

2.3.10.5 Other Commands

FORMat[:DATA] <Format>

This command selects the data format for the data transmitted from the R&S FSV to the controlling computer. It is used for the transmission of trace data. The data format of trace data received by the instrument is automatically recognized, regardless of the format which is programmed.

(See also `TRACe<n>[:DATA]?` on page 154).

Parameters:

<Format>

ASCii
ASCII data are transmitted in plain text, separated by commas.

REAL
REAL data are transmitted as 32-bit IEEE 754 floating-point numbers in the "definite length block format".

*RST: ASCII

Example:
```
FORM REAL,32
FORM ASC
```

FORMat:DEXPort:DSEParator <Separator>

This command defines which decimal separator (decimal point or comma) is to be used for outputting measurement data to the file in ASCII format. Different languages of evaluation programs (e.g. MS-Excel) can thus be supported.

Parameters:

<Separator> POINt | COMMA

*RST: (factory setting is POINt; *RST does not affect setting)

Example: `FORM:DEXP:DSEP POIN`
Sets the decimal point as separator.

DIAGnostic<n>:SERVice:NSOurce <State>

This command switches the 28 V supply of the noise source on the front panel on or off.

Suffix:
<n> irrelevant

Parameters:
<State> ON | OFF
*RST: OFF

Example: `DIAG:SERV:NSO ON`

INITiate<n>:CONMeas

This command restarts a measurement that has been stopped in single sweep mode.

The measurement is restarted at the first sweep point.

As opposed to `INITiate<n>[:IMMediate]`, this command does not reset traces in maxhold, minhold or average mode. Therefore it can be used to continue measurements using max hold or averaging functions.

In single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

Suffix:
<n> irrelevant

Example: `INIT:CONT OFF`
Switches to single sweep mode.
`DISP:WIND:TRAC:MODE AVER`
Switches on trace averaging.
`SWE:COUN 20`
Setting the sweep counter to 20 sweeps.
`INIT;*WAI`
Starts the measurement and waits for the end of the 20 sweeps.
`INIT:CONM;*WAI`
Continues the measurement (next 20 sequences) and waits for the end.

INITiate<n>:CONTinuous <State>

This command determines whether the trigger system is continuously initiated (continuous) or performs single measurements (single).

The sweep is started immediately.

Suffix:
<n> irrelevant

Parameters:
<State> ON | OFF
*RST: ON

Example: `INIT:CONT OFF`
Switches the sequence to single sweep.
`INIT:CONT ON`
Switches the sequence to continuous sweep.

Mode: all

INITiate<n>[:IMMediate]

The command initiates a new measurement sequence.

With sweep count > 0 or average count > 0, this means a restart of the indicated number of measurements. With trace functions MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

In single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

Suffix:
<n> irrelevant

Example: `INIT:CONT OFF`
Switches to single sweep mode.
`DISP:WIND:TRAC:MODE AVER`
Switches on trace averaging.
`SWE:COUN 20`
Setting the sweep counter to 20 sweeps.
`INIT;*WAI`
Starts the measurement and waits for the end of the 20 sweeps.

Mode: all

SYSTem:DISPlay:UPDate <State>

In remote control mode, this command switches on or off the instrument display. If switched on, only the diagrams, traces and display fields are displayed and updated.

The best performance is obtained if the display output is switched off during remote control.

Parameters:
<State> ON | OFF
*RST: OFF

Example: `SYST:DISP:UPD ON`

3 FM Stereo Option R&S FSV–K7S

The firmware option "FM Stereo" extends the "Analog Demodulation" option K7 to handle FM stereo signals. The "FM Stereo" mode requires an instrument equipped with the corresponding optional software, as well as the Analog Demodulation option (K7).

This section contains all information required for operation of an R&S FSV equipped with Application Firmware R&S FSV–K7S. It covers operation via menus and the remote control commands for FM stereo analog demodulation measurements.

- chapter 3.1, "Instrument Functions FM Stereo (R&S FSV–K7S)", on page 180 shows all softkeys available in the "FM Stereo" menu. This chapter also presents the remote control commands associated with each softkey function.
- The following chapters describe the softkeys of the other keys for the FM Stereo option.
- chapter 3.2, "Remote Commands of the FM Stereo Option (R&S FSV–K7S)", on page 219 describes all remote control commands defined for the FM Stereo option.

This part of the documentation includes only additional functions of the Application Firmware R&S FSV–K7S. For all other descriptions, please refer to the description of the Analog Demodulation option K7 (see chapter 2.2.1, "Softkeys of the Analog Demodulation Menu (R&S FSV-K7)", on page 25).

3.1 Instrument Functions FM Stereo (R&S FSV–K7S)

The firmware option R&S FSV–K7S (together with the Analog Demodulation option K7) provides the necessary measurement functions to demodulate FM stereo signals. It allows you to detect and analyze characteristic data in an FM stereo signal.

To open the FM Stereo menu

- If the "FM Stereo" mode is not the active measurement mode, press the MODE key and select the "FM Stereo" softkey.
- If the "FM Stereo" mode is already active, press the HOME key or the MEAS key. The "FM Stereo" menu is displayed.

Menu and softkey description

The following softkey menus are specific to the FM Stereo option:

- chapter 3.1.2, "Softkeys of the FM Stereo Menu - MEAS key (K7S)", on page 184
- chapter 3.1.3, "Softkeys of the Amplitude Menu – AMPT Key (R&S FSV–K7S)", on page 198
- chapter 3.1.6, "Softkeys of the Marker Function Menu – MKR FUNC Key (R&S FSV–K7S)", on page 212
- chapter 3.1.5, "Softkeys of the Trigger Menu – TRIG Key (R&S FSV–K7S)", on page 207

Apart from the power measurement menu (MEAS key) that is not available in the "FM Stereo" mode, all other menus not described here are provided as described for Analog Demodulation mode (R&S FSV-K7). For details refer to the corresponding menu descriptions.

- chapter 2.2.2, "Softkeys of the Frequency Menu – FREQ Key (R&S FSV-K7)", on page 38
- chapter 2.2.3, "Softkeys of the Span Menu – SPAN Key (R&S FSV-K7)", on page 40
- chapter 2.2.5, "Softkeys of the Auto Set menu - AUTO SET Key (R&S FSV-K7)", on page 47
- chapter 2.2.7, "Softkeys of the Sweep Menu – SWEEP Key (R&S FSV-K7)", on page 54
- chapter 2.2.8, "Softkeys of the Trace Menu – TRACE key (R&S FSV-K7)", on page 55
- chapter 2.2.10, "Softkeys of the Marker Menu – MKR key (R&S FSV-K7)", on page 65

To display help to a softkey, press the HELP key and then the softkey for which you want to display help. To close the help window, press the ESC key. For further information refer to chapter 1.3, "How to Use the Help System", on page 8.

Further Information

- chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18
- chapter 3.1.1, "Measurement Result Display (FM Stereo)", on page 181

3.1.1 Measurement Result Display (FM Stereo).....181
3.1.2 Softkeys of the FM Stereo Menu - MEAS key (K7S).....184
3.1.3 Softkeys of the Amplitude Menu – AMPT Key (R&S FSV–K7S).....198
3.1.4 Softkeys of the Bandwidth Menu – BW Key (R&S FSV–K7S).....203
3.1.5 Softkeys of the Trigger Menu – TRIG Key (R&S FSV–K7S).....207
3.1.6 Softkeys of the Marker Function Menu – MKR FUNC Key (R&S FSV–K7S).....212

3.1.1 Measurement Result Display (FM Stereo)

In FM Stereo mode, the measurement results can be displayed in up to 4 different screens (windows), plus an additional marker table, if applicable. Each screen shows either the measurement results as a diagram or the results of evaluation functions in a table ("Result Summary").

All displays are determined by the I/Q data set recorded for the measurement.

You can define the display configuration for up to 4 different screens at once using the "Display Config" on page 185 softkey.

Screen configuration

For each screen you can define:

- **Off**: Whether it is displayed or not
- **Summary**: Whether a result summary for all screens is displayed instead of a diagram
- **RF Diagrams**: Whether an RF diagram is displayed; these displays correspond to those for Analog Demodulation mode (R&S FSV-K7, see chapter 2.1.9, "Measurement Result Display", on page 20)
- **FM Stereo Diagrams: For which channel a time domain or spectrum diagram is displayed**

Diagram types

The following diagram types can be selected for display.

- **RF Time Domain**
  Selects the display of the RF power in zero span. In contrast to normal analyzer operation, the level values are the magnitude of the I/Q data set.

SCPI command:

`CALC:FEED 'XTIM:RFP'` (see `CALCulate<n>:FEED` on page 89)

- **RF Spectrum**
  Selects the display of the RF signal in span > 0. In contrast to normal spectrum analyzer operation, the measured values are determined using FFT from the recorded I/Q data set.

SCPI command:

`CALC:FEED 'XTIM:SPECTRUM'` (see `CALCulate<n>:FEED` on page 89)

- **<FM Stereo Channel Type> Time Domain**
  Selects the display of the channel power in zero span. In contrast to normal analyzer operation, the level values are the magnitude of the I/Q data set.

SCPI command:

`CALC:FEED 'XTIM:SFM:<ChannelType>'`, e.g. `CALC:FEED 'XTIM:SFM:LEFT'` (see `CALCulate<n>:FEED` on page 89)

- **<FM Stereo Channel Type> Spectrum**
  Selects the display of the channel signal in span > 0. In contrast to normal spectrum analyzer operation, the measured values are determined using FFT from the recorded I/Q data set.

SCPI command:

`CALC:FEED 'XFR:SFM:<ChannelType>'`, e.g. `CALC:FEED 'XFR:SFM:LEFT'` (see `CALCulate<n>:FEED` on page 89)

Diagram header information

For each diagram, the header provides the following information:

1. Screen A/B/C/D
2. Channel type
3. Trace color
4. Trace number
5. Detector
6. Trace mode
7. Reference value

Diagram footer information

In addition to the used frequency and span information, the diagram footer also indicates the used weighting filter, if any, in FM stereo mode.

Result Summary

The result summary displays the results of the evaluation functions for all channels in a table.

D Result Summary

Carrier Power: -30.00 dBm **Carrier Freq:** 15.0 GHz **Ref Deviation:** 54.305 kHz
Cross Talk: -2.87 dB

	Detector	Result Mode	Dev.	Rel. to Ref.	Mod. Freq.	SINAD	THD
Left	±Peak/2	Clear Write	54.305 kHz	0.00 dB	1.0000 kHz	70.88 dB	-92.99 dB
Right	±Peak/2	Clear Write	39.010 kHz	-2.87 dB	3.0000 kHz	67.95 dB	-97.02 dB
MPX	±Peak/2	Clear Write	73.596 kHz	2.64 dB	3.0000 kHz	1.98 dB	-85.42 dB
Mono	±Peak/2	Clear Write	36.336 kHz	-3.49 dB	1.0000 kHz	4.68 dB	-4.68 dB
Stereo	±Peak/2	Clear Write	63.823 kHz	1.40 dB	3.0000 kHz		
RDS	±Peak/2	Clear Write	2.046 kHz	-28.48 dB			
Pilot	±Peak/2	Clear Write	7.508 kHz	-17.19 dB	19.000 kHz		

Summaries that take up the entire width of the screen are displayed as tables; if only half the screen width is available (2 windows next to each other), the summary is displayed as a list. Thus, the factory-set predefined screen configurations contain only 3 screens: 2 for diagrams and one full-width screen for the summary.

For each channel, the following information is provided:

Label	Description
Detector	Selected detector type
Result Mode	Selected result mode
Dev.	Deviation
Rel. to Ref.	Relative to reference
Mod. Freq.	Modulation frequency

Label	Description
SINAD	Signal-to-noise and distortion Measures the ratio of the total power to the power of noise and harmonic distortions. The noise and harmonic power is calculated inside the AF spectrum span. The DC offset is removed before the calculation. $SINAD[dB] = 20 \cdot \log\left[\frac{\text{total power}}{\text{noise + distortion power}}\right]$
THD	Total harmonic distortion The ratio of the harmonics to the fundamental and harmonics. All harmonics inside the AF spectrum span are considered up to the tenth harmonic. $THD[dB] = 20 \cdot \log\left[\frac{\sqrt{\sum_{i=2}^{\infty} U_i^2}}{\sqrt{\sum_{i=1}^{\infty} U_i^2}}\right]$

In addition, the following general information for the input signal is provided:

- Carrier Power
- Carrier Frequency
- Reference Deviation
- Cross Talk (difference between left and right signal in dB), see also `CALCulate<n>:MARKer:FUNCtion:SFM:<ChannelType>[:RESult<m>]?` on page 226

3.1.2 Softkeys of the FM Stereo Menu - MEAS key (K7S)

This section describes all softkeys available in the "FM Stereo" menu.

Left 185
└ Display Config 185
└ Screen A-D 186
└ Predefined 187
└ Add 187
└ Apply 187
└ Remove 187
└ Restore 187
└ Close 187
└ Result Summary Setup 188
└ Detector 189
└ Mode 189
└ Coupled 189
└ Meas To Ref 190
└ Meas Time 190

└ AF Filter....190
└ High Pass....190
└ Low Pass....191
└ Weighting....191
└ None....192
└ CCITT....192
└ CCIR Unweighted....192
└ CCIR Weighted....192
└ A Weighted....192
└ Deemphasis....193
└ Coupled....193
└ All AF Filter Off....193
└ AF Range....194
└ Dev per Division....194
└ Reference Position....194
└ Reference Value....194
└ AF Coupling AC/DC....194
└ Deviation Lin/Log....195
└ Unit....195
└ Phase Unit (Rad/Deg)....195
└ THD Unit (% / DB)....195
└ Abs. Dev Unit (kHz/dBm)....195
└ Rel. Dev Unit (dB / %)....195
└ Time Domain Zoom....196
└ State On / Off....196
└ Start....196
└ Length Manual....196
└ Length Auto....196
└ Time per Division....196
└ Squelch....196
└ Squelch Level....197
Right....197
MPX....197
Mono....197
Stereo....197
RDS....197
Pilot....197
RF Power....198
Display Config....198

Left
Displays the left signal of the FM stereo input and the "Left" submenu.

Remote command:
`CALCulate<n>:FEED` on page 89

Display Config ← Left
You configure the display settings for the results in the "Display Configuration" dialog box. This dialog box contains the following tabs:

- "Screen A-D": a separate tab for each of the four available screens

- "Predefined": for predefined display configurations

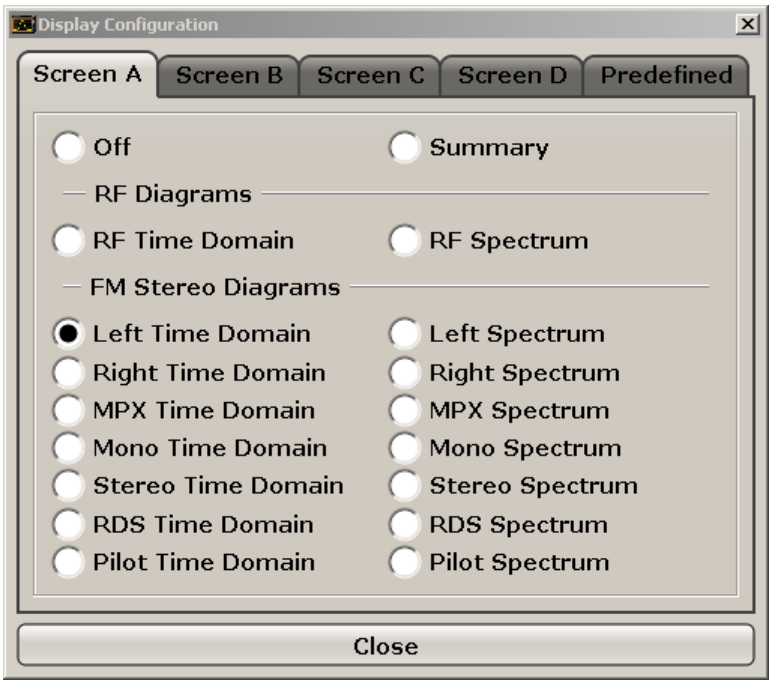

Screen A-D ← Display Config ← Left
For each of the four available screens you can configure what is to be displayed. To define the Display Configuration for a screen, select the corresponding tab. For each screen you can define:

- "Off": Whether it is displayed or not
- "Summary": Whether a summary of the evaluation lists from all screens is displayed instead of a diagram
- "RF Diagrams": Which type of diagram is displayed; this is the standard R&S FSV-K7 diagram type
  For details on the result diagram types, see chapter 2.1.9, "Measurement Result Display", on page 20.
- "FM Stereo Diagrams": Which type of FM stereo diagram is displayed; each measurement type can be displayed either in the time domain or as a spectrum

Note: Summaries that take up the entire width of the screen are displayed as tables; if only half the screen width is available (2 windows next to each other), the summary is displayed as a list. Thus, the factory-set predefined screen configurations contain only 3 screens: 2 for diagrams and one full-width screen for the summary.

Remote command:
`INSTrument[:SELect]` on page 113
Activates stereo fm demodulation.
`CALCulate<n>:FEED` on page 89
Defines the display configuration.

Predefined ← Display Config ← Left
You can store and load predefined screen configurations. All available configurations are displayed in the "Predefined" tab. The current screen configuration is indicated under "Current" at the top of the list.

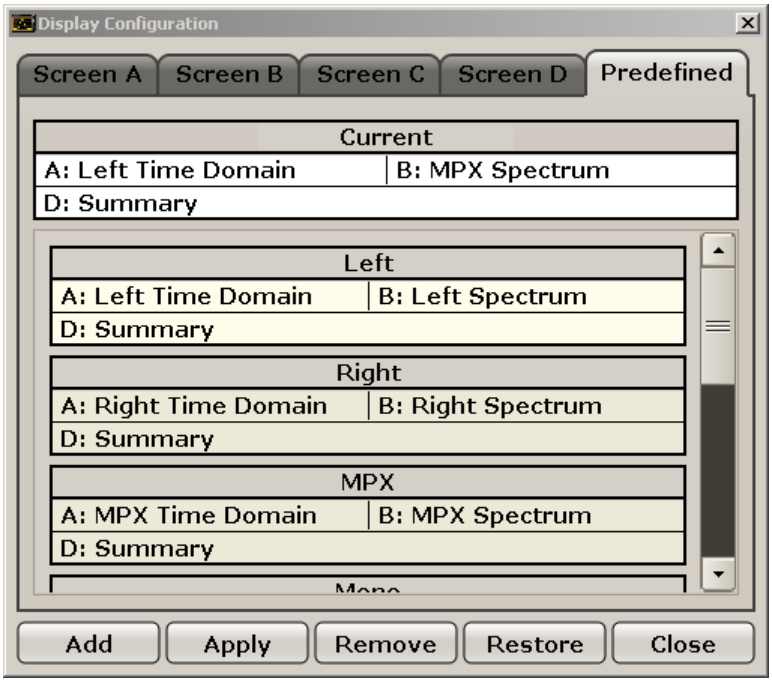

Add ← Predefined ← Display Config ← Left
Opens an edit dialog box to enter a name for the current screen configuration. The configuration is then stored and added to the list.

Apply ← Predefined ← Display Config ← Left
Applies the currently selected configuration from the list to the current display.

Remove ← Predefined ← Display Config ← Left
Removes the currently selected configuration from the list.

Restore ← Predefined ← Display Config ← Left
Restores the default display configuration. Existing configurations with the default names are replaced.

Close ← Predefined ← Display Config ← Left
Closes the displays settings dialog box.

Result Summary Setup ← Left

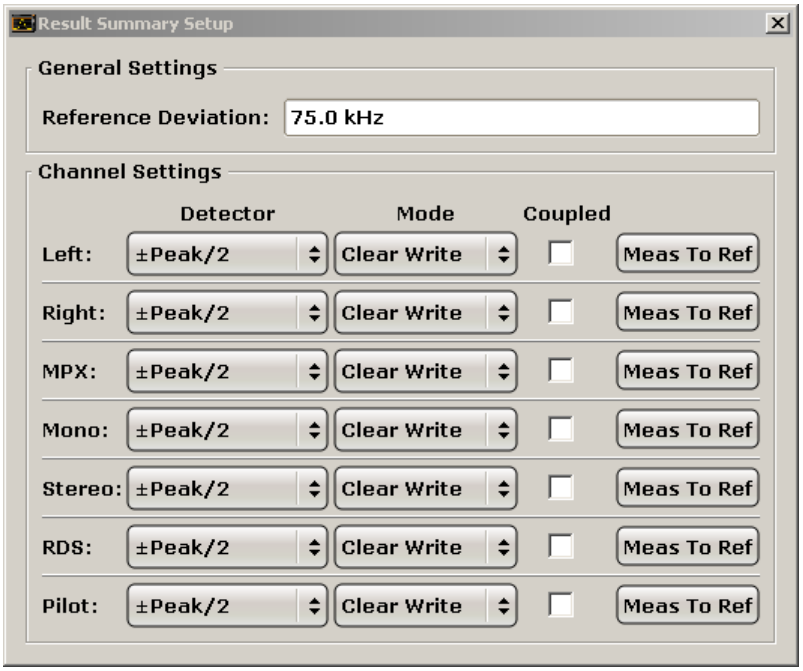
Result Summary Setup
General Settings
Reference Deviation: 75.0 kHz
Channel Settings
Detector
Mode
Coupled
Left: ±Peak/2 Clear Write Meas To Ref
Right: ±Peak/2 Clear Write Meas To Ref
MPX: ±Peak/2 Clear Write Meas To Ref
Mono: ±Peak/2 Clear Write Meas To Ref
Stereo: ±Peak/2 Clear Write Meas To Ref
RDS: ±Peak/2 Clear Write Meas To Ref
Pilot: ±Peak/2 Clear Write Meas To Ref

The result summary table displays the results of all channel mesaurements in a table. It is configured in the "Result Summary Setup" dialog box. This function is only available for screens for which an FM stereo measurement is selected in the "Display Settings" (see "Display Config" on page 185).

B Result Summary

Carrier Power: -200.97 dBm Carrier Freq: 15.0 GHz Mod Depth: 0.0 %

	Detector	Result Mode	Dev.	Rel. to Ref.	Mod. Freq.	SINAD	THD
Left	±Peak/2	Clear Write	0.000 Hz	---	---	---	---
Right	±Peak/2	Clear Write	0.000 Hz	---	---	---	---
MPX	±Peak/2	Clear Write	0.000 Hz	---	---	---	---
Mono	±Peak/2	Clear Write	0.000 Hz	---	---	---	---
Stereo	±Peak/2	Clear Write	0.000 Hz	---	---		
RDS	±Peak/2	Clear Write	0.000 Hz	---			
Pilot	±Peak/2	Clear Write	0.000 Hz	---	---		

Fig. 3-1: Result summary for an FM stereo measurement

In the "General Settings" area you define the "Reference Deviation" for all summaries manually. Alternatively, you can determine the reference deviation from one of the channel measurements by selecting "Meas To Ref" (see "Meas To Ref" on page 190).

For each FM stereo channel you can define individual channel settings:

- "Detector" on page 189
- "Mode" on page 189
- "Coupled" on page 189

- "Meas To Ref" on page 190

Remote command:
[SENSe:]SFM:REFerence on page 228
[SENSe:]SFM:<ChannelType>:RSUMmary:DETector[:FUNCtion] on page 234
[SENSe:]SFM:<ChannelType>:RSUMmary:MODE on page 235
[SENSe:]SFM:<ChannelType>:RSUMmary:COUPling on page 234
[SENSe:]SFM:<ChannelType>:RSUMmary:REFerence[:AUTO] ONCE on page 236

Detector ← Result Summary Setup ← Left
Defines the detector used for the deviation measurement.

- "RMS"
- "RMS*SQRT2"
- "Pos Peak"
- "Neg Peak"
- "±Peak/2"
- "QP CCIR"
- "QP*SQRT2"

Note: To ensure correct measurements with QP detectors, it is recommended that you set the measurement time to its maximum value (see "Meas Time" on page 29 and chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18).

Remote command:
[SENSe:]SFM:<ChannelType>:RSUMmary:DETector[:FUNCtion] on page 234

Mode ← Result Summary Setup ← Left
Defines the result summary mode for the absolute deviation and the deviation relative to the reference.

"Clear Write" Overwrite mode: the summary is overwritten by each sweep. This is the default setting.

"Peak Hold" The peak values are determined over several sweeps and displayed.

"Average" The average is formed over several sweeps.

Remote command:
[SENSe:]SFM:<ChannelType>:RSUMmary:MODE on page 235

Coupled ← Result Summary Setup ← Left
All channels for which this option is enabled are configured identically, i.e. the channel settings are coupled. If you change the settings for one coupled channel, the settings are changed for all other coupled channels, as well. The settings are taken from the first channel for which coupling is enabled.

Remote command:
[SENSe:]SFM:<ChannelType>:RSUMmary:COUPling on page 234

Meas To Ref ← Result Summary Setup ← Left
Determines the "Reference Deviation" from the current channel measurement.

Remote command:
`[SENSe:]SFM:<ChannelType>:RSUMmary:REFerence[:AUTO] ONCE`
on page 236

Meas Time ← Left
Opens an editor for entering the measurement time of the analog demodulation. For details on the measurement time values refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Note: For FM Stereo measurements (option K7S), the minimum measurement time is 2 ms.

Remote command:
`[SENSe:]ADEMod:MTIMe` on page 129

AF Filter ← Left
Opens a dialog to select the appropriate filters.

The bandwidth of the demodulated signal can be reduced by high pass or low pass filters and also a weighting or de-emphasis can be switched on. You can define different filter settings for each channel.

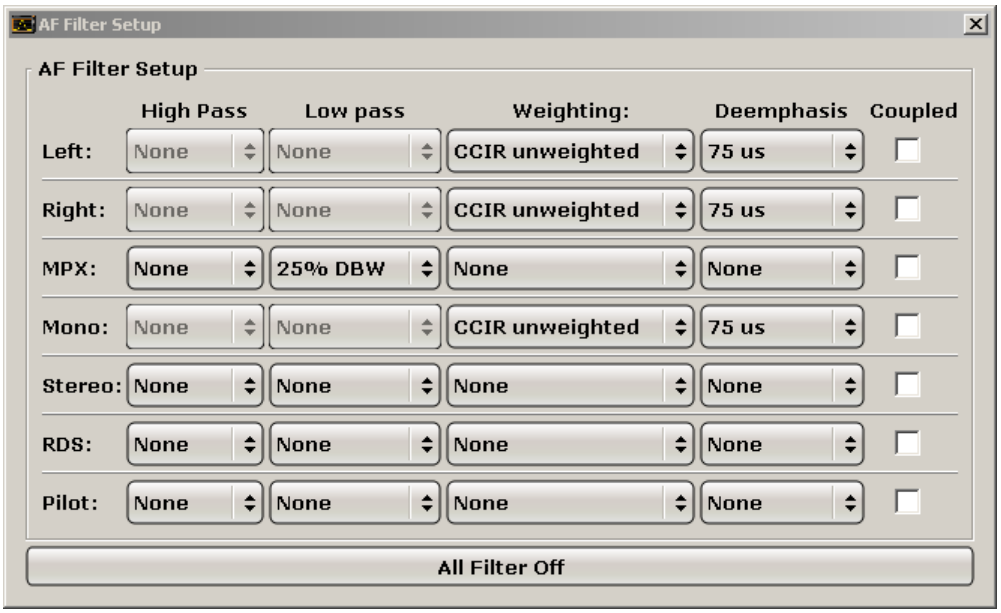

High Pass ← AF Filter ← Left
Opens the "High Pass" selection list to switch on a high pass filter with the given limit to separate the DC component. The filters are indicated by the 3 dB cutoff frequency. The 50 Hz and 300 Hz filters are designed as 2nd-order Butterworth filter (12 dB/octave). The 20 Hz filter is designed as 3rd-order Butterworth filter (18 dB/octave).

"None" deactivates the AF high pass filter. Default is "None".

The high pass filters are active in the following demodulation bandwidth range:

20 Hz	100 Hz ≤ demodulation bandwidth ≤ 1.6 MHz
50 Hz:	200 Hz ≤ demodulation bandwidth ≤ 3 MHz
300 Hz:	800 Hz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

Remote command:
`[SENSe:]FILTer<n>:HPASs[:STATe]` on page 146
`[SENSe:]FILTer<n>:HPASs:FREQuency` on page 147

Low Pass ← AF Filter ← Left
Opens the "Low Pass" selection list to select the filter type. Relative and absolute low pass filter are available.

- Absolute low pass filters:
  The 3 kHz, 15 kHz; 23 kHz and 150 kHz softkeys switch on a absolute low pass filter. The filters are indicated by the 3 dB cutoff frequency. The 3 kHz, 15 kHz and 23 kHz filters are designed as 5th-order Butterworth filters (30 dB/octave). The 150 kHz filter is designed as 8th-order Butterworth filter (48 dB/octave).
  The absolute low pass filters are active in the following demodulation bandwidth range:

3 kHz:	6.4 kHz ≤ demodulation bandwidth ≤ 3 MHz
15 kHz:	50 kHz ≤ demodulation bandwidth ≤ 8 MHz
23 kHz	50 kHz ≤ demodulation bandwidth ≤ 18 MHz
150 kHz:	400 kHz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

- Relative low pass filters:
  The filters (3 dB) can be selected in % of the demodulation bandwidth. The filters are designed as 5th-order Butterworth filter (30 dB/octave) and active for all demodulation bandwidths.
- "None" deactivates the AF low pass filter. Default is "None".

Remote command:
`[SENSe:]FILTer<n>:LPASs[:STATe]` on page 147
`[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute]` on page 147
`[SENSe:]FILTer<n>:LPASs:FREQuency:RELative` on page 148
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:LPASs:STATe` on page 232
`[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency` on page 233

Weighting ← AF Filter ← Left
Opens the "Weighting" selection list to select the weighting AF filter.

None ← Weighting ← AF Filter ← Left
Deactivates the weighting filter. This is the default setting.

Remote command:
[SENSe:]FILTer<n>:HPASs[:STATe] on page 146

CCITT ← Weighting ← AF Filter ← Left
Switches on a CCITT P.53 weighting filter. The weighting filter is active in the following demodulation bandwidth range:

20 kHz ≤ demodulation bandwidth ≤ 3 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
[SENSe:]FILTer<n>:CCIT on page 145
SFM:
[SENSe:]SFM:<ChannelType>:FILTer:CCITt:STATe on page 230

CCIR Unweighted ← Weighting ← AF Filter ← Left
Switches on the CCIR unweighted filter, which is the combination of the 20 Hz highpass and 23 kHz low pass filter. The weighting filter is active in the following demodulation bandwidth range:

50 kHz ≤ demodulation bandwidth ≤ 1.6 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe] on page 145
SFM:
[SENSe:]SFM:<ChannelType>:FILTer:CCIR[:UNWeighted][:STATe]
on page 230

CCIR Weighted ← Weighting ← AF Filter ← Left
Switches on the CCIR weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 3.0 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATe] on page 145
SFM:
[SENSe:]SFM:<ChannelType>:FILTer:CCIR:WEIGhted[:STATe] on page 230

A Weighted ← Weighting ← AF Filter ← Left
Switches on the A weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 800 kHz

Remote command:
[SENSe:]FILTer<n>:AWEighted[:STATe] on page 144
SFM:
[SENSe:]SFM:<ChannelType>:FILTer:AWEighted[:STATe] on page 229

Deemphasis ← AF Filter ← Left
Opens the "Deemphasis" selection list to switch on a deemphasis with the given time constant.

The deemphasis is active in the following demodulation bandwidth range:

Note: For FM stereo measurements (K7S), the demodulation bandwidth is always 400 kHz, thus the deemphasis is always active.

25 µs:	25 kHz ≤ demodulation bandwidth ≤ 40 MHz
50 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
75 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
750 µs:	800 Hz ≤ demodulation bandwidth ≤ 3 MHz

The following table shows the required demodulation bandwidth for an error less than 0.5 dB up to a maximum AF frequency.

deemphasis	25 µs	50 µs	75 µs	750 µs
max. AF frequency	25 kHz	12 kHz	8 kHz	800 Hz
required demodulation bandwidth	≥ 200 kHz	≥ 100 kHz	≥ 50 kHz	≥ 6.4 kHz

For higher AF frequencies the demodulation bandwidth must be increased.

Remote command:
[SENSe:]FILTer<n>:DEMPhasis[:STATe] on page 146
[SENSe:]FILTer<n>:DEMPhasis:TCONstant on page 146
SFM:
[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:STATe on page 231
[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:TCONstant on page 231

Coupled ← AF Filter ← Left
All channels for which this option is enabled are configured identically, i.e. the channel settings are coupled. If you change the settings for one coupled channel, the settings are changed for all other coupled channels, as well. The settings are taken from the first channel for which coupling is enabled.

Remote command:
[SENSe:]SFM:<ChannelType>:RSUMmary:COUPling on page 234

All AF Filter Off ← AF Filter ← Left
Disables all specified AF Filters.

Remote command:
[SENSe:]FILTer<n>:AOFF on page 144

AF Range ← Left
Opens a submenu to define the diagram scaling for AF displays.

Dev per Division ← AF Range ← Left
Opens an edit dialog box to set the modulation depth or the phase deviation (R&S FSV-K7 only), or frequency deviation per division:

AM display:	0.0001 % to 1000 %
FM display:	1 Hz/div to 100 MHz/div
PM display:	0.0001 rad/div to 1000 rad/div

The softkey is not available if logarithmic display is set ("Deviation Lin/Log" softkey).

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous` on page 110

Reference Position ← AF Range ← Left
Determines the position of the reference line for the modulation depth or the phase deviation (R&S FSV-K7 only) or frequency deviation on the y-axis of the diagram. By default, this line is set to 0.

The position is entered as a percentage of the diagram height with 100 % corresponding to the upper diagram border. The default setting is 50 % (diagram center) for the display of the AM, FM, or PM signal, and 100 % (upper diagram border) for the AF spectrum display of the AM, FM, or PM signal.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition` on page 111

Reference Value ← AF Range ← Left
Determines the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation at the reference line of the y-axis. The reference value is set separately for each display of the AM, FM, and PM signal and the AF spectrum of the AM, FM, and PM signal.

- AM/FM/PM signal display
  The trace display takes individual frequency/phase offsets into account (in contrast, the AF Coupling AC/DC softkey permits automatic correction by the average frequency/phase offset of the signal, and can therefore not be activated simultaneously).
  Possible values: 0 and ± 10000 % (AM), 0 and ± 10 MHz (FM), 0 and ± 10000 rad (PM).
- AF spectrum display of the AM/FM/PM signal
  In the default setting, the reference value defines the modulation depth or the FM/PM deviation at the upper diagram border.
  Possible values: 0 and 10000 % (AM), 0 and 10 MHz (FM), 0 and 10000 rad (PM).

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue` on page 111

AF Coupling AC/DC ← AF Range ← Left
Controls the automatic correction of the frequency offset and phase offset of the input signal:

(**Note:** This function is not available with the AF spectrum display of the FM or PM signal.)

- FM signal display
  If DC is selected, the absolute frequency is displayed, i.e. an input signal with an offset relative to the center frequency is not displayed symmetrically with respect to the zero line.
  If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric with respect to the zero line.
- PM signal display
  If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of ± π.
  If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric with respect to the zero line.

Remote command:
`[SENSe:]ADEMod<n>:AF:COUPling` on page 118

Deviation Lin/Log ← AF Range ← Left
Switches between logarithmic and linear display of the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112

Unit ← AF Range ← Left
Opens a submenu to define the modulation unit.

Phase Unit (Rad/Deg) ← Unit ← AF Range ← Left
Sets the phase unit to rad or deg for displaying PM signals.

Remote command:
`UNIT:THD` on page 163

THD Unit (% / DB) ← Unit ← AF Range ← Left
Sets the unit to percent or DB for THD measurements.

Remote command:
`UNIT:THD` on page 163

Abs. Dev Unit (kHz/dBm) ← Unit ← AF Range ← Left
Sets the unit for absolute deviation to kHz or dBm. This softkey is only available with the FM Stereo option K7S.

Remote command:
`UNIT:ADEV` on page 242

Rel. Dev Unit (dB / %) ← Unit ← AF Range ← Left
Sets the unit for relative deviation to dB or percent. This softkey is only available with the FM Stereo option K7S.

Remote command:
`UNIT:RDEV` on page 243

Time Domain Zoom ← Left
Opens a submenu to activate and configure the zoom function.

State On / Off ← Time Domain Zoom ← Left
Activates or deactivates the time domain zoom according to the defined settings.

"ON" Activates the time domain zoom. The zoom area is defined using the "Start""Start" on page 34 and "Length Manual""Length Manual" on page 34 / "Length Auto""Length Auto" on page 35 softkeys.

"OFF" If more measured values than measurement points are available, several measured values are combined in one measurement point according to the method of the selected trace detector. For details on detectors refer to chapter 2.1.7, "Detector Overview", on page 17.

Remote command:
[SENSe:]ADEMod<n>:ZOOM[:STATe] on page 139

Start ← Time Domain Zoom ← Left
Opens an edit dialog box to define the start time for the zoom area.

Remote command:
[SENSe:]ADEMod<n>:ZOOM:STARt on page 139

Length Manual ← Time Domain Zoom ← Left
Opens an edit dialog box to define the length of the zoom area (as a time value) manually.

Remote command:
[SENSe:]ADEMod<n>:ZOOM:LENGth on page 140

Length Auto ← Time Domain Zoom ← Left
Automatically sets the length of the zoom area to the number of sweep points (see "Sweep Points" on page 55).

Remote command:
[SENSe:]ADEMod<n>:ZOOM:LENGth:MODE on page 140

Time per Division ← Left
This function enables the "Time Domain Zoom" function and defines the zoom area length in one step. The width of the zoom display is divided into 10 divisions; thus, by entering the time that is displayed in each division, you indirectly define the zoom area length ("Time per Division" * 10). The starting point of the zoom area is determined automatically. To specify the starting point manually, use the "Start" function in the "Time Domain Zoom" submenu.

For details see "Time Domain Zoom".

Squelch ← Left
Activates the squelch function, i.e. if the signal falls below a defined threshold, the demodulated data is automatically set to 0. This is useful, for example, to avoid demodulation noise during transmission breaks.

Remote command:
[SENSe:]ADEMod:SQUelch[:STATe] on page 138

Squelch Level ← Left
Defines the level threshold below which the demodulated data is set to 0 if squelching is enabled. The squelch level is an absolute value.

Remote command:
`[SENSe:]ADEMod:SQUelch:LEVel` on page 138

Right
Displays the right signal of the FM stereo input and the "Right" submenu, which is identical to the "Left" submenu, see "Left" on page 185.

Remote command:
`CALCulate<n>:FEED` on page 89

MPX
Displays the MPX signal of the FM stereo input and the "MPX" submenu, which is identical to the "Left" submenu, see "Left" on page 185.

Remote command:
`CALCulate<n>:FEED` on page 89

Mono
Displays the mono signal of the FM stereo input (= Left channel **+** Right channel) and the "Mono" submenu, which is identical to the "Left" submenu, see "Left" on page 185.

Remote command:
`CALCulate<n>:FEED` on page 89

Stereo
Displays the stereo signal of the FM stereo input (= Left channel **-** Right channel) and the "Stereo" submenu, which is identical to the "Left" submenu, see "Left" on page 185.

Remote command:
`CALCulate<n>:FEED` on page 89

RDS
Displays the RDS signal of the FM stereo input and the "RDS" submenu, which is identical to the "Left" submenu, see "Left" on page 185.

Remote command:
`CALCulate<n>:FEED` on page 89

Pilot
Displays the pilot signal of the FM stereo input and the "Pilot" submenu, which is identical to the "Left" submenu, see "Left" on page 185.

Remote command:
`CALCulate<n>:FEED` on page 89

RF Power
Selects RF power as the modulation type, changes the signal display, and opens a submenu to set the measurement configuration. For details see the Analog Demodulation option K7 ("RF Power" on page 37).

Remote command:
`CALCulate<n>:FEED` on page 89

Display Config
See "Display Config" on page 185

3.1.3 Softkeys of the Amplitude Menu – AMPT Key (R&S FSV–K7S)

The following table shows all softkeys available in the "Amplitude" menu in "FM stereo" mode (AMPT key).

Ref Level....198
AF Range....199
- Dev per Division....199
- Reference Position....199
- Reference Value....199
- AF Coupling AC/DC....199
- Deviation Lin/Log....200
- Unit....200
  - Phase Unit (Rad/Deg)....200
  - THD Unit (% / DB)....200
  - Abs. Dev Unit (kHz/dBm)....200
  - Rel. Dev Unit (dB / %)....200

Unit....201
- Phase Unit (Rad/Deg)....201
- THD Unit (% / DB)....201
- Abs. Dev Unit (kHz/dBm)....201
- Rel. Dev Unit (dB / %)....201

Preamp On/Off....201
RF Atten Manual/Mech Att Manual....201
RF Atten Auto/Mech Att Auto....202
EI Atten On/Off....202
EI Atten Mode (Auto/Man)....202
Ref Level Offset....203
Input (AC/DC)....203
Input 50 Ω/75 Ω....203

Ref Level
Opens an edit dialog box to enter the reference level in the current unit (dBm, dBµV, etc).

The reference level is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 110

AF Range
Opens a submenu to define the diagram scaling for AF displays.

Dev per Division ← AF Range
Opens an edit dialog box to set the modulation depth or the phase deviation (R&S FSV-K7 only), or frequency deviation per division:

AM display:	0.0001 % to 1000 %
FM display:	1 Hz/div to 100 MHz/div
PM display:	0.0001 rad/div to 1000 rad/div

The softkey is not available if logarithmic display is set ("Deviation Lin/Log" softkey).

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous` on page 110

Reference Position ← AF Range
Determines the position of the reference line for the modulation depth or the phase deviation (R&S FSV-K7 only) or frequency deviation on the y-axis of the diagram. By default, this line is set to 0.

The position is entered as a percentage of the diagram height with 100 % corresponding to the upper diagram border. The default setting is 50 % (diagram center) for the display of the AM, FM, or PM signal, and 100 % (upper diagram border) for the AF spectrum display of the AM, FM, or PM signal.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition` on page 111

Reference Value ← AF Range
Determines the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation at the reference line of the y-axis. The reference value is set separately for each display of the AM, FM, and PM signal and the AF spectrum of the AM, FM, and PM signal.

- AM/FM/PM signal display
  The trace display takes individual frequency/phase offsets into account (in contrast, the AF Coupling AC/DC softkey permits automatic correction by the average frequency/phase offset of the signal, and can therefore not be activated simultaneously).
  Possible values: 0 and ± 10000 % (AM), 0 and ± 10 MHz (FM), 0 and ± 10000 rad (PM).
- AF spectrum display of the AM/FM/PM signal
  In the default setting, the reference value defines the modulation depth or the FM/PM deviation at the upper diagram border.
  Possible values: 0 and 10000 % (AM), 0 and 10 MHz (FM), 0 and 10000 rad (PM).

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue` on page 111

AF Coupling AC/DC ← AF Range
Controls the automatic correction of the frequency offset and phase offset of the input signal:

(**Note:** This function is not available with the AF spectrum display of the FM or PM signal.)

- FM signal display
  If DC is selected, the absolute frequency is displayed, i.e. an input signal with an offset relative to the center frequency is not displayed symmetrically with respect to the zero line.
  If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric with respect to the zero line.
- PM signal display
  If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of ± π.
  If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric with respect to the zero line.

Remote command:
`[SENSe:]ADEMod<n>:AF:COUPling` on page 118

Deviation Lin/Log ← AF Range
Switches between logarithmic and linear display of the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 112

Unit ← AF Range
Opens a submenu to define the modulation unit.

Phase Unit (Rad/Deg) ← Unit ← AF Range
Sets the phase unit to rad or deg for displaying PM signals.

Remote command:
`UNIT:THD` on page 163

THD Unit (% / DB) ← Unit ← AF Range
Sets the unit to percent or DB for THD measurements.

Remote command:
`UNIT:THD` on page 163

Abs. Dev Unit (kHz/dBm) ← Unit ← AF Range
Sets the unit for absolute deviation to kHz or dBm. This softkey is only available with the FM Stereo option K7S.

Remote command:
`UNIT:ADEV` on page 242

Rel. Dev Unit (dB / %) ← Unit ← AF Range
Sets the unit for relative deviation to dB or percent. This softkey is only available with the FM Stereo option K7S.

Remote command:
`UNIT:RDEV` on page 243

Unit
Opens a submenu to define the modulation unit.

Phase Unit (Rad/Deg) ← Unit
Sets the phase unit to rad or deg for displaying PM signals.

Remote command:
`UNIT:THD` on page 163

THD Unit (% / DB) ← Unit
Sets the unit to percent or DB for THD measurements.

Remote command:
`UNIT:THD` on page 163

Abs. Dev Unit (kHz/dBm) ← Unit
Sets the unit for absolute deviation to kHz or dBm. This softkey is only available with the FM Stereo option K7S.

Remote command:
`UNIT:ADEV` on page 242

Rel. Dev Unit (dB / %) ← Unit
Sets the unit for relative deviation to dB or percent. This softkey is only available with the FM Stereo option K7S.

Remote command:
`UNIT:RDEV` on page 243

Preamp On/Off
Switches the preamplifier on and off.

If option R&S FSV-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSV-B24 is installed, the preamplifier is active for all frequencies.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:
`INPut:GAIN:STATe` on page 174

RF Atten Manual/Mech Att Manual
Opens an edit dialog box to enter the attenuation, irrespective of the reference level. If electronic attenuation is activated (option R&S FSV-B25 only; "El Atten Mode Auto" softkey), this setting defines the mechanical attenuation.

The mechanical attenuation can be set in 10 dB steps.

The RF attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps). The range is specified in the data sheet. If the current reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

The RF attenuation defines the level at the input mixer according to the formula:

$level_{mixer} = level_{input}$ – RF attenuation

Note: As of firmware version 1.61, the maximum mixer level allowed is **0 dBm**. Mixer levels above this value may lead to incorrect measurement results, which are indicated by the "OVLD" status display. The increased mixer level allows for an improved signal, but also increases the risk of overloading the instrument!

Remote command:
`INPut:ATTenuation` on page 170

RF Atten Auto/Mech Att Auto
Sets the RF attenuation automatically as a function of the selected reference level. This ensures that the optimum RF attenuation is always used. It is the default setting.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:
`INPut:ATTenuation:AUTO` on page 170

EI Atten On/Off
This softkey switches the electronic attenuator on or off. This softkey is only available with option R&S FSV-B25.

When the electronic attenuator is activated, the mechanical and electronic attenuation can be defined separately. Note however, that both parts must be defined in the same mode, i.e. either both manually, or both automatically.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

- To define the mechanical attenuation, use the RF Atten Manual/Mech Att Manual or RF Atten Auto/Mech Att Auto softkeys.
- To define the electronic attenuation, use the EI Atten Mode (Auto/Man) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, this function is available again.
When the electronic attenuator is switched off, the corresponding RF attenuation mode (auto/manual) is automatically activated.

Remote command:
`INPut:EATT:AUTO` on page 174

EI Atten Mode (Auto/Man)
This softkey defines whether the electronic attenuator value is to be set automatically or manually. If manual mode is selected, an edit dialog box is opened to enter the value. This softkey is only available with option R&S FSV-B25, and only if the electronic attenuator has been activated via the EI Atten On/Off softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, electronic attenuation is available again. If the electronic attenuation was defined manually, it must be re-defined.

The attenuation can be varied in 1 dB steps from 0 to 30 dB. Other entries are rounded to the next lower integer value.

To re-open the edit dialog box for manual value definition, select the "Man" mode again.

If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

Remote command:
`INPut:EATT:AUTO` on page 174
`INPut:EATT` on page 173

Ref Level Offset
Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ±200 dB in 0.1 dB steps.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet` on page 111

Input (AC/DC)
Toggles the RF input of the R&S FSV between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:
`INPut:COUPling` on page 171

Input 50 Ω/75 Ω
Uses 50 Ω or 75 Ω as reference impedance for the measured levels. Default setting is 50 Ω.

The setting 75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω/50 Ω).

All levels specified in this Operating Manual refer to the default setting of the instrument (50 Ω).

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

Remote command:
`INPut:IMPedance` on page 174

3.1.4 Softkeys of the Bandwidth Menu – BW Key (R&S FSV–K7S)

The following table shows all softkeys available in the "Bandwidth" menu in FM Stereo mode (BW key).

Res BW (span > 0)....204
Meas Time....204
AF Filter....204
└ High Pass....204
└ Low Pass....205

└ Weighting....205
└ None....206
└ CCITT....206
└ CCIR Unweighted....206
└ CCIR Weighted....206
└ A Weighted....206
└ Deemphasis....207
└ All AF Filter Off....207

Res BW (span > 0)
Opens an edit dialog box to enter a value for the resolution bandwidth. The range is specified in the data sheet.

This softkey is only available for spectrum measurements (see chapter 2.1.9, "Measurement Result Display", on page 20).

Remote command:
`[SENSe:]ADEMod:SPECtrum:BANDwidth|BWIDth[:RESolution]` on page 135

Meas Time
Opens an editor for entering the measurement time of the analog demodulation. For details on the measurement time values refer to chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18.

Note: For FM Stereo measurements (option K7S), the minimum measurement time is 2 ms.

Remote command:
`[SENSe:]ADEMod:MTIMe` on page 129

AF Filter
The bandwidth of the demodulated signal can be reduced by high pass or low pass filters and also a de-emphasis can be switched on. The selected filters are used for AM, FM and PM demodulation in common. Individual settings are not possible.

High Pass ← AF Filter
Opens the "High Pass" selection list to switch on a high pass filter with the given limit to separate the DC component. The filters are indicated by the 3 dB cutoff frequency. The 50 Hz and 300 Hz filters are designed as 2nd-order Butterworth filter (12 dB/octave). The 20 Hz filter is designed as 3rd-order Butterworth filter (18 dB/octave).

"None" deactivates the AF high pass filter. Default is "None".

The high pass filters are active in the following demodulation bandwidth range:

20 Hz	100 Hz ≤ demodulation bandwidth ≤ 1.6 MHz
50 Hz:	200 Hz ≤ demodulation bandwidth ≤ 3 MHz
300 Hz:	800 Hz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

Remote command:
`[SENSe:]FILTer<n>:HPASs[:STATe]` on page 146
`[SENSe:]FILTer<n>:HPASs:FREQuency` on page 147

Low Pass ← AF Filter
Opens the "Low Pass" selection list to select the filter type. Relative and absolute low pass filter are available.

- Absolute low pass filters:
  The 3 kHz, 15 kHz; 23 kHz and 150 kHz softkeys switch on a absolute low pass filter. The filters are indicated by the 3 dB cutoff frequency. The 3 kHz, 15 kHz and 23 kHz filters are designed as 5th-order Butterworth filters (30 dB/octave). The 150 kHz filter is designed as 8th-order Butterworth filter (48 dB/octave).
  The absolute low pass filters are active in the following demodulation bandwidth range:

3 kHz:	6.4 kHz ≤ demodulation bandwidth ≤ 3 MHz
15 kHz:	50 kHz ≤ demodulation bandwidth ≤ 8 MHz
23 kHz	50 kHz ≤ demodulation bandwidth ≤ 18 MHz
150 kHz:	400 kHz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

- Relative low pass filters:
  The filters (3 dB) can be selected in % of the demodulation bandwidth. The filters are designed as 5th-order Butterworth filter (30 dB/octave) and active for all demodulation bandwidths.
- "None" deactivates the AF low pass filter. Default is "None".

Remote command:
`[SENSe:]FILTer<n>:LPASs[:STATe]` on page 147
`[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute]` on page 147
`[SENSe:]FILTer<n>:LPASs:FREQuency:RELative` on page 148
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:LPASs:STATe` on page 232
`[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency` on page 233

Weighting ← AF Filter
Opens the "Weighting" selection list to select the weighting AF filter.

None ← Weighting ← AF Filter
Deactivates the weighting filter. This is the default setting.

Remote command:
`[SENSe:]FILTer<n>:HPASs[:STATe]` on page 146

CCITT ← Weighting ← AF Filter
Switches on a CCITT P.53 weighting filter. The weighting filter is active in the following demodulation bandwidth range:

20 kHz ≤ demodulation bandwidth ≤ 3 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
`[SENSe:]FILTer<n>:CCIT` on page 145
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:CCITt:STATe` on page 230

CCIR Unweighted ← Weighting ← AF Filter
Switches on the CCIR unweighted filter, which is the combination of the 20 Hz highpass and 23 kHz low pass filter. The weighting filter is active in the following demodulation bandwidth range:

50 kHz ≤ demodulation bandwidth ≤ 1.6 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
`[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe]` on page 145
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:CCIR[:UNWeighted][:STATe]` on page 230

CCIR Weighted ← Weighting ← AF Filter
Switches on the CCIR weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 3.0 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

Remote command:
`[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATe]` on page 145
SFM:
`[SENSe:]SFM:<ChannelType>:FILTer:CCIR:WEIGhted[:STATe]` on page 230

A Weighted ← Weighting ← AF Filter
Switches on the A weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 800 kHz

Remote command:
[SENSe:]FILTer<n>:AWEighted[:STATe] on page 144
SFM:
[SENSe:]SFM:<ChannelType>:FILTer:AWEighted[:STATe] on page 229

Deemphasis ← AF Filter
Opens the "Deemphasis" selection list to switch on a deemphasis with the given time constant.

The deemphasis is active in the following demodulation bandwidth range:

Note: For FM stereo measurements (K7S), the demodulation bandwidth is always 400 kHz, thus the deemphasis is always active.

25 µs:	25 kHz ≤ demodulation bandwidth ≤ 40 MHz
50 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
75 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
750 µs:	800 Hz ≤ demodulation bandwidth ≤ 3 MHz

The following table shows the required demodulation bandwidth for an error less than 0.5 dB up to a maximum AF frequency.

deemphasis	25 µs	50 µs	75 µs	750 µs
max. AF frequency	25 kHz	12 kHz	8 kHz	800 Hz
required demodulation bandwidth	≥ 200 kHz	≥ 100 kHz	≥ 50 kHz	≥ 6.4 kHz

For higher AF frequencies the demodulation bandwidth must be increased.

Remote command:
[SENSe:]FILTer<n>:DEMPhasis[:STATe] on page 146
[SENSe:]FILTer<n>:DEMPhasis:TCONstant on page 146
SFM:
[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:STATe on page 231
[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:TCONstant on page 231

All AF Filter Off ← AF Filter
Disables all specified AF Filters.

Remote command:
[SENSe:]FILTer<n>:AOFF on page 144

3.1.5 Softkeys of the Trigger Menu – TRIG Key (R&S FSV–K7S)

The following table shows all softkeys available in the "Trigger" menu in "FM Stereo" mode (TRIG key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Trigger Source....208
└ Free Run....208
└ External....208
└ RF Power....208
└ IF Power....209
└ Left....209
└ Right....210
└ MPX....210
└ Mono....210
└ Stereo....210
└ RDS....210
└ Pilot....210
└ RF....210
└ Time....210
Trigger Level....210
Trigger Polarity....211
Trigger Offset....211
Repetition Interval....212
Trigger Hysteresis....212
Trigger Holdoff....212

Trigger Source
Opens the "Trg Source" submenu to select the trigger source.

In "FM Stereo" mode, the next measurement is triggered if the selected input signal exceeds the threshold specified using the "Trigger Level" on page 64 softkey. A periodic signal modulated onto the carrier frequency can be displayed in this way. It is recommended that the measurement time covers at least five periods of the audio signal.

For triggering to be successful, the measurement time must cover at least 5 periods of the audio signal.

Remote command:
`TRIGger<n>[:SEQuence]:SOURce` on page 161

Free Run ← Trigger Source
The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

Remote command:
`TRIG:SOUR IMM`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161

External ← Trigger Source
Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

Remote command:
`TRIG:SOUR EXT`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161

RF Power ← Trigger Source
Defines triggering of the measurement via signals which are outside the measurement channel.

This trigger mode is available with detector board 1307.9554.02 Rev 05.00 or higher. It is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17). If RF Power trigger mode is selected and digital baseband input is activated, the trigger mode is automatically switched to "Free Run".

In RF Power trigger mode the instrument uses a level detector at the first intermediate frequency. The detector threshold can be selected in a range between - 50 dBm and -10 dBm at the input mixer. The resulting trigger level at the RF input lies within the following range:

(-24dBm + RF Att) ≤ Triggerlevel ≤ (+5dBm + RF Att), max. 30 dBm, for Preamp = OFF

(-40dBm + RF Att) ≤ Triggerlevel ≤ (-11dBm + RF Att), max. 30 dBm, for Preamp = ON

with

500 MHz ≤ InputSignal ≤ 7 GHz

Note: If input values outside of this range occur (e.g. for fullspan measurements), the sweep may be aborted and a message indicating the allowed input values is displayed in the status bar.

Remote command:
`TRIG:SOUR RFP`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161
`SWE:EGAT:SOUR RFP` for gated triggering, see `[SENSe:]SWEep:EGATe:SOURce` on page 151

IF Power ← Trigger Source
Defines triggering of the measurement via signals which are outside the measurement channel.

For this purpose, the R&S FSV uses a level detector at the second intermediate frequency.

The available trigger levels depend on the RF attenuation and preamplification. A reference level offset, if defined, is also considered.

For details on available trigger levels and trigger bandwidths see the data sheet.

The bandwidth at the intermediate frequency is 20 MHz. The R&S FSV is triggered as soon as the trigger level is exceeded within a 10 MHz range around the selected frequency (= start frequency in the frequency sweep).

Thus, the measurement of spurious emissions, e.g. for pulsed carriers, is possible even if the carrier lies outside the selected frequency span.

Remote command:
`TRIG:SOUR IFP`, see `TRIGger<n>[:SEQuence]:SOURce` on page 161
`SWE:EGAT:SOUR IFP` for gated triggering, see `[SENSe:]SWEep:EGATe:SOURce` on page 151

Left ← Trigger Source
Triggers on the specified frequency level of the left FM signal.

Remote command:
`TRIGger<n>[:SEQuence]:LEVel:SFM:LEFT` on page 237

Right ← Trigger Source
Triggers on the specified frequency level of the right FM signal.

Remote command:
TRIGger<n>[:SEQuence]:LEVel:SFM:RIGHt on page 238

MPX ← Trigger Source
Triggers on the specified frequency level of the MPX FM signal.

Remote command:
TRIGger<n>[:SEQuence]:LEVel:SFM:MPX on page 238

Mono ← Trigger Source
Triggers on the specified frequency level of the mono FM signal.

Remote command:
TRIGger<n>[:SEQuence]:LEVel:SFM:MONO on page 238

Stereo ← Trigger Source
Triggers on the specified frequency level of the stereo FM signal.

Remote command:
TRIGger<n>[:SEQuence]:LEVel:SFM:STEReo on page 239

RDS ← Trigger Source
Triggers on the specified frequency level of the RDS FM signal.

Remote command:
TRIGger<n>[:SEQuence]:LEVel:SFM:RDS on page 239

Pilot ← Trigger Source
Triggers on the specified frequency level of the pilot FM signal.

Remote command:
TRIGger<n>[:SEQuence]:LEVel:SFM:PILot on page 239

RF ← Trigger Source
Triggers on the specified level of the RF signal.

Note: The RF **offline** trigger is based on the I/Q data of the demodulated signal, in a very limited bandwidth. For a wider trigger bandwidth and triggering based on the currently measured RF input signal, use the more powerful RF Power trigger.

Remote command:
TRIGger<n>[:SEQuence]:LEVel:AM[:ABSolute] on page 158

Time ← Trigger Source
Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms.

Remote command:
TRIG:SOUR TIMETRIGger<n>[:SEQuence]:SOURce on page 161

Trigger Level
Defines the trigger level as a numeric value.

In the trigger mode "Time", this softkey is not available.

Remote command:
TRIGger<n>[:SEQuence]:LEVel:IFPower on page 159
For digital input via the R&S Digital I/Q Interface, R&S FSV-B17:
TRIGger<n>[:SEQuence]:LEVel:BBPower on page 158

Trigger Polarity
Sets the polarity of the trigger source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all modes with the exception of the "Free Run" and "Time" mode.

"Pos" Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed.

"Neg" Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed.

Remote command:
TRIGger<n>[:SEQuence]:SLOPe on page 161
[SENSe:]SWEep:EGATe:POLarity on page 150

Trigger Offset
Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep.

offset > 0:	Start of the sweep is delayed
offset < 0:	Sweep starts earlier (pre-trigger) Only possible for span = 0 (e.g. I/Q Analyzer mode) and gated trigger switched off Maximum allowed range limited by the sweep time: $pretrigger_{max}$ = sweep time When using the R&S Digital I/Q Interface (R&S FSV-B17) with I/Q Analyzer mode, the maximum range is limited by the number of pretrigger samples. See the R&S Digital I/Q Interface(R&S FSV-B17) description in the base unit.

In the "External" or "IF Power" trigger mode, a common input signal is used for both trigger and gate. Therefore, changes to the gate delay will affect the trigger delay (trigger offset) as well.

In the "Time" trigger mode, this softkey is not available.

Remote command:
TRIGger<n>[:SEQuence]:HOLDoff[:TIME] on page 157

Repetition Interval
Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms. This softkey is only available if the trigger source "Time" is selected (see "Time" on page 64).

Remote command:
`TRIGger<n>[:SEQuence]:TIME:RINTerval` on page 160

Trigger Hysteresis
Defines the value for the trigger hysteresis for "IF power" or "RF Power" trigger sources. The hysteresis in dB is the value the input signal must stay below the power trigger level in order to allow a trigger to start the measurement. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

Remote command:
`TRIGger<n>[:SEQuence]:IFPower:HYSTeresis` on page 157

Trigger Holdoff
Defines the value for the trigger holdoff. The holdoff value in s is the time which must pass before triggering, in case another trigger event happens.

This softkey is only available if "IFPower", "RF Power" or "BBPower" is the selected trigger source.

Remote command:
`TRIGger<n>[:SEQuence]:IFPower:HOLDoff` on page 157
For digital input via the R&S Digital I/Q Interface, R&S FSV-B17:
`TRIGger<n>[:SEQuence]:BBPower:HOLDoff` on page 156

3.1.6 Softkeys of the Marker Function Menu – MKR FUNC Key (R&S FSV–K7S)

The MKR FUNC menu provides the following functions.

Select Marker (No)....213
Ref Fixed....213
└ Ref. Fixed On/Off....213
└ Ref Point Level....213
└ Ref Point Frequency (span > 0)/Ref Point Time (zero span)....213
└ Peak Search....214
Diff.Freq.Distortion....214
└ Diff.Freq.Distortion (On/Off)....215
└ Unit (% / DB)....215
└ Search Signals....215
Intermod. Distortion....215
└ Intermod.Distortion (On/Off)....216
└ Unit (% / DB)....216
└ Search Signals....216
n dB down....216
Marker Peak List....217
└ Peak List On/Off....217
└ Sort Mode Freq/Lvl....217

└ Max Peak Count....218
└ Peak Excursion....218
└ Left Limit....218
└ Right Limit....218
└ Threshold....218
└ ASCII File Export....218
└ Decim Sep....219
└ Marker Number....219

Select Marker (No)
Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see "Marker 1 / Marker 2 / Marker 3 / … Marker 16,/ Marker Norm/ Delta" on page 66). "(No)" indicates the number of the currently active marker.

See "Marker 1 / Marker 2 / Marker 3 / … Marker 16,/ Marker Norm/Delta" on page 66.

Ref Fixed
Opens a submenu to set all values of a reference point. Instead of using the current values of the reference marker (marker 1) as reference point for the delta markers, level and frequency or time are set to fixed values and used as reference point.

Ref. Fixed On/Off ← Ref Fixed
Switches the relative measurement to a fixed reference value on or off. The level and frequency or time values of marker 1 immediately become the reference point, but can be altered using the corresponding softkeys ("Ref Point Level" on page 71, "Ref Point Frequency (span > 0)/Ref Point Time (zero span)" on page 71 and "Peak Search" on page 71).

When set to ON, all delta markers which previously referenced marker 1 are automatically set to reference the fixed marker.

The reference marker assignment can be changed using the "Marker Wizard" (see "Marker Wizard" on page 66).

Remote command:
`CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed[:STATe]` on page 165

Ref Point Level ← Ref Fixed
Opens an edit dialog box to enter a reference level value. All relative level values of the delta markers refer to this reference level.

Remote command:
`CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y` on page 165

Ref Point Frequency (span > 0)/Ref Point Time (zero span) ← Ref Fixed
Opens an edit dialog box to enter a frequency reference or time value. All relative frequency or time values of the delta markers refer to this frequency reference. For phase noise measurement, input of reference time is not possible.

Remote command:
`CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X` on page 164

Peak Search ← Ref Fixed
Sets the maximum value of the selected trace as the reference point.

Remote command:
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:MAXimum[:PEAK]
on page 164

Diff.Freq.Distortion
Opens a submenu to enable and configure difference frequency distortion measurement. This function is only available for AF spectrum measurements.

Definition of the difference frequency distortion:

f1 and f2 represent the frequencies of two sine-wave signals with the same level. Their frequencies should preferably differ by 80 Hz. The difference frequency distortion factors of 2nd and 3rd order (dd2, dd3) are defined as follows:

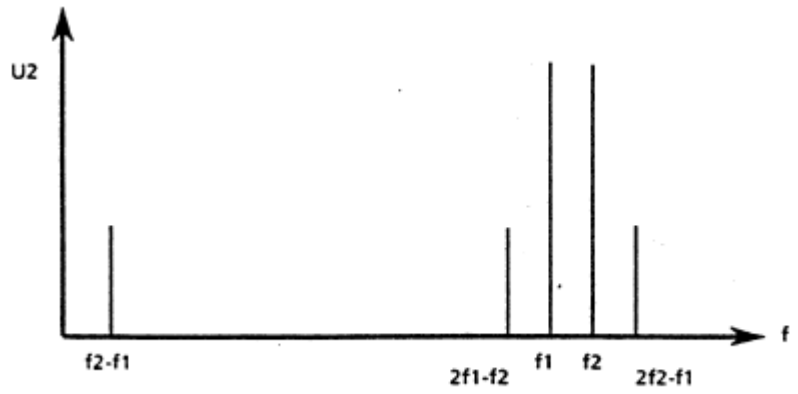

$$d_{d2} = \frac{U_2(f_2 - f_1)}{2 * U_{2(}f_2)} * 100\%$$

for percentage indication or

$$d_{d2} = 20 * \lg\left(\frac{U_2(f_2 - f_1)}{2 * U_{2(}f_2)}\right)$$

for indication in dB

$$d_{d3} = \frac{U_2(2 * f_2 - f1) + U_2(2 * f_1 - f_2)}{2 * U_2(f_2)}$$

for percentage indication or

$$d_{d3} = 20 * \lg\left(\frac{U_2(2 * f_2 - f1) + U_2(2 * f_1 - f_2)}{2 * U_2(f_2)}\right)$$

for indication in dB

Diff.Freq.Distortion (On/Off) ← Diff.Freq.Distortion
Enables difference frequency distortion. The results are displayed in the summary table with the function "DiffDist 2/3". The markers are indicated as "DFD2, DFD3".

Remote command:
`CALCulate<n>:MARKer:FUNCtion:DFD[:STATe]` on page 223

Unit (% / DB) ← Diff.Freq.Distortion
Sets the unit to percent or DB for differential frequency distortion.

Remote command:
`CALCulate<n>:MARKer:FUNCtion:DFD:UNIT` on page 223

Search Signals ← Diff.Freq.Distortion
Starts the search of the signals required for the difference frequency distortion measurement.

Remote command:
`CALCulate<n>:MARKer:FUNCtion:DFD:SEARchsignal ONCE` on page 224

Intermod. Distortion
Opens a submenu to enable and configure intermodulation distortion measurement. This function is only available for AF spectrum measurements.

Definition of the intermodulation distortion:

f1 and f2 represent the frequencies of two sine-wave signals. f2 should be at least 8*f1. The level of f2 should be 1/4th of the level of f1. The modulation factors of 2nd and 3rd order (dm2, dm3) are defined as follows:

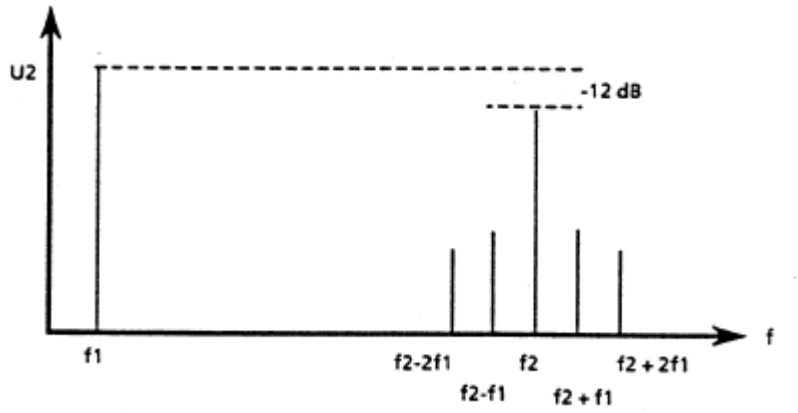

$$d_{m2} = \frac{U_2(f_2 + f_1) + U_2(f_2 - f_1)}{U_2(f_2)} * 100\%$$

for percentage indication or

$$d_{m2} = 20 * \lg\left(\frac{U_2(f_2 + f_1) + U_2(f_2 - f_1)}{U_2(f_2)} \right)$$

for indication in dB

$$dm3 = \frac{U_2(f_2 + 2f_1) + U_2(f_2 - 2f_1)}{U_2(f_2)} * 100\%$$

for percentage indication

$$dm3 = 20 * \lg\left(\frac{U_2(f_2 + 2f_1) + U_2(f_2 - 2f_1)}{U_2(f_2)} \right)$$

for indication in dB

Intermod.Distortion (On/Off) ← Intermod. Distortion
Enables intermodulation distortion. The results are displayed in the summary table with the function "IModDist 2/3". The markers are indicated as "IMD2, IMD3".

Remote command:
`CALCulate<n>:MARKer:FUNCtion:IMD[:STATe]` on page 224

Unit (% / DB) ← Intermod. Distortion
Sets the unit to percent or DB for intermodulation distortion.

Remote command:
`CALCulate<n>:MARKer:FUNCtion:IMD:UNIT` on page 224

Search Signals ← Intermod. Distortion
Starts the search of the signals required for the intermodulation distortion measurement.

Remote command:
`CALCulate<n>:MARKer:FUNCtion:IMD:SEARchsignal ONCE` on page 225

n dB down
Opens an edit dialog box to enter a value to define the level spacing of the two temporary markers to the right and left of marker 1 (default setting: 3 dB). Activates the temporary markers T1 and T2. The values of the temporary markers (T1, T2) and the entered value (ndB) are displayed in the marker field.

If a positive value is entered, the markers T1 and T2 are placed below the active reference marker. If a negative value (e.g. for notch filter measurements) is entered, the markers T1 and T2 are placed above the active reference marker. Marker T1 is placed to the left and marker T2 to the right of the reference marker.

In the marker table, the following results are displayed:

Span setting	Parameter name	Description
span > 0	Bw	frequency spacing of the two temporary markers
	Q factor	quality of the displayed bandwidth value (Bw)
span = 0	PWid	pulse width between the two temporary markers

If it is not possible to form the frequency spacing for the n dB value (e.g. because of noise display), dashes instead of a measured value are displayed.

Remote command:
`CALC:MARK1:FUNC:NDBD:STAT ON`, see `CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:STATe` on page 100
`CALC:MARK1:FUNC:NDBD 3dB`, see `CALCulate<n>:MARKer<m>:FUNCtion:NDBDown` on page 98
`CALC:MARK1:FUNC:NDBD:RES?` , see `CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:RESult?` on page 100
`CALC:MARK:FUNC:NDBD:QFAC?`, see `CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:QFACtor` on page 100
`CALC:MARK1:FUNC:NDBD:FREQ?` (span > 0), see `CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:FREQuency?` on page 99
`CALC:MARK1:FUNC:NDBD:TIME?` (span = 0), see `CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:TIME?` on page 101

Marker Peak List
Opens the "Peak List" submenu to define criteria for the sort order and the contents of the peak list. For each listed peak the frequency ("Stimulus") and level ("Response") values are given. In addition, the peaks are indicated in the trace display. A maximum of 50 entries are listed.

Remote command:
`CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:COUNt?` on page 97
`CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:X` on page 97
`CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:Y?` on page 98

Peak List On/Off ← Marker Peak List
Activates/deactivates the marker peak list. If activated, the peak list is displayed and the peaks are indicated in the trace display.

Remote command:
`CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STAT` on page 93

Sort Mode Freq/Lvl ← Marker Peak List
Defines the criteria for sorting:

"Freq" sorting in ascending order of frequency values (span > 0) or time values (span = 0)

"Lvl" sorting in ascending order of the level

Remote command:
`CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT` on page 97

Max Peak Count ← Marker Peak List
Defines the maximum number of peaks to be determined and displayed.

Remote command:
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE on page 93

Peak Excursion ← Marker Peak List
Opens an edit dialog box for level measurements to enter the minimum level value by which a signal must rise or fall so that it will be identified as a maximum or a minimum by the search functions. Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

For more information see "Specifying the suitable peak excursion" and "Effect of different peak excursion settings".

Remote command:
CALCulate<n>:MARKer<m>:PEXCursion on page 101

Left Limit ← Marker Peak List
Opens an edit dialog box to enter a value for the lower limit (left vertical line: S1 for span > 0; T1 for zero span). The search is performed between the lines of the left and right limit (see also Right Limit softkey).

Remote command:
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT on page 103

Right Limit ← Marker Peak List
Opens an edit dialog box to enter a value for the upper limit (left vertical line: S2 for span > 0; T2 for zero span). The search is performed between the lines of the left and right limit (see also Left Limit softkey). If no value is set, the upper limit corresponds to the stop frequency.

Remote command:
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT on page 104

Threshold ← Marker Peak List
Opens an edit dialog box to define the threshold line. The threshold line represents the lower level limit for a "Peak" search and the upper level limit for a "Min" search.

Remote command:
CALCulate<n>:THReshold:STATe on page 95
CALCulate<n>:THReshold on page 95

ASCII File Export ← Marker Peak List
Opens the "ASCII File Export Name" dialog box and saves the active peak list in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the marker data. For details on an ASCII file see chapter 2.1.10, "ASCII File Export Format", on page 23.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see "Decim Sep" on page 61).

Remote command:
`FORMat:DEXPort:DSEParator` on page 177
`MMEMory:STORe<n>:LIST` on page 175

Decim Sep ← Marker Peak List
Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:
`FORMat:DEXPort:DSEParator` on page 177

Marker Number ← Marker Peak List
If enabled, the determined peaks are indicated by their corresponding marker number in the trace display.

Remote command:
`CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:ANN:LAB:STAT` on page 92

3.2 Remote Commands of the FM Stereo Option (R&S FSV–K7S)

In this section, all remote control commands specific to the FM Stereo option are described in detail.

In addition to these, all remote control commands described for the analog Demodulation option (K7) are available, as well (see chapter 2.3, "Remote Commands of the Analog Demodulation (R&S FSV–K7)", on page 79).

For details on conventions used in this chapter refer to chapter 2.3.1, "Notation", on page 81.

For further information on analyzer or basic settings commands, refer to the corresponding subsystem in the base unit description.

Subsystems for FM Stereo (R&S FSV–K7S)

3.2.1 Notation....220
3.2.2 CALCulate:MARKer:FUNCtion Subsystem (FM Stereo Option, R&S FSV–K7S)....222
3.2.3 SENSe Subsystem....227

3.2.4 [SENSe:]SFM:<ChannelType> Subsystem....228
3.2.5 TRIGger Subsystem (FM Stereo, R&S FSV–K7S)....237
3.2.6 UNIT Subsystem (FM Stereo, R&S FSV–K7S)....242

3.2.1 Notation

In the following sections, all commands implemented in the instrument are first listed and then described in detail, arranged according to the command subsystems. The notation is adapted to the SCPI standard. The SCPI conformity information is included in the individual description of the commands.

Individual Description

The individual description contains the complete notation of the command. An example for each command, the *RST value and the SCPI information are included as well.

The options and operating modes for which a command can be used are indicated by the following abbreviations:

Abbreviation	Description
A	spectrum analysis
A-F	spectrum analysis – span > 0 only (frequency mode)
A-T	spectrum analysis – zero span only (time mode)
ADEMOD	analog demodulation (option R&S FSV-K7)
BT	Bluetooth (option R&S FSV-K8)
CDMA	CDMA 2000 base station measurements (option R&S FSV-K82)
EVDO	1xEV-DO base station analysis (option R&S FSV-K84)
GSM	GSM/Edge measurements (option R&S FSV-K10)
IQ	IQ Analyzer mode
OFDM	WiMAX IEEE 802.16 OFDM measurements (option R&S FSV-K93)
OFDMA/WiBro	WiMAX IEEE 802.16e OFDMA/WiBro measurements (option R&S FSV-K93)
NF	Noise Figure measurements (R&S FSV-K30)
PHN	Phase Noise measurements (R&S FSV-K40)
PSM	Power Sensor measurements (option R&S FSV-K9)
SFM	Stereo FM measurements (optionR&S FSV-K7S)
SPECM	Spectogram mode (option R&S FSV-K14)
TDS	TD-SCDMA base station / UE measurements (option R&S FSV-K76/K77)
VSA	Vector Signal Analysis (option R&S FSV-K70)

WCDMA	3GPP Base Station measurements (option R&S FSV-K72), 3GPP UE measurements (option R&S FSV-K73)
WLAN	WLAN TX measurements (option R&S FSV-K91)

The spectrum analysis mode is implemented in the basic unit. For the other modes, the corresponding options are required.

Upper/Lower Case Notation

Upper/lower case letters are used to mark the long or short form of the key words of a command in the description. The instrument itself does not distinguish between upper and lower case letters.

Special Characters

|	A selection of key words with an identical effect exists for several commands. These keywords are indicated in the same line; they are separated by a vertical stroke. Only one of these keywords needs to be included in the header of the command. The effect of the command is independent of which of the keywords is used.

Example:

```
SENSe:FREQuency:CW|:FIXed
```

The two following commands with identical meaning can be created. They set the frequency of the fixed frequency signal to 1 kHz:

```
SENSe:FREQuency:CW 1E3
```

```
SENSe:FREQuency:FIXed 1E3
```

A vertical stroke in parameter indications marks alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.

Example: Selection of the parameters for the command

```
[SENSe<1…4>:]AVERage<1…4>:TYPE VIDeo | LINear
```

[]	Key words in square brackets can be omitted when composing the header. The full command length must be accepted by the instrument for reasons of compatibility with the SCPI standards. Parameters in square brackets can be incorporated optionally in the command or omitted as well.

{}	Parameters in braces can be incorporated optionally in the command, either not at all, once or several times.

Description of Parameters

Due to the standardization, the parameter section of SCPI commands consists always of the same syntactical elements. SCPI has therefore specified a series of definitions, which are used in the tables of commands. In the tables, these established definitions are indicated in angled brackets (<…>) and is briefly explained in the following.

For details see the chapter "SCPI Command Structure" in the base unit description.

<Boolean>

This keyword refers to parameters which can adopt two states, "on" and "off". The "off" state may either be indicated by the keyword OFF or by the numeric value 0, the "on" state is indicated by ON or any numeric value other than zero. Parameter queries are always returned the numeric value 0 or 1.

<numeric_value> <num>

These keywords mark parameters which may be entered as numeric values or be set using specific keywords (character data). The following keywords given below are permitted:

- `MAXimum`: This keyword sets the parameter to the largest possible value.
- `MINimum`: This keyword sets the parameter to the smallest possible value.
- `DEFault`: This keyword is used to reset the parameter to its default value.
- `UP`: This keyword increments the parameter value.
- `DOWN`: This keyword decrements the parameter value.

The numeric values associated to MAXimum/MINimum/DEFault can be queried by adding the corresponding keywords to the command. They must be entered following the quotation mark.

Example:

```
SENSe:FREQuency:CENTer? MAXimum
```

Returns the maximum possible numeric value of the center frequency as result.

<arbitrary block program data>

This keyword is provided for commands the parameters of which consist of a binary data block.

3.2.2 CALCulate:MARKer:FUNCtion Subsystem (FM Stereo Option, R&S FSV–K7S)

The CALCulate:MARKer:FUNCtion subsystem contains the marker functions for the option FM Stereo,R&S FSV–K7S.

CALCulate<n>:MARKer:FUNCtion:DFD[:STATe] 223
CALCulate<n>:MARKer:FUNCtion:DFD:UNIT 223
CALCulate<n>:MARKer:FUNCtion:DFD[:RESult<m>]? 223
CALCulate<n>:MARKer:FUNCtion:DFD:SEARchsignal ONCE 224
CALCulate<n>:MARKer:FUNCtion:IMD[:STATe] 224
CALCulate<n>:MARKer:FUNCtion:IMD:UNIT 224
CALCulate<n>:MARKer:FUNCtion:IMD[:RESult<m>]? 225
CALCulate<n>:MARKer:FUNCtion:IMD:SEARchsignal ONCE 225
CALCulate<n>:MARKer:FUNCtion:SFM[:RESult<m>]? 225
CALCulate<n>:MARKer:FUNCtion:SFM:<ChannelType>[:RESult<m>]? 226

CALCulate<n>:MARKer:FUNCtion:DFD[:STATe] <State>

This command activates difference frequency distortion measurement in the specified window.

Suffix:
<n> 1...4
window

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `CALC:MARK:FUNC:DFD:ON`

Mode: SFM

CALCulate<n>:MARKer:FUNCtion:DFD:UNIT <ResultUnit>

This command defines the unit for the difference frequency distortion measurement results.

Suffix:
<n> 1...4
irrelevant

Parameters:
<ResultUnit> **PCT | DB**
*RST: PCT

Example: `CALC:MARK:FUNC:DFD:UNIT DB`

Mode: SFM

CALCulate<n>:MARKer:FUNCtion:DFD[:RESult<m>]?

This command queries the result of the difference frequency distortion measurement in the specified window.

Suffix:
<n> 1...4
window

<m> 1...6
irrelevant

Return values:
<Result> <dd2>,<dd3>
The difference frequency distortion factors of 2nd and 3rd order (see "Diff.Freq.Distortion" on page 214)

Example: `CALC:MARK:FUNC:DFD:RES?`

Usage: Query only

Mode: SFM

CALCulate<n>:MARKer:FUNCtion:DFD:SEARchsignal ONCE

This command starts the search of the signals required for the difference frequency distortion measurement in the specified window.

Suffix:
<n> 1...4
window

Example: `CALC:MARK:FUNC:DFD:SEAR ONCE`

Usage: Event

Mode: SFM

CALCulate<n>:MARKer:FUNCtion:IMD[:STATe] <State>

This command activates intermodulation distortion measurement in the specified window.

Suffix:
<n> 1...4
window

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `CALC:MARK:FUNC:IMD:ON`

Mode: SFM

CALCulate<n>:MARKer:FUNCtion:IMD:UNIT <ResultUnit>

This command defines the unit for the intermodulation distortion measurement results.

Suffix:
<n> 1...4
irrelevant

Parameters:
<ResultUnit> **PCT | DB**
*RST: PCT

Example: `CALC:MARK:FUNC:IMD:UNIT DB`

Mode: SFM

CALCulate<n>:MARKer:FUNCtion:IMD[:RESult<m>]?

This command queries the result of the intermodulation distortion measurement in the specified window.

Suffix:

<n> 1...4
window

<m> 1...6
irrelevant

Return values:

<Result> <dm2>,<dm3>
The modulation factors of 2nd and 3rd order

Example: `CALC:MARK:FUNC:IMD:RES?`

Usage: Query only

Mode: SFM

CALCulate<n>:MARKer:FUNCtion:IMD:SEARchsignal ONCE

This command starts the search of the signals required for the intermodulation distortion measurement in the specified window.

Suffix:

<n> 1...4
window

Example: `CALC:MARK:FUNC:IMD:SEAR ONCE`

Usage: Event

Mode: SFM

CALCulate<n>:MARKer:FUNCtion:SFM[:RESult<m>]? <ResultType>

This command queries the results of the stereo measurement.

Suffix:

<n> 1...4
window

Query parameters:

<ResultType> SUMMary | FCARrier | XTALk

SUMMary
Returns all results of the measurement.

FCARrier
Returns only the carrier frequency.

XTALk
Returns crosstalk between left and right channels in dB:
-20|log(Left [kHz] / Right[kHz])| dB

Return values:

<SUMMary> <Absolute deviation>, <Relative deviation>, <SINAD>, <THD>, <Modulation frequency>

The results consist of the described 5 values for each channel, separated by commas.
Note: if one of the result values is not available, *9.91E+37* is inserted for the missing value.
To obtain the results for an individual channel, or only individual results, use the specific commands:
`CALCulate<n>:MARKer:FUNCtion:SFM:<ChannelType>[:RESult<m>]?` on page 226

<FCARrier> The carrier frequency is returned.

Example: `CALC1:MARK:FUNC:SFM:RES?`

Usage: Query only

Mode: SFM

CALCulate<n>:MARKer:FUNCtion:SFM:<ChannelType>[:RESult<m>]?
<MeasType>

This command queries the results of the measurement type for the selected channel in the specified window.

Suffix:

<n> 1...4
window

<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Query parameters:

<MeasType> ALL | ADEV | RDEV | SINad | THD | AFRequency

ALL
All available measurement values

ADEV
The absolute deviation

RDEV
The relative deviation

SINad
The signal-to-noise-and-distortion value

THD
Total harmonic distortion

AFRequency
Audio frequency

*RST: ALL

Return values:

<Result> Measurement value according to the specified measurement type. **Note:** if the specified result value is not available, a "Query Error" is returned. If all result values are queried (query parameter "ALL"), and one of them is not available, *9.91E+37* is inserted for the missing value.

Example: `CALC1:MARK:FUNC:SFM:LEFT? THD`
Queries the total harmonic distortion for the left stereo channel.

Usage: Query only

Mode: SFM

3.2.3 SENSe Subsystem

The `SENSe` subsystem controls the essential parameters of the stereo FM demodulator. In accordance with the SCPI standard, the keyword `SENSe` is optional for this reason, which means that it is not necessary to include the `SENSe` node in command sequences.

[SENSe:]SFM:FILTer<n>:AOFF....227
[SENSe:]SFM:STATe....227
[SENSe:]SFM:REFerence....228

[SENSe:]SFM:FILTer<n>:AOFF

This command switches all AF filters off.

Suffix:

<n> 1...4
window

Example: `SENS:SFM:FILT:AOFF`

Usage: Event

Mode: SFM

[SENSe:]SFM:STATe <State>

This command switches between Stereo FM and Spectrum mode.

Parameters:

<State> **ON | OFF**
*RST: OFF

Example: `SFM:STAT ON`

Mode: SFM

[SENSe:]SFM:REFerence <Level>

This command defines the reference deviation required for relative deviation measurements. Alternatively, it can be defined automatically, see e.g. `[SENSe:]SFM:<ChannelType>:RSUMmary:REFerence[:AUTO] ONCE` on page 236

Parameters:

<Level> **<numeric value> in Hz or dBm**

*RST: -10.0 dBm

Example: `SFM:REF 2Hz`

Mode: SFM

3.2.4 [SENSe:]SFM:<ChannelType> Subsystem

The `[SENSe:]SFM:<ChannelType>` subsystem contains commands for the definition of frequency and level settings when measuring the specific channels of FM stereo signals.

[SENSe:]SFM:<ChannelType>:AFSPectrum:TYPE....228
[SENSe:]SFM:<ChannelType>:AFSPectrum:RESult?....229
[SENSe:]SFM:<ChannelType>:FILTer:AWEighted[:STATe]....229
[SENSe:]SFM:<ChannelType>:FILTer:CCITt:STATe....230
[SENSe:]SFM:<ChannelType>:FILTer:CCIR[:UNWeighted][:STATe]....230
[SENSe:]SFM:<ChannelType>:FILTer:CCIR:WEIGhted[:STATe]....230
[SENSe:]SFM:<ChannelType>:FILTer:COUPling....231
[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:STATe....231
[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:TCONstant....231
[SENSe:]SFM:<ChannelType>:FILTer:HPASs:STATe....232
[SENSe:]SFM:<ChannelType>:FILTer:HPASs:FREQuency....232
[SENSe:]SFM:<ChannelType>:FILTer:LPASs:STATe....232
[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency....233
[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency[:ABSolute]....233
[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency:RELative....234
[SENSe:]SFM:<ChannelType>:RSUMmary:COUPling....234
[SENSe:]SFM:<ChannelType>:RSUMmary:DETector[:FUNCtion]....234
[SENSe:]SFM:<ChannelType>:RSUMmary:MODE....235
[SENSe:]SFM:<ChannelType>:RSUMmary:REFerence[:AUTO] ONCE....236
[SENSe:]SFM:<ChannelType>:TDOmain:RESult?....236
[SENSe:]SFM:<ChannelType>:TDOmain:TYPE....237

[SENSe:]SFM:<ChannelType>:AFSPectrum:TYPE <TraceMode>

This command selects the trace modes of the FM stereo AF spectrum to be measured simultaneously. For each trace a mode can be defined, however only if the specified channel is currently displayed in one of the four screens. If a trace mode is set for a channel that is not displayed, a query error is generated.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<TraceMode> <TraceMode1>, <TraceMode2>, <TraceMode3>, <TraceMode4>, <TraceMode5>, <TraceMode6>

WRITe | AVERage | MAXHold | MINHold | VIEW | OFF
For details on trace modes see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.

*RST: OFF,OFF,OFF,OFF,OFF,OFF

Example: `SFM:LEFT:AFSP:TYPE WRIT,OFF,AVER`

Mode: SFM

[SENSe:]SFM:<ChannelType>:AFSPectrum:RESult? <TraceMode>

This command reads the AF spectrum result data of the FM stereo signal in the specified trace mode. The data format of the output data block is defined by the FORMat command (see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 115).

The output units are described in `CALCulate<n>:MARKer<m>:PEXCursion` on page 101.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Query parameters:
<TraceMode> WRITe

At least one screen must display a channel with the specified channel type that has the trace mode "Write" specified using `[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE]` on page 121. Otherwise a query error is generated.

Example: `SFM:LEFT:AFSP:RES MINH`
Returns the minimum value in the left channel after a series of measurements.

Usage: Query only

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:AWEighted[:STATe] <State>

This command activates/deactivates the weighted CCIR filter for the specified channel type.

For details on the weighted "A" filter see "A Weighted" on page 31.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `SFM:LEFT:FILT:AWEI ON`

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:CCITt:STATe <State>

This command activates/deactivates the CCIT (CCIT P.53) weighting filter for the specified channel type.

For details on the CCIT filter see "CCITT" on page 30.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `SFM:LEFT:FILT:CCIT:STAT ON`

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:CCIR[:UNWeighted][:STATe] <State>

This command activates/deactivates the unweighted CCIR filter for the specified channel type.

For details on the unweighted CCIR filter see "CCIR Unweighted" on page 31.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `SFM:LEFT:FILT:CCIR ON`

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:CCIR:WEIGhted[:STATe] <State>

This command activates/deactivates the weighted CCIR filter for the specified channel type.

For details on the weighted CCIR filter see "CCIR Weighted" on page 31.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `SFM:LEFT:FILT:CCIR:WEIG ON`

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:COUPling <State>

This command couples the filter settings for the specified channel type to other channels. The filter settings for all channels for which this setting is set to "ON" are defined identically.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `SFM:LEFT:FILT:COUP ON`

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:STATe <State>

This command activates/deactivates the selected deemphasis for the specified channel type.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `SFM:LEFT:FILT:DEMP:STAT ON`

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:TCONstant <Value>

This command selects the deemphasis for the specified channel type. For details on deemphasis refer to "Deemphasis" on page 31.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<Value> 25 us | 50 us | 75 us | 750 us
*RST: 50 us

Example: `SFM:LEFT:FILT:DEMP:TCON 75us`

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:HPASs:STATe <State>

This command activates/deactivates the selected high pass filter for the specified channel type.

For details on the high pass filter refer to "High Pass" on page 29.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `SFM:LEFT:FILT:HPAS:STAT ON`

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:HPASs:FREQuency <FilterType>

This command selects the high pass filter type for the specified channel type. For details on filters refer to "Deemphasis" on page 31.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<FilterType> Range: 50 to 300
*RST: 300Hz
Default unit: Hz

Example: `SFM:LEFT:FILT:HPAS:FREQ 300Hz`

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:LPASs:STATe <State>

This command activates the low pass filter for the specified channel type.

For details on the low pass filter refer to "Low Pass" on page 29.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `SFM:LEFT:FILT:LPAS:STAT ON`

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency <Level>

This command activates/deactivates the selected low pass filter for the specified channel type.

For details on the low pass filter refer to "Low Pass" on page 29.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<Level> <numeric value>
*RST: RST value

Example: `SFM:LEFT:FILT:LPAS:FREQ 10`

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency[:ABSolute] <FilterType>

This command selects the absolute low pass filter type in the specified window. For details on filters refer to "Low Pass" on page 29.

For details about the demodulation bandwidth range refer to "Demod BW" on page 29.

Suffix:
<n> 1...4
window

Parameters:
<FilterType> 3kHz | 15kHz | 150kHz
*RST: 15kHz

Example: `SFM:LEFT:FILT:LPAS:FREQ 150kHz`
Selects the low pass filter for the demodulation bandwidth range from 400 kHz to 16 MHz.

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency:RELative <FilterType>

This command selects the relative low pass filter type in the specified window. For details on filters refer to Low Pass softkey.

For details about the demodulation bandwidth range refer to "Demod BW" on page 29.

Suffix:
<n> 1...4
window

Parameters:
<FilterType> 5PCT | 10PCT | 25PCT
*RST: 25PCT

Example: `SFM:LEFT:FILT:LPAS:FREQ 25PCT`
Selects the low pass filter as 25 % of the demodulation bandwidth.

Mode: SFM

[SENSe:]SFM:<ChannelType>:RSUMmary:COUPling <State>

This command couples the channel settings to other channels, i.e. channels for which this command is set to "ON" are configured identically.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `SFM:LEFT:RSUM:COUP ON`

Mode: SFM

[SENSe:]SFM:<ChannelType>:RSUMmary:DETector[:FUNCtion] <Detector>

This command defines the detector used to determine the deviation value of the left channel of the FM stereo signal in the result summary.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:

<Detector> RMS | SRMS | PPEak | NPEak | PAVerage | QPEak | SQPeak

RMS
RMS

SRMS
RMS*SQRT2

PPEak
Positive peak

NPEak
Negative peak

PAVerage
±Peak/2

QPEak
Quasipeak CCIR

SQPeak
Quasipeak*SQRT2

*RST: PAVerage

Example: `SFM:LEFT:RSUM:DET PPE`
Sets the detector for the left channel to positive peak.

Mode: SFM

[SENSe:]SFM:<ChannelType>:RSUMmary:MODE <Mode>

This command defines the result summary mode for the absolute and relative deviation. It does not affect the trace mode.

Suffix:

<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:

<Mode> WRITe | AVERage | PHOLd

WRITe
Clear Write: Overwrite mode; the summary is overwritten by each sweep.

AVERage
The average is formed over several sweeps. The number of sweeps is defined by the sweep count (see `[SENSe:]SWEep:COUNt` on page 150 or `[SENSe:]AVERage<n>:COUNt` on page 152).

PHOLd
Peak hold: The maximum values are determined over several sweeps and displayed. The number of sweeps is defined by the sweep count (see `[SENSe:]SWEep:COUNt` on page 150 or `[SENSe:]AVERage<n>:COUNt` on page 152).

*RST: WRITe

Example: AVER:COUN 16
Sets the number of measurements to 16.
SFM:LEFT:RSUM:MODE PHOL
Sets the result summary mode for the left channel to peak hold. The maximum value during 16 measurements is displayed in the result summary.

Mode: SFM

[SENSe:]SFM:<ChannelType>:RSUMmary:REFerence[:AUTO] ONCE

This command determines the reference deviation from the current channel measurement.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Example: SFM:LEFT:RSUM:REF ONCE

Mode: SFM

[SENSe:]SFM:<ChannelType>:TDOmain:RESult? <TraceMode>

This command reads the result data of the FM stereo signal in zero span in the specified trace mode. The data format of the output data block is defined by the FORMat command (see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 115).

The output units are described in CALCulate<n>:MARKer<m>:PEXCursion on page 101.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Query parameters:
<TraceMode> WRITe
At least one screen must display a left channel that has the trace mode "Write" specified using [SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE] on page 121. Otherwise a query error is generated.

Example: SFM:LEFT:TDOM:RES WRIT
Returns the current trace results in the left channel.

Usage: Query only

Mode: SFM

[SENSe:]SFM:<ChannelType>:TDOmain:TYPE <TraceMode>

This command selects the trace modes of the FM stereo signal to be measured simultaneously in zero span. For each trace a mode can be defined, however only if the specified channel is currently displayed in one of the four screens. If a trace mode is set for a channel that is not displayed, a query error is generated.

Suffix:
<ChannelType> LEFT | RIGHt | MPX | MONO | STEReo | RDS | PILot
Channel type for which the command is performed.

Parameters:
<TraceMode> <TraceMode1>, <TraceMode2>, <TraceMode3>, <TraceMode4>, <TraceMode5>, <TraceMode6>
WRITe | AVERage | MAXHold | MINHold | VIEW | OFF
For details on trace modes see chapter 2.3.6.1, "Trace Mode Result Types", on page 115.
*RST: OFF,OFF,OFF,OFF,OFF,OFF

Example: `SFM:LEFT:TDOM:TYPE WRIT,OFF,AVER`

Mode: SFM

3.2.5 TRIGger Subsystem (FM Stereo, R&S FSV–K7S)

The TRIGger subsystem is used to synchronize instrument actions with events. It is thus possible to control and synchronize the start of a sweep.

Commands of the TRIGger Subsystem

TRIGger<n>[:SEQuence]:LEVel:SFM:LEFT....237
TRIGger<n>[:SEQuence]:LEVel:SFM:RIGHt....238
TRIGger<n>[:SEQuence]:LEVel:SFM:MPX....238
TRIGger<n>[:SEQuence]:LEVel:SFM:MONO....238
TRIGger<n>[:SEQuence]:LEVel:SFM:STEReo....239
TRIGger<n>[:SEQuence]:LEVel:SFM:RDS....239
TRIGger<n>[:SEQuence]:LEVel:SFM:PILot....239
TRIGger<n>[:SEQuence]:SOURce....240

TRIGger<n>[:SEQuence]:LEVel:SFM:LEFT <Level>

The command sets the level when the left stereo channel is used as trigger source.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: `TRIG:LEV:SFM:LEFT 2Hz`
Sets the left stereo signal trigger threshold to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQuence]:LEVel:SFM:RIGHt <Level>

The command sets the level when the right stereo channel is used as trigger source.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: `TRIG:LEV:SFM:RIGH 2Hz`
Sets the trigger threshold of the right stereo signal to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQuence]:LEVel:SFM:MPX <Level>

The command sets the level when the MPX stereo channel is used as trigger source.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: `TRIG:LEV:SFM:MPX 2Hz`
Sets the trigger threshold of the MPX stereo signal to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQuence]:LEVel:SFM:MONO <Level>

The command sets the level when the mono channel of a FM stereo signal is used as trigger source.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: `TRIG:LEV:SFM:MONO 2Hz`
Sets the trigger threshold of the mono stereo signal to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQuence]:LEVel:SFM:STEReo <Level>

The command sets the level when the stereo channel is used as trigger source.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: `TRIG:LEV:SFM:STER 2Hz`
Sets the trigger threshold of the stereo signal to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQuence]:LEVel:SFM:RDS <Level>

The command sets the level when the RDS stereo channel is used as trigger source.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: `TRIG:LEV:SFM:RDS 2Hz`
Sets the trigger threshold of the RDS stereo signal to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQuence]:LEVel:SFM:PILot <Level>

The command sets the level when the pilot stereo channel is used as trigger source.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: `TRIG:LEV:SFM:PIL 2Hz`
Sets the trigger threshold of the pilot stereo signal to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQuence]:SOURce <Source>

This command selects the trigger source for the start of a sweep.

Suffix:
<n> 1...4
irrelevant

Parameters:

<Source> IMMediate | EXTern | IFPower | AF | FM | AM | AMRelative | PM | TIME | SLEFt | SRIGht | SMPX | SMONo | SSTereo | SRDS | SPILot

For details on trigger sources refer to the "Trigger Source" on page 208 softkey.
For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

IMMediate
Free Run (no trigger)

EXTern
External trigger

IFPower
Triggering via signals which are outside the measurement channel

AF
Audio frequency trigger

FM
Triggering via FM frequency level

AM
Triggering via RF power signal

AMRelative
Triggering via AM signal

PM
Triggering via PM frequency level

TIME
Triggering according to repetition interval

SLEFt
Triggering via left stereo signal

SRIGht
Triggering via right stereo signal

SMPX
Triggering via MPX stereo signal

SMONo
Triggering via mono stereo signal

SSTereo
Triggering via stereo FM signal

SRDS
Triggering via RDS stereo signal

SPILot
Triggering via pilot stereo signal

*RST: IMM

Example:

```
TRIG:SEQ:SOUR:SRDS
```

Defines triggering on the RDS stereo signal.

Mode: SFM

3.2.6 UNIT Subsystem (FM Stereo, R&S FSV–K7S)

UNIT:ADEV <Unit>

Selects the unit for absolute deviation measurements.

Parameters:
<Unit> HZ | DBM
*RST: HZ

Example: `UNIT:ADEV DBM`

Mode: SFM

UNIT:ANGLe <Unit>

This command selects the unit for angles (e.g. for PM display).

The unit is defined globally for all windows.

Suffix:
<n> irrelevant

Parameters:
<Unit> DEG | RAD
*RST: RAD

Example: `UNIT:ANGL DEG`

Mode: ADEMOD, SFM

UNIT:POWer <Unit>

This command selects the unit for power.

The unit is defined globally for all windows.

Suffix:
<n> irrelevant

Parameters:
<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT | DBUA | AMPere
*RST: dBm

Example: `UNIT:POW DBM`
Sets the power unit to dBm.

Mode: A, ADEMOD, SFM, SPECM

UNIT:RDEV <Unit>

Selects the unit for relative deviation measurements.

Parameters:

<Unit> DB | PCT

*RST: HZ

Example: `UNIT:RDEV PCT`

Mode: SFM

UNIT:THD <Mode>

Selects the unit for THD measurements.

Parameters:

<Mode> DB | PCT

*RST: DB

Example: `UNIT:THD PCT`

Mode: ADEMOD, SFM

List of Commands

CALC:UNIT:THD....96
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:MAXimum[:PEAK]....164
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X....164
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y....165
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed[:STATe]....165
CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise:AUTO....166
CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise[:STATe]....166
CALCulate<n>:DELTamarker<m>:LINK....167
CALCulate<n>:DELTamarker<m>:MREF....167
CALCulate<n>:DELTamarker<m>:TRACe....168
CALCulate<n>:DELTamarker<m>:X....168
CALCulate<n>:DELTamarker<m>:X:RELative....168
CALCulate<n>:DELTamarker<m>:Y?....169
CALCulate<n>:DELTamarker<m>[:STATe]....167
CALCulate<n>:FEED....89
CALCulate<n>:FORMat....91
CALCulate<n>:MARKer:FUNCtion:ADEMod:AFRequency[:RESult<t>]?....84
CALCulate<n>:MARKer:FUNCtion:ADEMod:AM[:RESult<t>]?....84
CALCulate<n>:MARKer:FUNCtion:ADEMod:CARRier[:RESult<t>]?....85
CALCulate<n>:MARKer:FUNCtion:ADEMod:FERRor[:RESult<t>]?....86
CALCulate<n>:MARKer:FUNCtion:ADEMod:FM[:RESult<t>]?....86
CALCulate<n>:MARKer:FUNCtion:ADEMod:PM[:RESult<t>]?....87
CALCulate<n>:MARKer:FUNCtion:ADEMod:SINad:RESult<t>?....88
CALCulate<n>:MARKer:FUNCtion:ADEMod:THD:RESult<t>?....88
CALCulate<n>:MARKer:FUNCtion:DFD:SEARchsignal ONCE....224
CALCulate<n>:MARKer:FUNCtion:DFD:UNIT....223
CALCulate<n>:MARKer:FUNCtion:DFD[:RESult<m>]?....223
CALCulate<n>:MARKer:FUNCtion:DFD[:STATe]....223
CALCulate<n>:MARKer:FUNCtion:IMD:SEARchsignal ONCE....225
CALCulate<n>:MARKer:FUNCtion:IMD:UNIT....224
CALCulate<n>:MARKer:FUNCtion:IMD[:RESult<m>]?....225
CALCulate<n>:MARKer:FUNCtion:IMD[:STATe]....224
CALCulate<n>:MARKer:FUNCtion:SFM:<ChannelType>[:RESult<m>]?....226
CALCulate<n>:MARKer:FUNCtion:SFM[:RESult<m>]?....225
CALCulate<n>:MARKer<m>:AOFF....96
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:ANN:LAB:STAT....92
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:COUNt?....97
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE....93
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT....97
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STAT....93
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:X....97
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:Y?....98
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown....98
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:FREQuency?....99
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:QFACtor....100

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:RESult?....100
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:STATe....100
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:TIME?....101
CALCulate<n>:MARKer<m>:FUNCtion:PNOise....93
CALCulate<n>:MARKer<m>:FUNCtion:PNOise:RESult?....92
CALCulate<n>:MARKer<m>:FUNCtion:ZOOM....94
CALCulate<n>:MARKer<m>:LINK....94
CALCulate<n>:MARKer<m>:PEXCursion....101
CALCulate<n>:MARKer<m>:TRACe....102
CALCulate<n>:MARKer<m>:X....103
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT....103
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT....104
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]....104
CALCulate<n>:MARKer<m>:X:SSIZe....105
CALCulate<n>:MARKer<m>:Y?....105
CALCulate<n>:MARKer<m>[:STATe]....102
CALCulate<n>:THReshold....95
CALCulate<n>:THReshold:STATe....95
CALCulate<n>:UNIT:ANGLe....95
CALCulate<n>:UNIT:POWer....96
DIAGnostic<n>:SERVice:NSOurce....177
DISPlay:MTABle....106
DISPlay:WSELect?....112
DISPlay[:WINDow<n>]:SSELect?....107
DISPlay[:WINDow<n>]:STATe....107
DISPlay[:WINDow<n>]:TRACe<t>:MODE....108
DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous....110
DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing....112
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]....109
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE....109
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel....110
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet....111
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition....111
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue....111
DISPlay[:WINDow<n>]:TRACe<t>[:STATe]....109
DISPlay[:WINDow<n>][:SUBWindow<1|2>]:SELect....107
FORMat:DEXPort:DSEParator....177
FORMat[:DATA]....177
INITiate<n>:CONMeas....178
INITiate<n>:CONTinuous....178
INITiate<n>[:IMMediate]....179
INPut:ATTenuation....170
INPut:ATTenuation:AUTO....170
INPut:COUPling....171
INPut:DIQ:CDEVice....171
INPut:DIQ:RANGe:COUPling....172
INPut:DIQ:RANGe[:UPPer]....172
INPut:DIQ:RANGe[:UPPer]:UNIT....173

INPut:DIQ:SRATe....173
INPut:EATT....173
INPut:EATT:AUTO....174
INPut:GAIN:STATe....174
INPut:IMPedance....174
INPut:SELect....175
INSTrument:NSELect <Mode>....113
INSTrument[:SELect]....113
MMEMory:STORe<n>:LIST....175
MMEMory:STORe<n>:TRACe....176
OUTPut:DIQ....176
OUTPut:IF[:SOURce]....175
OUTPut:TRIGger....177
PROBe:ID:PARTnumber?....113
PROBe:ID:SRNumber?....113
PROBe:SETup:MODE....114
PROBe:SETup:NAME?....114
PROBe:SETup:STATe?....114
PROBe[:STATe]....114
SYSTem:DISPlay:UPDate....179
TRACe<n>[:DATA]?....154
TRIGger<n>[:SEQuence]:BBPower:HOLDoff....156
TRIGger<n>[:SEQuence]:HOLDoff[:TIME]....157
TRIGger<n>[:SEQuence]:IFPower:HOLDoff....157
TRIGger<n>[:SEQuence]:IFPower:HYSTeresis....157
TRIGger<n>[:SEQuence]:LEVel:AM:RELative....158
TRIGger<n>[:SEQuence]:LEVel:AM[:ABSolute]....158
TRIGger<n>[:SEQuence]:LEVel:BBPower....158
TRIGger<n>[:SEQuence]:LEVel:FM....159
TRIGger<n>[:SEQuence]:LEVel:IFPower....159
TRIGger<n>[:SEQuence]:LEVel:PM....160
TRIGger<n>[:SEQuence]:LEVel:RFPower....159
TRIGger<n>[:SEQuence]:LEVel:SFM:LEFT....237
TRIGger<n>[:SEQuence]:LEVel:SFM:MONO....238
TRIGger<n>[:SEQuence]:LEVel:SFM:MPX....238
TRIGger<n>[:SEQuence]:LEVel:SFM:PILot....239
TRIGger<n>[:SEQuence]:LEVel:SFM:RDS....239
TRIGger<n>[:SEQuence]:LEVel:SFM:RIGHt....238
TRIGger<n>[:SEQuence]:LEVel:SFM:STEReo....239
TRIGger<n>[:SEQuence]:LEVel:VIDeo....160
TRIGger<n>[:SEQuence]:SLOPe....161
TRIGger<n>[:SEQuence]:SOURce....161
TRIGger<n>[:SEQuence]:SOURce....240
TRIGger<n>[:SEQuence]:TIME:RINTerval....160
UNIT:ADEV....242
UNIT:ANGLe....163
UNIT:ANGLe....242
UNIT:POWer....163

UNIT:POWer....242
UNIT:RDEV....243
UNIT:THD....163
UNIT:THD....243
[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESult?....124
[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE]....123
[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult?....122
[SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE]....121
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult?....120
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE]....121
[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation....125
[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation:TYPE....125
[SENSe:]ADEMod:FM:AFSPectrum:RESult....127
[SENSe:]ADEMod:FM:AFSPectrum[:TYPE]....127
[SENSe:]ADEMod:FM:OFFSet....128
[SENSe:]ADEMod:FM[:TDOMain]:RESult....126
[SENSe:]ADEMod:FM[:TDOMain][:TYPE]....125
[SENSe:]ADEMod:MTIMe....129
[SENSe:]ADEMod:PM:AFSPectrum:RESult....132
[SENSe:]ADEMod:PM:AFSPectrum[:TYPE]....131
[SENSe:]ADEMod:PM:RPOint[:X]....133
[SENSe:]ADEMod:PM[:TDOMain]:RESult....130
[SENSe:]ADEMod:PM[:TDOMain][:TYPE]....129
[SENSe:]ADEMod:RLENgth?....134
[SENSe:]ADEMod:SET....134
[SENSe:]ADEMod:SPECtrum:BANDwidth|BWIDth[:RESolution]....135
[SENSe:]ADEMod:SPECtrum:RESult....136
[SENSe:]ADEMod:SPECtrum:SPAN:ZOOM....138
[SENSe:]ADEMod:SPECtrum:SPAN[:MAXimum]....137
[SENSe:]ADEMod:SPECtrum[:TYPE]....135
[SENSe:]ADEMod:SQUelch:LEVel....138
[SENSe:]ADEMod:SQUelch[:STATe]....138
[SENSe:]ADEMod:SRATe?....139
[SENSe:]ADEMod<n>:AF:CENTer....117
[SENSe:]ADEMod<n>:AF:COUPling....118
[SENSe:]ADEMod<n>:AF:SPAN....118
[SENSe:]ADEMod<n>:AF:SPAN:FULL....118
[SENSe:]ADEMod<n>:AF:STARt....119
[SENSe:]ADEMod<n>:AF:STOP....119
[SENSe:]ADEMod<n>:ZOOM:LENGth....140
[SENSe:]ADEMod<n>:ZOOM:LENGth:MODE....140
[SENSe:]ADEMod<n>:ZOOM:STARt....139
[SENSe:]ADEMod<n>:ZOOM[:STATe]....139
[SENSe:]ADEMod[:STATe]....117
[SENSe:]ADJust:ALL....141
[SENSe:]ADJust:CONFiguration:HYSTeresis:LOWer....141
[SENSe:]ADJust:CONFiguration:HYSTeresis:UPPer....141
[SENSe:]ADJust:CONFigure:LEVel:DURation....142

[SENSe:]ADJust:FREQuency....142
[SENSe:]ADJust:LEVel....142
[SENSe:]ADJust:SCALe:Y:AUTO[:CONTinuous]....142
[SENSe:]AVERage<n>:COUNt....152
[SENSe:]AVERage<n>:TYPE....153
[SENSe:]BANDwidth:DEMod:TYPE....143
[SENSe:]BANDwidth|BWIDth:DEMod....143
[SENSe:]FILTer<n>:AOFF....144
[SENSe:]FILTer<n>:AWEighted[:STATe]....144
[SENSe:]FILTer<n>:CCIR:WEIGhted[:STATe]....145
[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe]....145
[SENSe:]FILTer<n>:CCIT....145
[SENSe:]FILTer<n>:DEMPhasis:TCONstant....146
[SENSe:]FILTer<n>:DEMPhasis[:STATe]....146
[SENSe:]FILTer<n>:HPASs:FREQuency....147
[SENSe:]FILTer<n>:HPASs[:STATe]....146
[SENSe:]FILTer<n>:LPASs:FREQuency:RELative....148
[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute]....147
[SENSe:]FILTer<n>:LPASs[:STATe]....147
[SENSe:]FREQuency:CENTer....148
[SENSe:]FREQuency:CENTer:STEP....149
[SENSe:]FREQuency:CENTer:STEP:LINK....149
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor....149
[SENSe:]SFM:<ChannelType>:AFSPectrum:RESult?....229
[SENSe:]SFM:<ChannelType>:AFSPectrum:TYPE....228
[SENSe:]SFM:<ChannelType>:FILTer:AWEighted[:STATe]....229
[SENSe:]SFM:<ChannelType>:FILTer:CCIR:WEIGhted[:STATe]....230
[SENSe:]SFM:<ChannelType>:FILTer:CCIR[:UNWeighted][:STATe]....230
[SENSe:]SFM:<ChannelType>:FILTer:CCITt:STATe....230
[SENSe:]SFM:<ChannelType>:FILTer:COUPling....231
[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:STATe....231
[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:TCONstant....231
[SENSe:]SFM:<ChannelType>:FILTer:HPASs:FREQuency....232
[SENSe:]SFM:<ChannelType>:FILTer:HPASs:STATe....232
[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency....233
[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency:RELative....234
[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency[:ABSolute]....233
[SENSe:]SFM:<ChannelType>:FILTer:LPASs:STATe....232
[SENSe:]SFM:<ChannelType>:RSUMmary:COUPling....234
[SENSe:]SFM:<ChannelType>:RSUMmary:DETector[:FUNCtion]....234
[SENSe:]SFM:<ChannelType>:RSUMmary:MODE....235
[SENSe:]SFM:<ChannelType>:RSUMmary:REFerence[:AUTO] ONCE....236
[SENSe:]SFM:<ChannelType>:TDOmain:RESult?....236
[SENSe:]SFM:<ChannelType>:TDOmain:TYPE....237
[SENSe:]SFM:FILTer<n>:AOFF....227
[SENSe:]SFM:REFerence....228
[SENSe:]SFM:STATe....227
[SENSe:]SWEep:COUNt....150

[SENSe:]SWEep:EGATe:HOLDoff....150
[SENSe:]SWEep:EGATe:POLarity....150
[SENSe:]SWEep:EGATe:SOURce....151
[SENSe:]SWEep:EGATe:TYPE....151
[SENSe:]SWEep:POINts....152
[SENSe:]SWEep:TIME....152
[SENSe:][WINDow:]DETector<trace>[:FUNCtion]....153
[SENSe:][WINDow:]DETector<trace>[:FUNCtion]:AUTO....153

Index

A

Abs. Dev Unit
softkey 34, 195, 200, 201
Active probes
Activating 76
AF Auto Scale
softkey 49
AF diagram 27
K7 185
AF Full Span
softkey 41
AF Spectrum (analog demodulation) 21
AF Time Domain (analog demodulation) 21
AF trigger (K7) 16
All AF Filter Off
softkey 32, 53, 193, 207
AM
softkey 63
Amplitude menu
analog demodulation 41
K7 198
analog demodulation 10
AF trigger (K7) 16
bandwidth (K7) 13
circuit description (K7) 11
measurement results (analog demodulation) 17
measurement time (analog demodulation) 18
sample rate (analog demodulation) 18
trigger offset (analog demodulation) 18
Analog Demodulation menu (K7) 10, 25
ASCII Trace export 23
attenuation
(option B25) 46, 202
Attenuation
(option B25) 45, 202
Automatic 45, 202
Manual 45, 170, 201
Option B25 ..... 45, 201
Auto level
Hysteresis 49
Auto Peak detector 17
Auto Set menu 47
Average detector 17
Average trace mode 16, 56
A Weighted
Softkey 31, 52, 192, 206

B

bandwidth
resolution (analog demodulation) 50, 204
Bandwidth menu
analog demodulation 49
K7S 203
Blank trace mode 16, 57

C

CCIR
Softkey 31, 52, 192, 206
CCIT
Softkey 30, 52, 192, 206
Center frequency 38
Characters
Special 82, 221
Clear Write trace mode 15, 56
Commands
Description 81, 220
Continuous sweep 54
Coupled
Result Summary Setup (K7S) 189, 193

D

Demod Filter
Gaussian 53
softkey 53
demodulation bandwidth (K7) 13
detector
overview 17
Detector
Auto Peak 58
Autoselect 57
Average 59
CISPR Average 59
K7S 189
Negative Peak 58
Positive Peak 58
Quasi Peak 59
RMS 58
RMS Average 59
Sample 58
Diff.Freq. Distortion
remote control 223
softkey 214
Diff.Freq.Distortion (On/Off)
softkey 215
DigIConf
Softkey 78
Digital IQ data
device 76
Digital IQ Info
Remote control 171
Softkey 78
display configuration
analog demodulation 20
K7 185
K7S 181
Display configuration 27
display range
level 42, 43, 44
Display range
Frequency 38

E

Electronic input attenuation
FSV-B25 173
EX-IQ-BOX 77
DigIConf 78
export format 23
External Mixer (B21)
softkey 75
external noise source 75
external trigger 62, 208

F

Filters
A Weighted ... 31, 52, 192, 206
fixed reference ... 70, 213
FM
softkey ... 63
FM Stereo ... 180
FM Stereo menu (K7) ... 180
Frequency
Center ... 38
Frequency menu
analog demodulation ... 38
Full Scale Level
Digital I/Q Interface (remote control) ... 172
Digital IQ ... 76

H

Hysteresis
Lower (Auto level) ... 49
Upper (Auto level) ... 49

I

IEC/IEEE bus
Command description ... 81, 220
Impedance
Input ... 47, 203
Input/Output menu ... 74
Input sample rate
Digital IQ ... 76
Intermod. Distortion
softkey ... 215, 224
Intermod.Distortion (On/Off)
softkey ... 216

K

key
MEAS CONFIG (K7) ... 26

L

Left
softkey ... 185, 209
level
display range ... 42, 43, 44
range ... 42, 43, 44
Level
Reference ... 42, 198
Level Unit
Digital I/Q Interface (remote control) ... 173
Digital IQ ... 77
line
threshold ... 73, 218
Lower-case (commands) ... 82, 221
Lower Level Hysteresis
Softkey ... 49

M

Marker
Zoom ... 69
Marker menu
analog demodulation ... 65
Marker Number
softkey ... 74, 219
Marker Peak List
Activating/Deactivating ... 72, 217
Configuring ... 72, 217
Number display ... 74, 219
Number of entries ... 72, 218
Markers
Set to trace ... 66
Marker Wizard
softkey ... 66
Max Hold trace mode ... 15, 56
Max Peak Count
softkey ... 72, 218
MEAS CONFIG key
K7 ... 26
Meas To Ref
Result Summary Setup (K7S) ... 190
menu
Amplitude (analog demodulation) ... 41
Amplitude (K7) ... 198
Analog Demodulation (K7) ... 10, 25
Auto Set (analog demodulation) ... 47
Bandwidth (analog demodulation) ... 49
Bandwidth (K7S) ... 203
FM Stereo (K7) ... 180
Frequency (analog demodulation) ... 38
Input/Output ... 74
Marker (analog demodulation) ... 65
Measurement (K7) ... 25
Span (analog demodulation) ... 40
Sweep (analog demodulation) ... 54
Trigger (analog demodulation) ... 61
Trigger (K7S) ... 207
Min Hold trace mode ... 15, 56
Mode
Result Summary (K7S) ... 189
Mono
softkey ... 197, 210
More Traces
softkey ... 59
MPX
softkey ... 197, 210

N

n dB down
marker function ... 71, 216
Negative Peak detector ... 17
noise
source, external ... 75

O

offset
reference level ... 46, 203
Offset
Trigger ... 211
Online help
Working with ... 8
options
Analog Demodulation (K7) ... 10
FM Stereo (K7) ... 180
Options
FSV-B25 ... 45, 173, 201
RF Preamplifier (B22) ... 44, 201
Overwrite mode ... 15, 56

P

Peak List On/Off
softkey 72, 217
Ph. Noise Auto Peak Search
remote control 166
Pilo
softkey 197
Pilot
softkey 210
PM
softkey 63
polarity
external trigger 64, 211
trigger edge 64, 211
Positive Peak detector 17
Preamplifier (B22) 44, 201
pre-trigger 64, 211
Probes
Activating 76
Configuration (Softkey) 76

R

R&S Digital I/Q Interface (B17) 78, 171, 176
R&S Support
softkey 77
RDS
softkey 197, 210
reference
fixed 70, 213
Reference Deviation
K7S 188
reference level
offset 46, 203
Reference level 42, 198
Reference Level
Digital IQ 77
reference point
frequency 71, 213
level 71, 213
peak search 71, 214
time 71, 213
Repetition interval
Time trigger 65, 212
resolution bandwidth
analog demodulation 50, 204
Result Display
analog demodulation 20
K7S 181
Result Summary Setup
softkey 188
RF
softkey 63, 210
RF diagram 27
K7 185
RF Power trigger 62, 208
RF Preamplifier (B22) 44, 201
RF Spectrum (analog demodulation) 21
RF Spectrum (K7) 182
RF Time Domain (analog demodulation) 21
RF Time Domain (K7S) 182
Right
softkey 197, 210
RMS
VBW 18
RMS detector 17
RX Settings
softkey 77

S

Sample detector 17
Sample rate
Digital I/Q Interface (remote control) 173
Digital IQ 76
scaling
level axis 46
SCPI
Conformity information 81, 220
Search Signals
remote control 225
softkey 215, 216
Signal Source
I/Q Analyzer 76
Remote control 175
Softkey 76
softkey
0.1 * RBW (remote control) 149
0.1 * Span (remote control) 149
0.5 * RBW (remote control) 149
0.5 * Span (remote control) 149
= Center 39
Abs Dev. Unit (K7S, remote control) 242, 243
AF Center (analog demodulation) 40
AF Center (remote control, analog demodulation) 117
AF Coupling AC/DC (K7) 33, 194, 199
AF Coupling AC/DC (remote control, analog demodulation) 118
AF Filter (K7s) 190
AF Full Span (analog demodulation) 41
AF Full Span (remote control, analog demodulation) 118
AF Range (K7s) 32, 194, 199
AF Span Manua (remote control, analog demodulation) 118
AF Span Manual (analog demodulation) 41
AF Start (analog demodulation) 40
AF Start (remote control, analog demodulation) 119
AF Stop (analog demodulation) 40
AF Stop (remote control, analog demodulation) 119
All AF Filter OFF (remote control, analog demodulation) 144, 227
All Marker Off 67, 68
AM/FM/PM/RF (remote control, analog demodulation) 89
AM (K7) 26
ASCII File Export 73, 218
ASCII File Export (remote control) 175
ASCII Trace Export 61
Auto All 48
Average Mode (remote control) 153
A Weighted (remote control) 229
CF Stepsize (remote control) 149
Continue Single Sweep (remote control) 178, 179
Continuous Sweep (remote control) 179

Cont Meas (remote control) 179
Decim Sep 61, 74, 219
Deemphasis (remote control, analog demodulation) 146
Demod BW (analog demodulation) 29, 41, 50
Demod BW (remote control, analog demodulation) 143
Demod Filter 53
Demod Filter (remote control) 125, 143
Detector Auto Select (remote control) 153
Detector Manual Select (remote control) 153
Deviation Lin/Log (K7) 33, 195, 200
Deviation Lin/Log (remote control) 112
Dev per Division (K7) 32, 194, 199
Display Config (K7) 185
Display Config (remote control, analog demodulation) ... 89
Display Config (remote control) 107
EI Atten Mode (Auto/Man) 46, 202
External 62, 208
FM (K7) 35
Free Run 62, 208
Full Span (analog demodulation) 41
Full Span (remote control, K7) 138
Gate Delay (remote control) 150
Gated Trigger (remote control) 151
Gate Mode Lvl/Edge (remote control) 151
Grid Abs/Rel 46
Grid Abs/Rel (remote control) 109
High Pass AF Filter (analog demodulation) 29, 50, 190, 204
High Pass AF Filter (remote control, analog demodulation) 146, 147
IF Output IF/Video (remote control) 175
IF Power 63, 209
Input 50 W/75 W (remote control) 174
Left Limit 73, 218
Left Limit (remote control) 103
Length Auto (K7) 35, 196
Length Auto (remote control, analog demodulation) 140
Length Manual (K7) 34, 196
Length Manual (remote control, analog demodulation) ... 140
Limits On/Off (remote control) 104
Lin 60
Link AF Spectrum Marker 69
Link AF Spectrum Marker (remote control) 94
Link Mkr1 and Delta1 69
Link Mrk1 and Delta1 (remote control) 167
Link Time Marker 69
Link Time Marker (remote control) 94
Low Pass AF Filter (remote control, analog demodulation) 147, 148, 233, 234
Manual 40
Manual (remote control) 149
Marker 1, Marker 2 …16 66
Marker 1 (remote control) 167
Marker 1-16 66
Marker 1 to 4 (remote control) 102, 103, 168
Marker 2 (remote control) 167
Marker 3 (remote control) 167
Marker 4 (remote control) 167
Marker Norm/Delta 66
Marker Norm/Delta (remote control) 167
Marker Stepsize 68
Marker Stepsize (remote control) 105
Marker Table (Off/On/Aut) (remote control) 106
Marker Table (On/Off) 68
Marker to Trace (remote control) 167, 168
Marker Wizard 66
Marker Zoom (remote control) 94
Meas Time Auto 49
Meas Time Manual 49, 142
More Markers 66
n dB down 71, 216
n dB down (remote control) 98, 99, 100, 101
Noise Source 75
Noise Src On/Off (remote control) 177
Peak Excursion 73, 218
Peak Excursion (remote control) 101
Peak Search 71, 214
Peak Search (remote control) 97, 98, 164
Phase Noise 70
Phase Noise (remote control, analog demodulation) 93
Phase Unit Rad/Deg (K7) 34, 44, 195, 200, 201
Phase Wrap On/Off (K7) 37
Phase Wrap On/Off (remote control, analog demodulation) 91
Ph Noise/Ref Fixed (remote control) 165, 166
Ph Noise On/Off (remote control) 165, 166
PM (K7) 36
Power 60
Power Sensor 74
R&S Support 77
Range Lin. Unit 44
Range Lin. Unit (remote control) 112
Range Linear % 44
Range Linear % (remote control) 112
Range Log (remote control) 109, 112
Range Log 100 dB 42
Range Log 10 dB 43
Range Log 1 dB 43
Range Log 50 dB 43
Range Log 5 dB 43
Range Log Manual 44
Reference Fixed On/Off 70, 213
Reference Position (K7) 32, 194, 199
Reference Position (remote control) 111
Reference Value (K7) 33, 194, 199
Reference Value (remote control, analog demodulation) 111
Ref Fixed 70, 213
Ref Level Offset 46, 203
Ref Level Offset (remote control) 111
Ref Level Position 46
Ref Level Position (remote control) 111
Ref Point Frequency 71, 213
Ref Point Frequency (remote control) 164
Ref Point Level 71, 213
Ref Point Level (remote control) 165
Ref Point Time (remote control) 164
Ref Value Position (remote control) 111
Res BW (analog demodulation) 50, 204
Res BW (remote control, K7) 135
RF Power(K7) 37
Right Limit 73, 218
Right Limit (remote control) 104
Save Evaluation List (remote control) 175
Search Limits (remote control) 104
Search Lim Off (remote control) 95, 104
Select 1 2 3 4 (remote control) 102
Select Marker (No) 70, 213

Select Trace (K7) 28
Settings 48
Single Meas (remote control) 179
Single Sweep (remote control) 179
Sort Mode Freq/Lvl (remote control) 93, 97
Span Manual (analog demodulation) 40
Span Manual (remote control, K7) 138
Start (K7) 34, 196
Stepsize Standard 68
Stepsize Standard (remote control) 105
Stepsize Sweep Points 68
Stepsize Sweep Points (remote control) 105
Sweep Count 55
Sweep Points 55
Sweep Points (remote control) 152
THD Unit %/DB (K7) 34, 44, 195, 200, 201
THD Unit %/DB (remote control) 96, 163, 243
Threshold 73, 218
Threshold (remote control) 95
Trace 1 2 3 4 5 6 (remote control) 109
Trace Mode (remote control) 109
Tracking Generator 74
Trg/Gate Level (remote control) 160
Trg/Gate Polarity Pos/Neg (remote control) 150, 161
Trg/Gate Source (remote control) 151, 159
Trigger Holdoff (remote control) 157
Trigger Offset (analog demodulation) 64
Trigger Out (Low/High)(remote control) 177
Trigger Polarity 64, 211
Trigger Source (analog demodulation) 62
Trigger Source (K7S) 208
Trigger Source (remote control, K7) 240
Unit (K7s) 33, 195, 200, 201
Unit (remote control) 96, 163, 242
Unit %/DB (K7) 215, 216
Video Output 75
Weighting (remote control, analog demodulation) 144, 145
X * RBW (remote control) 149
X * Span (remote control) 149
Zero Phase Reference Point (K7) 37
Zero Phase Reference Point (remote control, K7) 133
Zoom (remote control, analog demodulation) 139

Softkey
AF Filter (analog demodulation) 29, 50, 204
Auto Freq 48
Auto Level 48
Average 16, 56
Average Mode 59
BB Power Retrigger Holdoff (remote control) 156
Blank 16, 57
Center 38
Center (remote control) 148
Clear Write 15, 56
Continue Single Sweep 54
Continuous Sweep 54
Continuous Sweep (remote control) 178
Cont Meas (remote control) 178
Decim Sep (remote control) 177
Deemphasis (analog demodulation) 31, 53, 193, 207
DigIConf 78
Display Config 27
EL Atten Mode (Auto/Man) (remote control) 173, 174
El Atten On/Off 45, 202
EX-IQ-BOX 77
IF Power Retrigger Holdoff (remote control) 157
IF Power Retrigger Hysteresis (remote control) 157
Input (AC/DC) 47, 74, 203
Input (AC/DC)(remote control) 171
Input 50 Ω/75 Ω 47, 203
Log 60
Low Pass AF Filter (analog demodulation) 29, 51, 191, 205
Marker 1 to 4 (remote control) 105, 169
Marker Number 74, 219
Marker Number (remote control) 92
Marker Peak List 72, 217
Marker to Trace 66
Marker to Trace (remote control) 102
Marker Zoom 69
Max Hold 15, 56
Max Peak Count 72, 218
May Peak Size (remote control) 93
Meas Time (analog demodulation) 29, 50, 55, 190, 204
Mech Atten Auto 45, 202
Mech Atten Auto (remote control) 170
Mech Atten Manual 45, 201
Mech Atten Manual (remote control) 170
Min Hold 15, 56
Peak List On/Off 72, 217
Preamp On/Off 44, 201
Preamp On/Off (remote control) 174
Ref Level 42, 198
Ref Level (remote control) 110
RF Atten Auto 45, 202
RF Atten Auto (remote control) 170
RF Atten Manual 45, 201
RF Atten Manual (remote control) 170
RF Power 62, 208
Save (remote control) 176
Select 1 2 3 4 (remote control) 105
Single Meas (remote control) 178
Single Sweep 54
Single Sweep (remote control) 178
Sort Mode Freq/Lvl 72, 217
Squelch 35, 196
Squelch (remote control) 138
Squelch Level 35, 197
State On / Off 34, 196
Sweep Count (remote control) 150
Time Domain Zoom (K7) 34, 196
Trace 1 55
Trace 2 55
Trace 3 55
Trace 4 55
Trace 5 55
Trace 6 55
Trace Mode (remote control) 108
Trg/Gate Source (remote control) 158, 159, 161
Trigger Holdoff 65, 212
Trigger Hysteresis 65, 212
Trigger Offset 211
Trigger Out 75
View 16, 57
Weighting AF Filter 30, 51, 191, 205

Softkeys
Autoselect ... 57
Detector Auto Peak ... 58
Detector Average ... 59
Detector CISPR Average ... 59
Detector Manual Select ... 57
Detector Negative Peak ... 58
Detector Positive Peak ... 58
Detector Quasi Peak ... 59
Detector RMS ... 58
Detector RMS Average ... 59
Detector Sample ... 58
Lower Level Hysteresis ... 49
Probe Config ... 76
Upper Level Hysteresis ... 49
Span menu
analog demodulation ... 40
Special characters ... 82, 221
Squelch
Remote control ... 138
Softkey ... 35, 196
Squelch Level
Softkey ... 35, 197
Stereo
softkey ... 197, 210
supply voltage, external noise source ... 75
sweep
count ... 55
Free Run ... 62, 208
Sweep
Continue single sweep ... 54
Continuous ... 54
Single ... 54
Sweep menu
analog demodulation ... 54

T

threshold
line ... 73, 218
Time
softkey ... 64, 210
Time per Division
softkey ... 196
Time trigger
Repetition interval ... 65, 212
Trace
Clear Write ... 15, 56
Trace mode ... 55
Average ... 16, 56
Blank ... 16, 57
Clear Write ... 15, 56
Max Hold ... 15, 56
Min Hold ... 15, 56
View ... 16, 57
trigger
external ... 62, 208
slope ... 64, 211
Trigger
Holdoff ... 65, 212
Hysteresis ... 65, 212
Level ... 64, 210
Offset ... 211
Trigger menu
analog demodulation ... 61
K7S ... 207
trigger mode
External ... 62, 208
Free Run ... 62, 208
IF power ... 63, 209
Trigger mode
RF power ... 62, 208
TX Settings
EX-IQ-BOX ... 77

U

Upper-case (commands) ... 82, 221
Upper Level Hysteresis
Softkey ... 49

V

VBW
RMS detector ... 18
View trace mode ... 16, 57

W

Weighting
Analog demodulation ... 30, 52, 192, 206

Z

Zoom ... 69
Amplitude ... 16, 57